


Position of Parts in Seat <RHD Front Seat From Sep. 2012 Production>

- * 1:w/ Calf Support
- * 2:w/o Calf Support
- * 3:w/ Pre-Crash Safty System
- * 4:w/o Pre-Crash Safty System

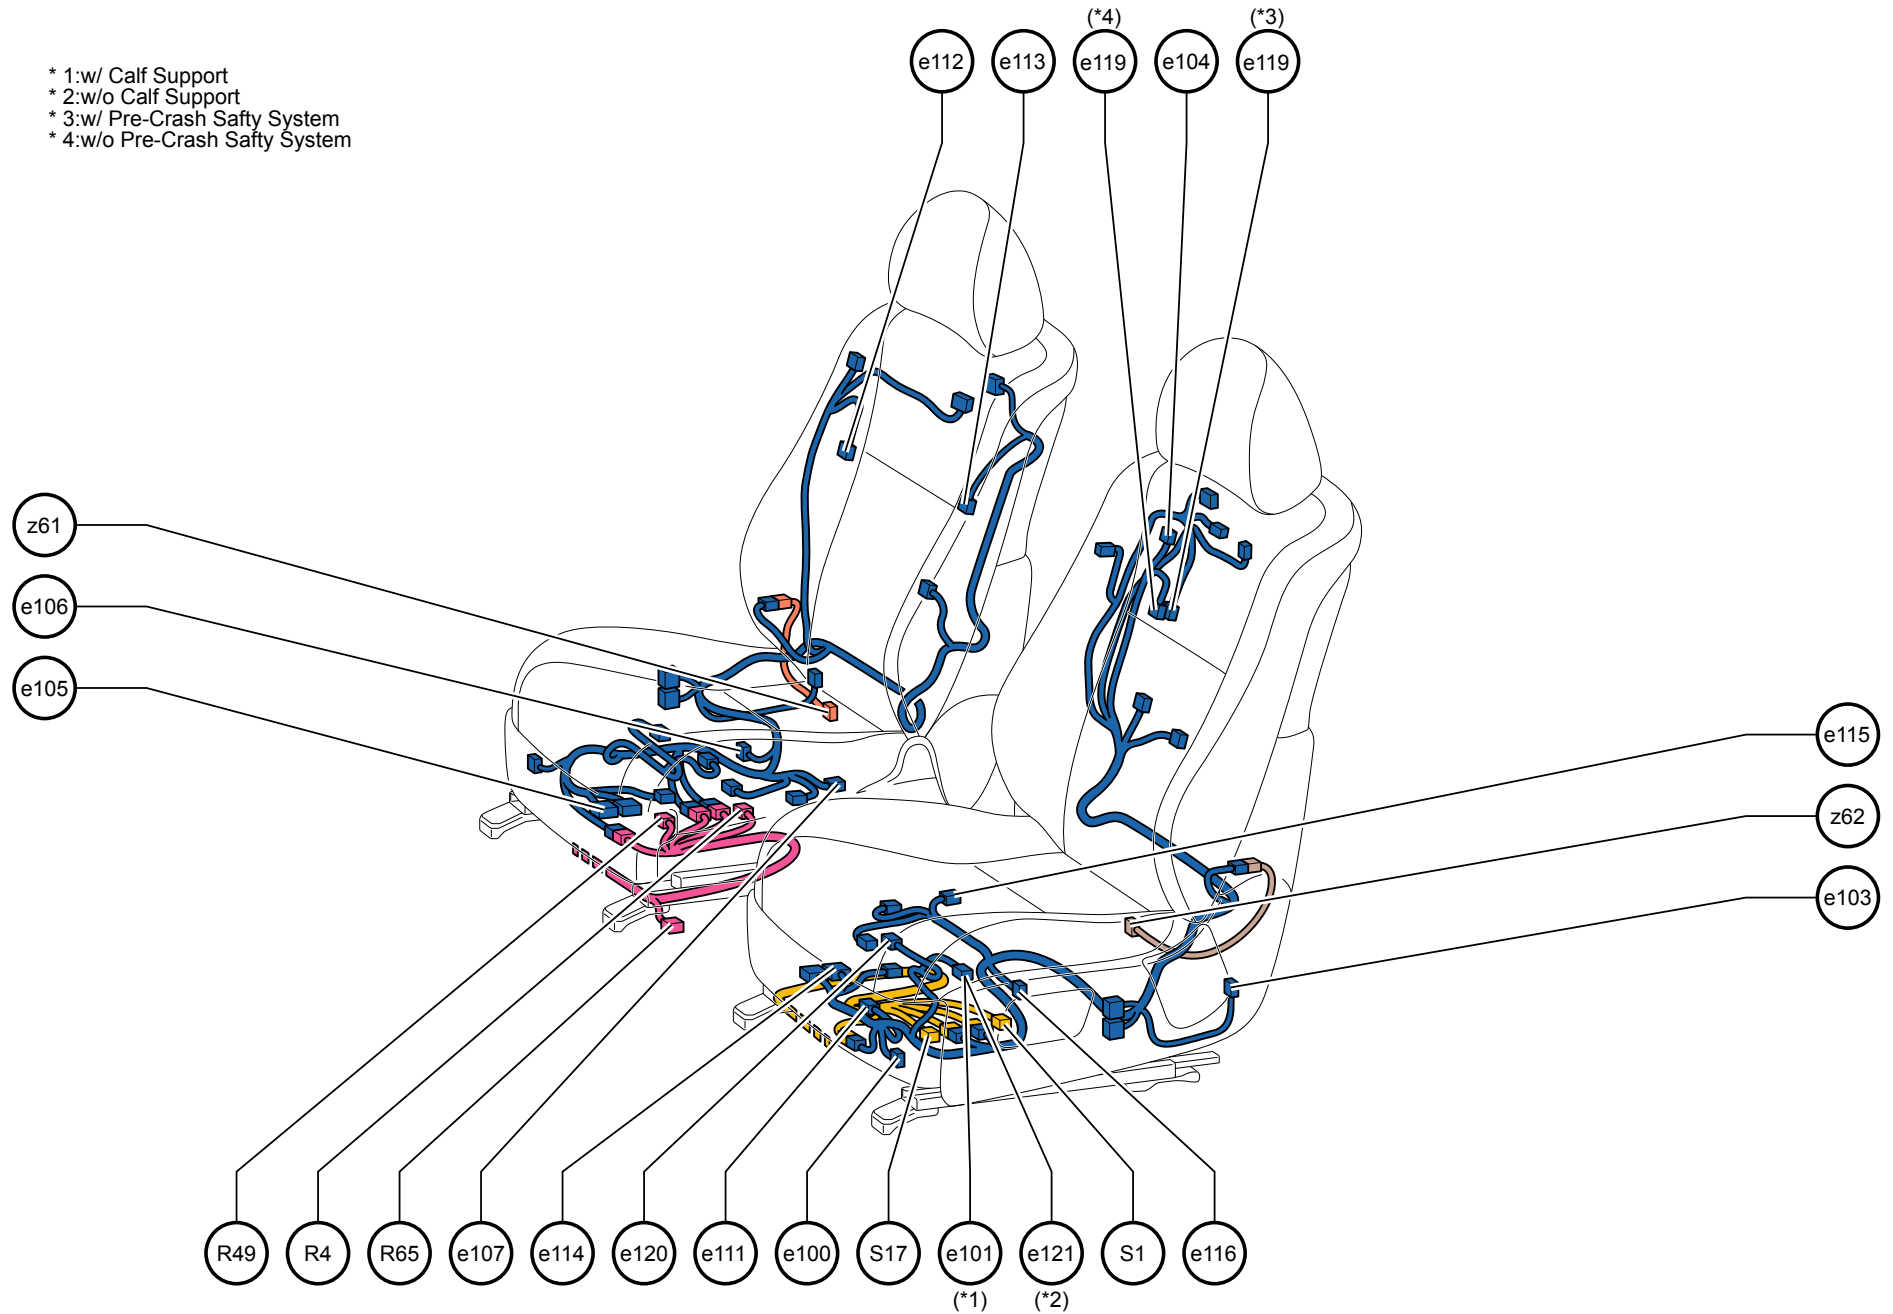

- R 4 Front Side Airbag Squib Circuit RH
- R 49 Front Seat Inner Belt Assembly RH
- R 65 Junction Connector

- S 1 Front Side Airbag Squib Circuit LH
- S 17 Front Seat Inner Belt Assembly LH

- e 100 Front Power Seat Slide Position Motor Assembly LH
- e 101 Front Power Seat Vertical Position Motor Assembly LH
- e 103 Front Power Seat Reclining Position Motor Assembly LH
- e 104 Active Headrest Airbag Squib Circuit LH
- e 105 Front Seat Climate Control ECU RH
- e 106 Front Power Seat Lift Position Motor Assembly RH
- e 107 Front Seat Heater RH
- e 111 Junction Terminal
- e 112 Front Lumbar Support Up and Down Motor Assembly RH
- e 113 Front Lumbar Support Forward and Back Motor Assembly RH
- e 114 Front Seat Climate Control ECU LH
- e 115 Front Seat Heater LH
- e 116 Front Power Seat Lift Position Sensor LH
- e 119 Front Lumbar Support Motor Assembly LH
- e 120 Front Power Seat Calf Support Motor LH
- e 121 Front Power Seat Vertical Position Sensor LH

- z 61 No.1 Interior Illumination Light Assembly RH
- z 62 No.1 Interior Illumination Light Assembly LH

Position of Parts in Seat <RHD Front Seat From Sep. 2012 Production>

