


Position of Parts in Instrument Panel <LHD Before Nov. 2009 Production>

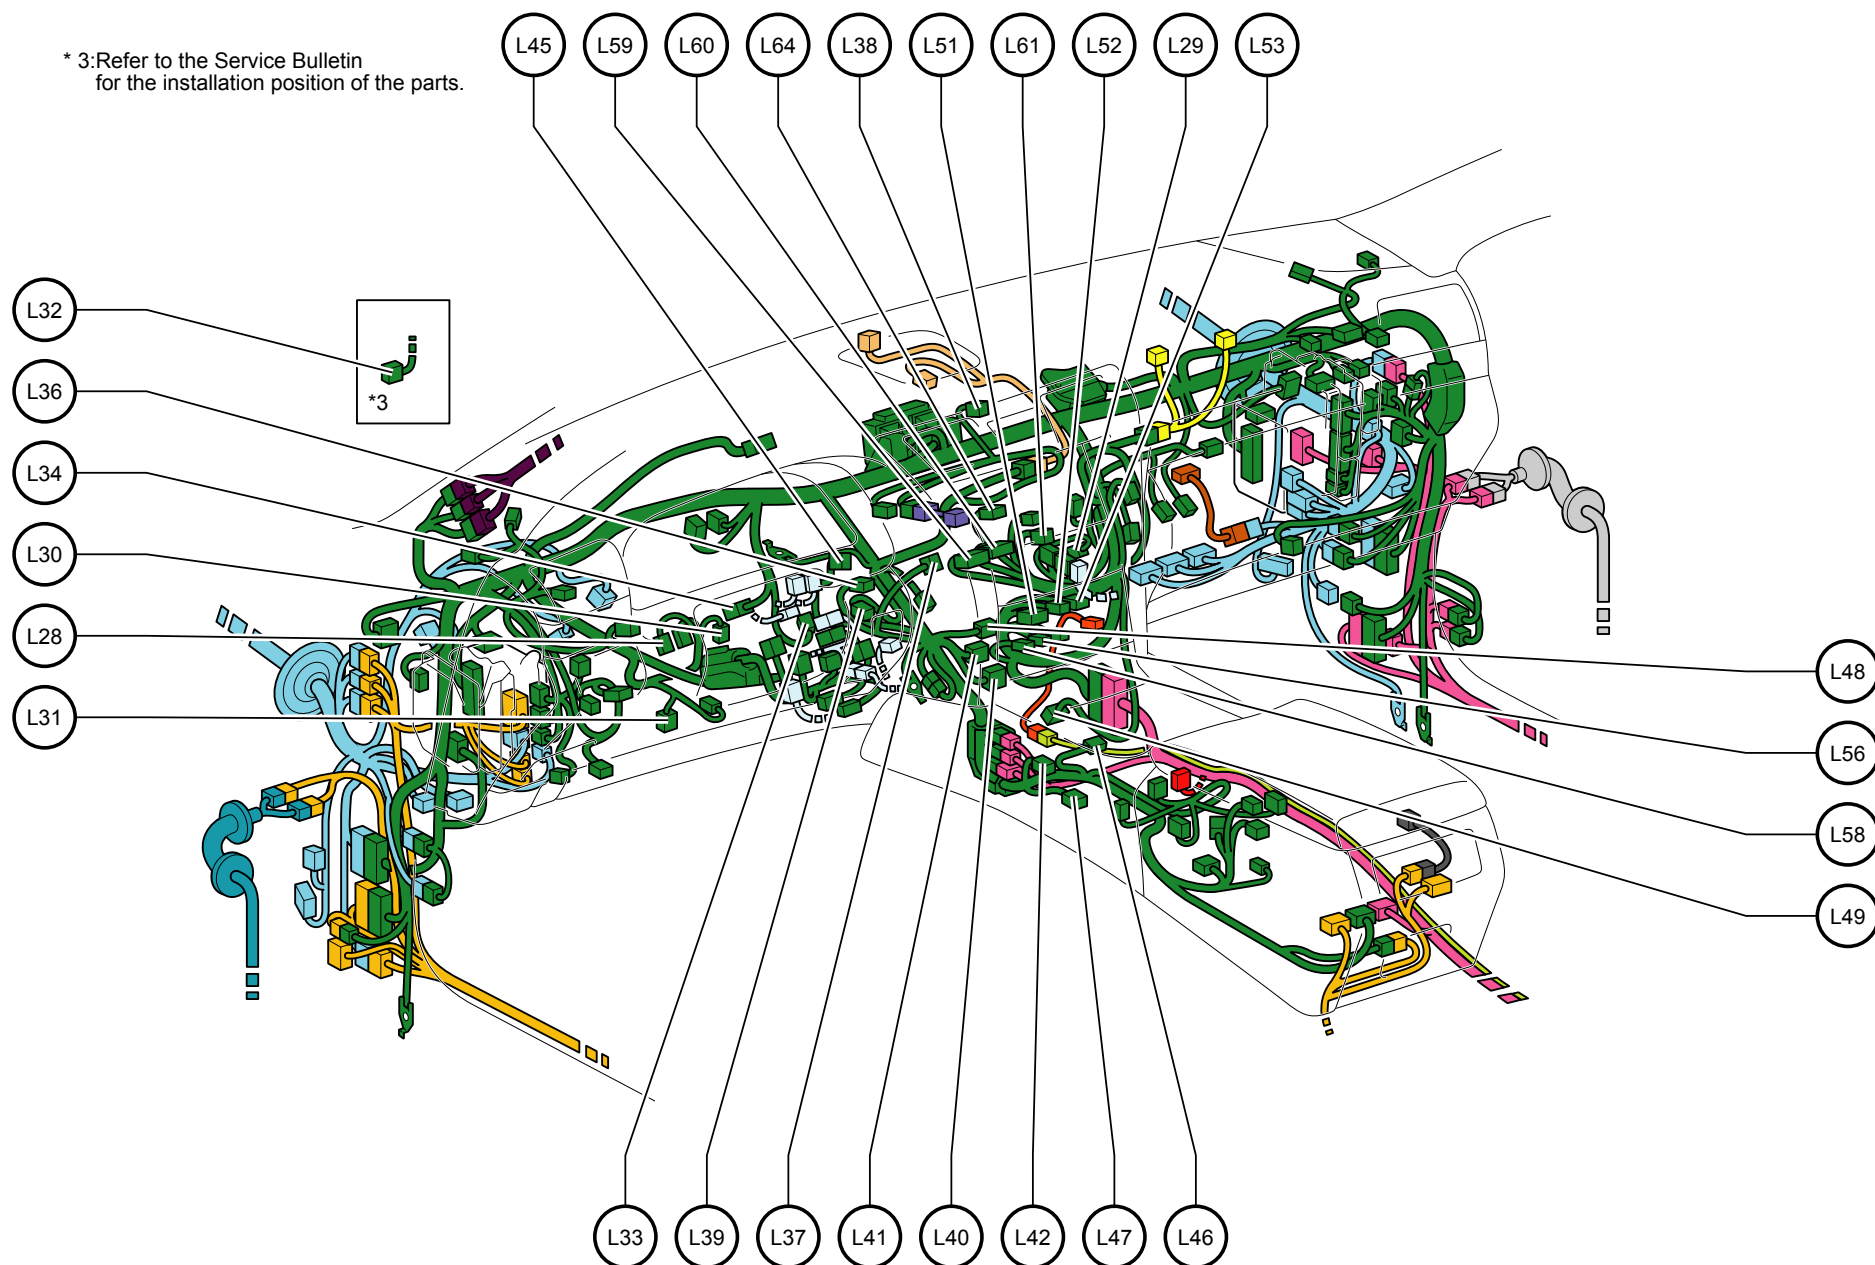

- L 28 Tire Pressure Warning Reset Switch
- L 29 No.1 Interior Illumination Light Assembly RH
- L 30 Wireless Door Lock Buzzer Controller
- L 31 DLC3
- L 32 ID Code Box
- L 33 Steering Lock Actuator Assembly
- L 34 Multiplex Tilt and Telescopic ECU
- L 36 Power Switch
- L 37 Front Room Temperature Sensor
- L 38 Clock Assembly
- L 39 Electric Parking Brake Switch Assembly
- L 40 Quick Heater Assembly
- L 41 Quick Heater Assembly
- L 42 Transmission Shift Switch
- L 45 Trip Switch
- L 46 Front Cigarette Lighter
- L 47 Shift Lock Control ECU
- L 48 No.1 Clearance Warning Buzzer
- L 49 Oxygen Sensor (Bank 2 Sensor 2)
- L 51 Radio Receiver Assembly
- L 52 Radio Receiver Assembly
- L 53 Radio Receiver Assembly
- L 56 Radio Receiver Assembly
- L 58 Amplifier Antenna Assembly
- L 59 Multi-Display Assembly
- L 60 Multi-Display Assembly
- L 61 Multi-Display Assembly
- L 64 Multi-Display Assembly

Position of Parts in Instrument Panel <LHD Before Nov. 2009 Production>

