


* 3: Refer to the Service Bulletin
for the installation position of the parts.

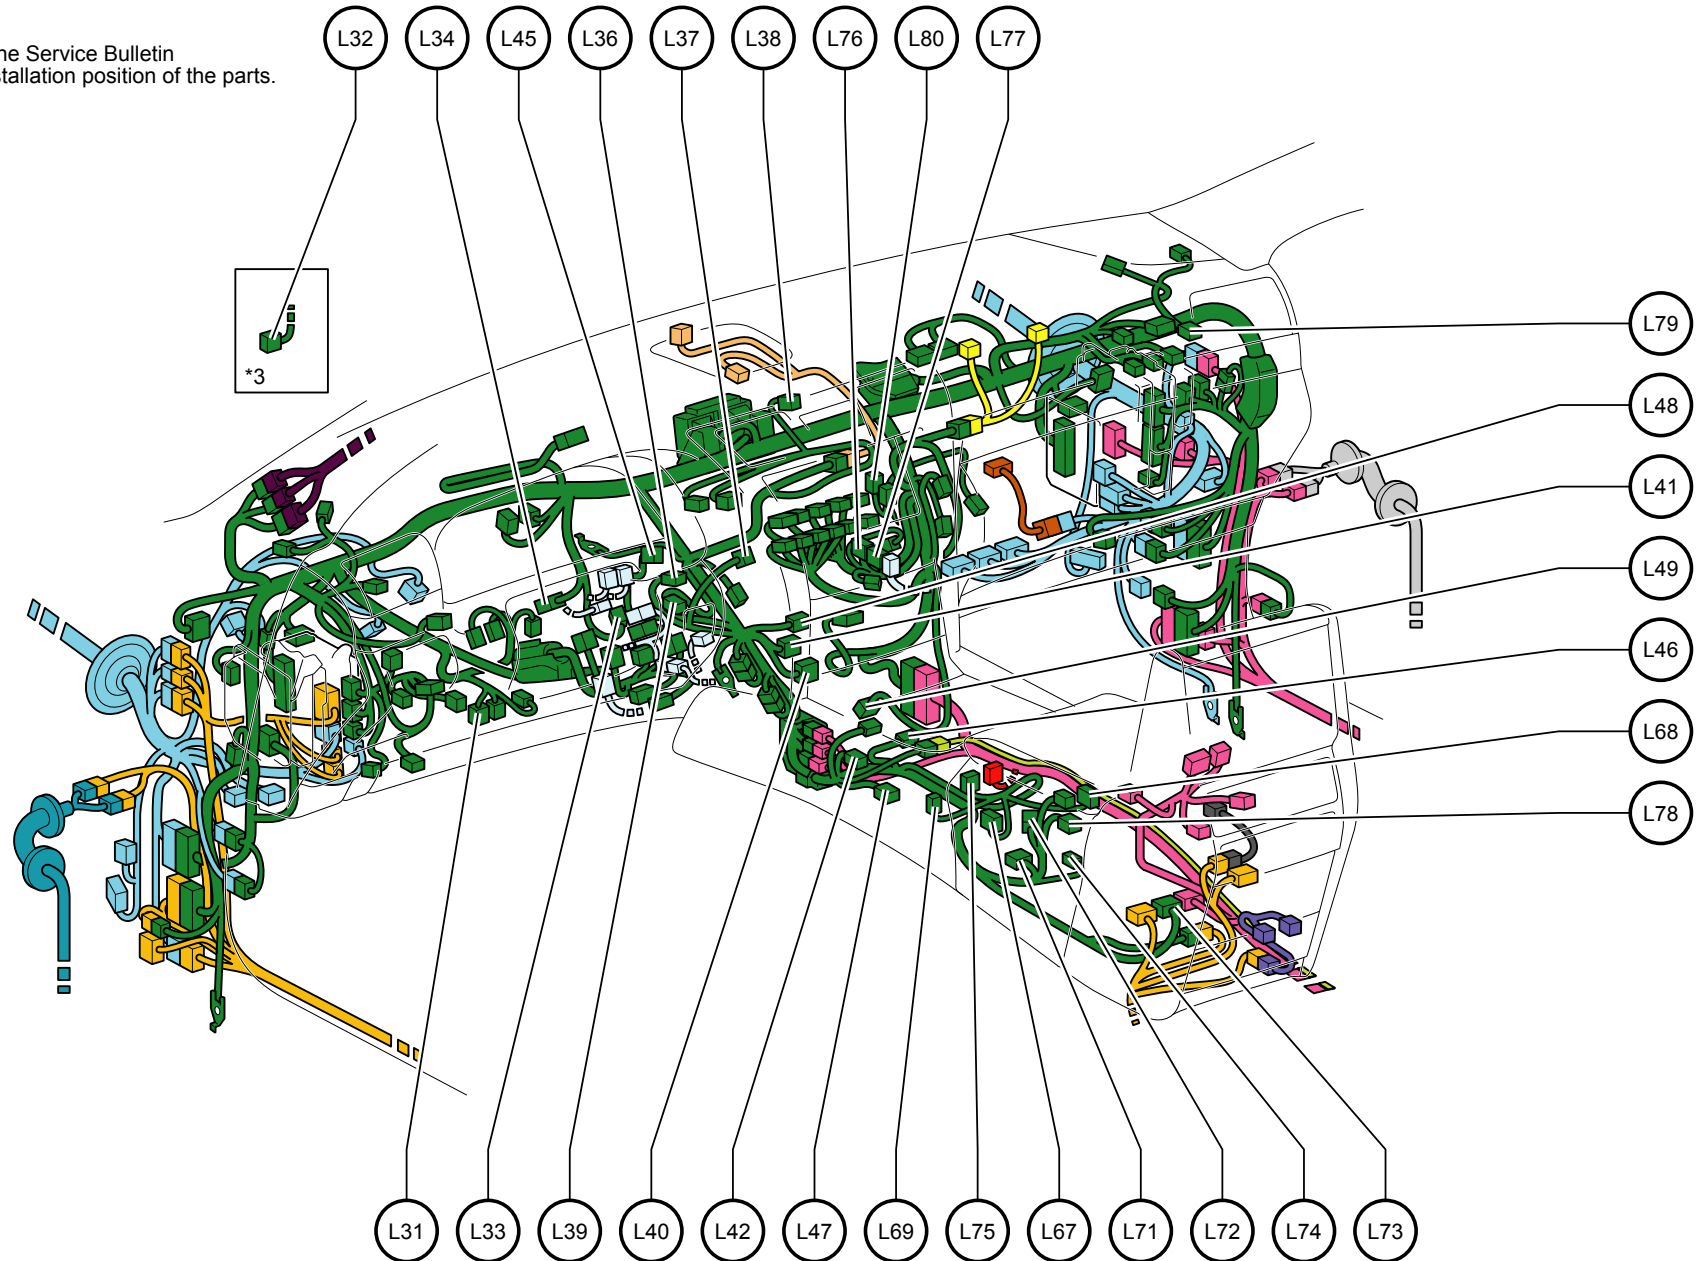

- L 31 DLC3
- L 32 ID Code Box
- L 33 Steering Lock Actuator Assembly
- L 34 Multiplex Tilt and Telescopic ECU
- L 36 Power Switch
- L 37 Front Room Temperature Sensor
- L 38 Clock Assembly
- L 39 Electric Parking Brake Switch Assembly
- L 40 Quick Heater Assembly
- L 41 Quick Heater Assembly
- L 42 Transmission Shift Switch
- L 45 Trip Switch
- L 46 Front Cigarette Lighter
- L 47 Shift Lock Control ECU
- L 48 No.1 Clearance Warning Buzzer
- L 49 Oxygen Sensor (Bank 2 Sensor 2)
- L 67 Front Seat Climate Control Switch LH
- L 68 Front Seat Climate Control Switch RH
- L 69 Shift Position Indicator
- L 71 Yaw Rate Sensor
- L 72 Power Outlet 12V Socket
- L 73 Airbag ECU Assembly
- L 74 Front Indoor Electrical Key Oscillator
- L 75 Combination Switch Assembly
- L 76 A/C Amplifier
- L 77 A/C Amplifier
- L 78 Video Adapter Terminal
- L 79 Front Passenger Side Front Register Illumination
- L 80 Glove Box Illumination Light

