


Position of Parts in Instrument Panel <RHD Before Nov. 2009 Production>

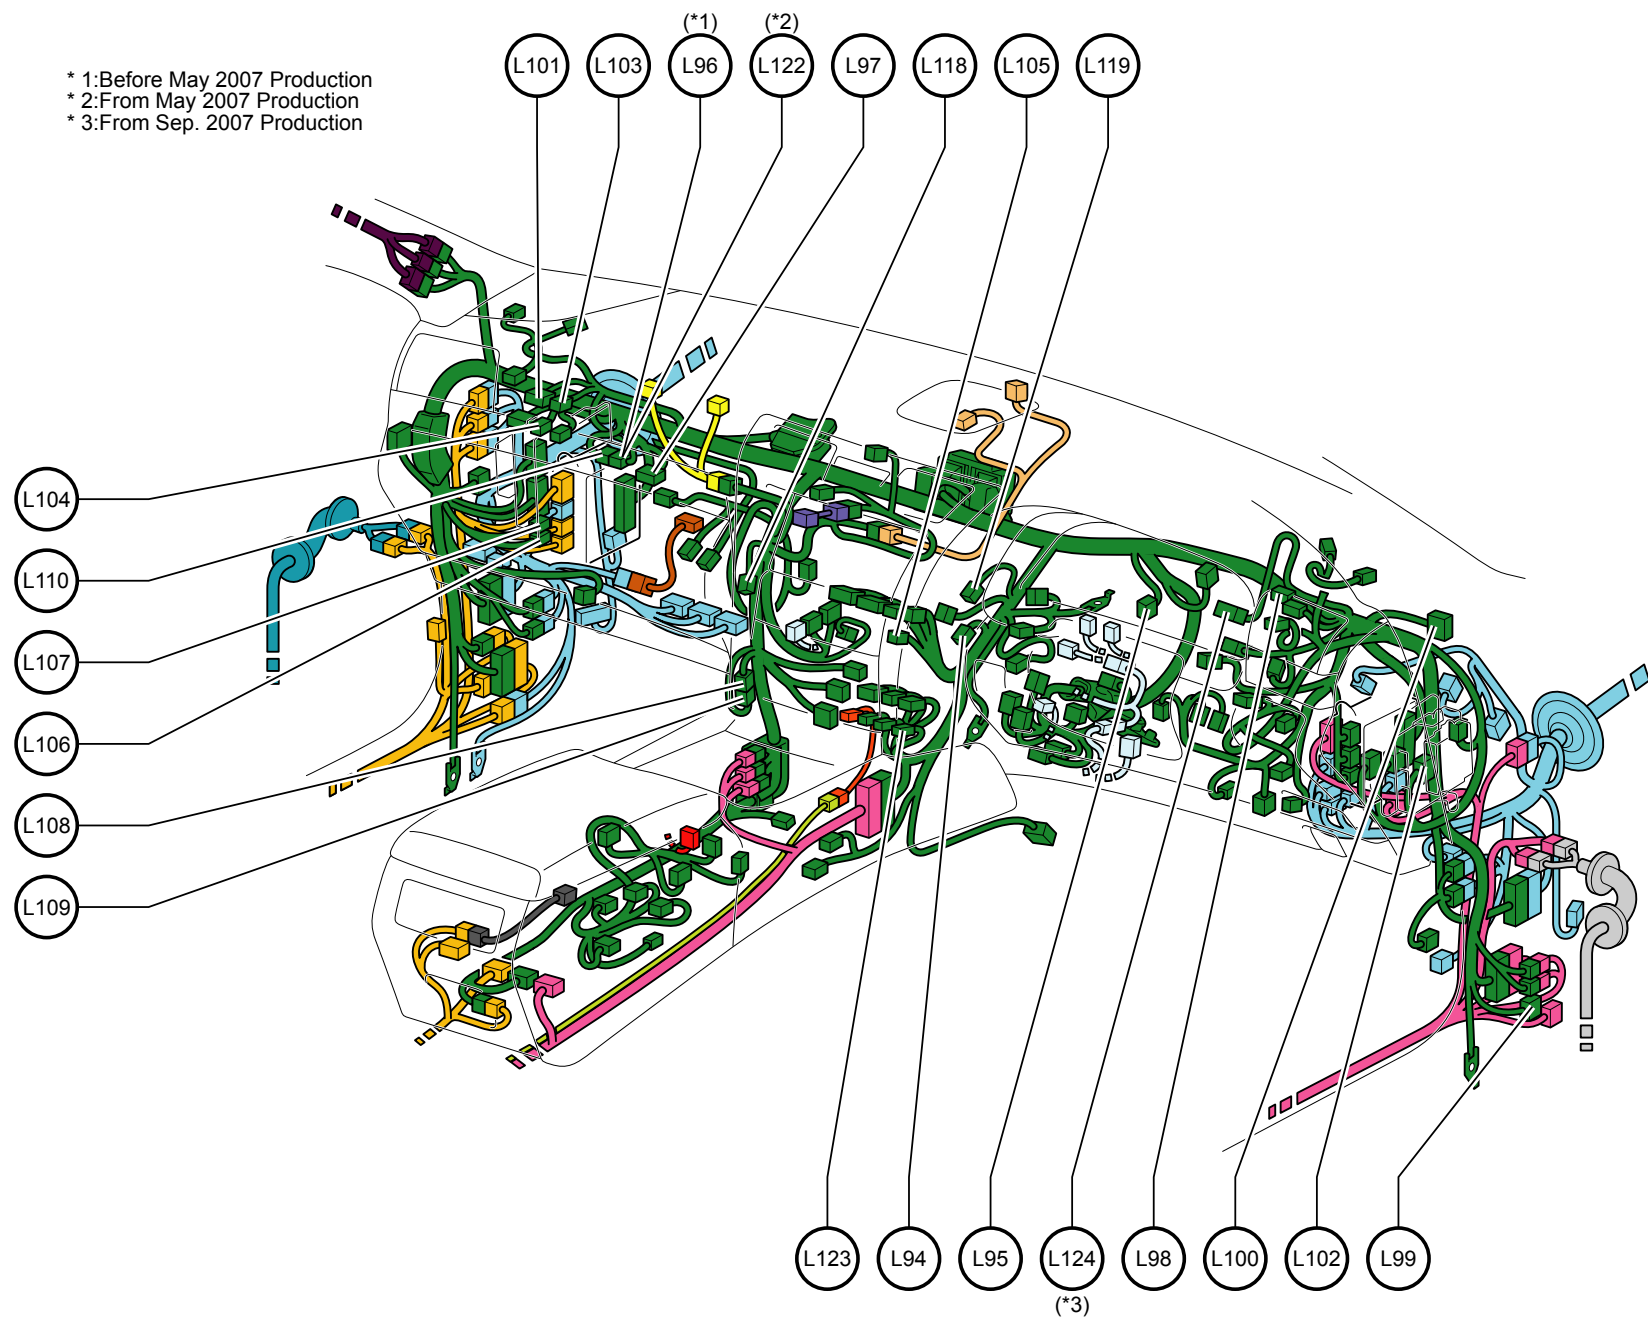

L 94	Junction Connector
L 95	Junction Connector
L 96	Junction Connector
L 97	Junction Connector
L 98	Junction Connector
L 99	Junction Connector
L 100	Junction Connector
L 101	Tire Pressure Warning ECU and Receiver
L 102	Network Gateway ECU
L 103	Tire Pressure Warning ECU and Receiver
L 104	Navigation ECU
L 105	Multi-Display Assembly
L 106	Parking Assist ECU
L 107	Parking Assist ECU
L 108	Short Connector (Cigarette Lighter)
L 109	Short Connector (Cigarette Lighter)
L 110	Junction Connector
L 118	Junction Connector
L 119	Junction Connector
L 122	Junction Connector
L 123	Radio Receiver Assembly
L 124	Combination Meter

Position of Parts in Instrument Panel <RHD Before Nov. 2009 Production>

