



 : Driver Side J/B	Cowl Side Panel LH (LHD)
	Cowl Side Panel RH (RHD)


- * 1:30A P/SEAT D NO.1
- * 2:30A DOOR R/L 2 (LHD)
30A DOOR R/R 2 (RHD)
- * 3:30A P/SEAT D NO.2
- * 4:30A S/ROOF NO.1 (LHD)

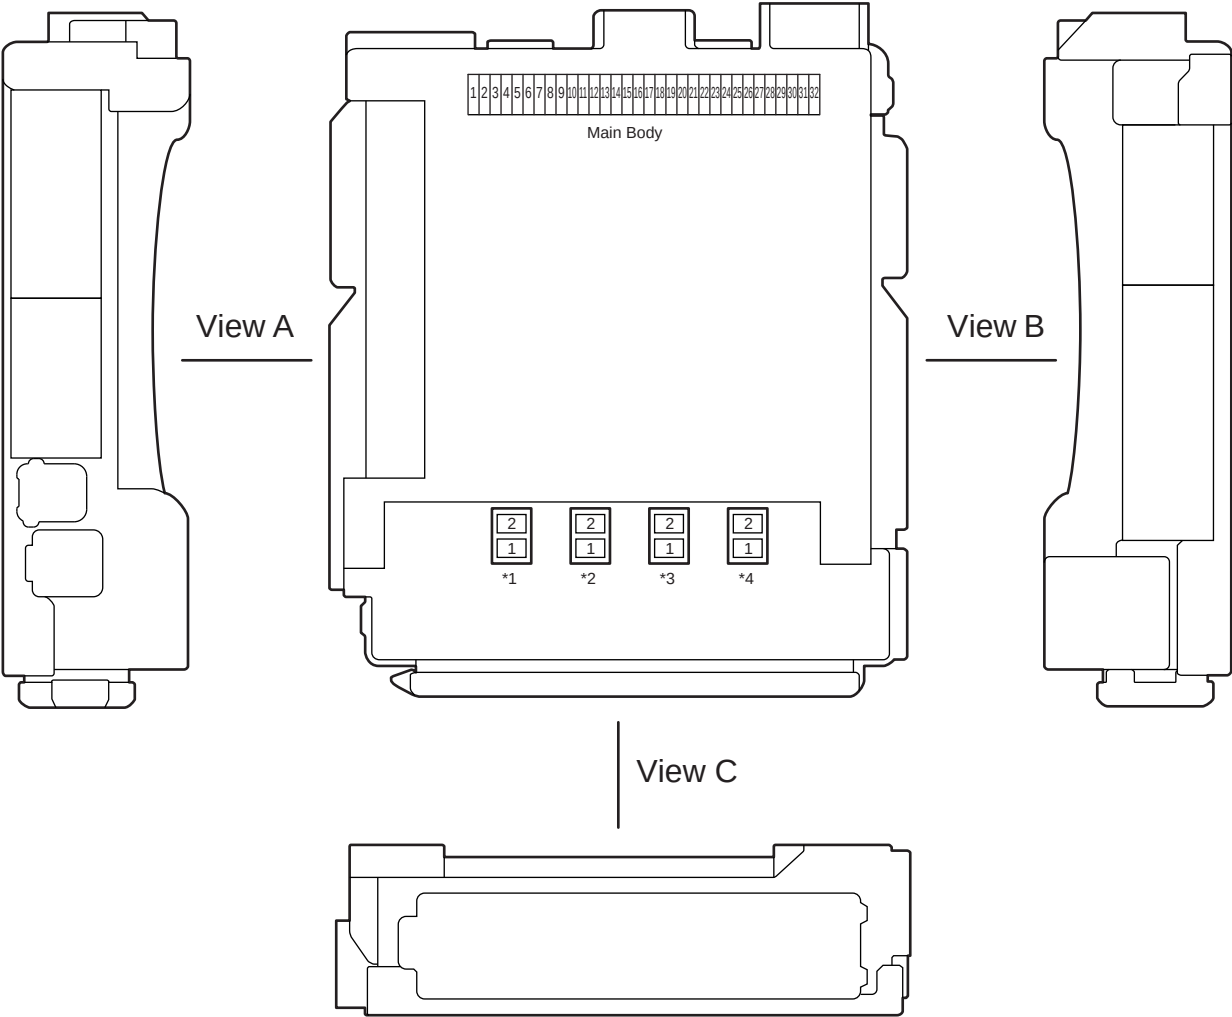

View A

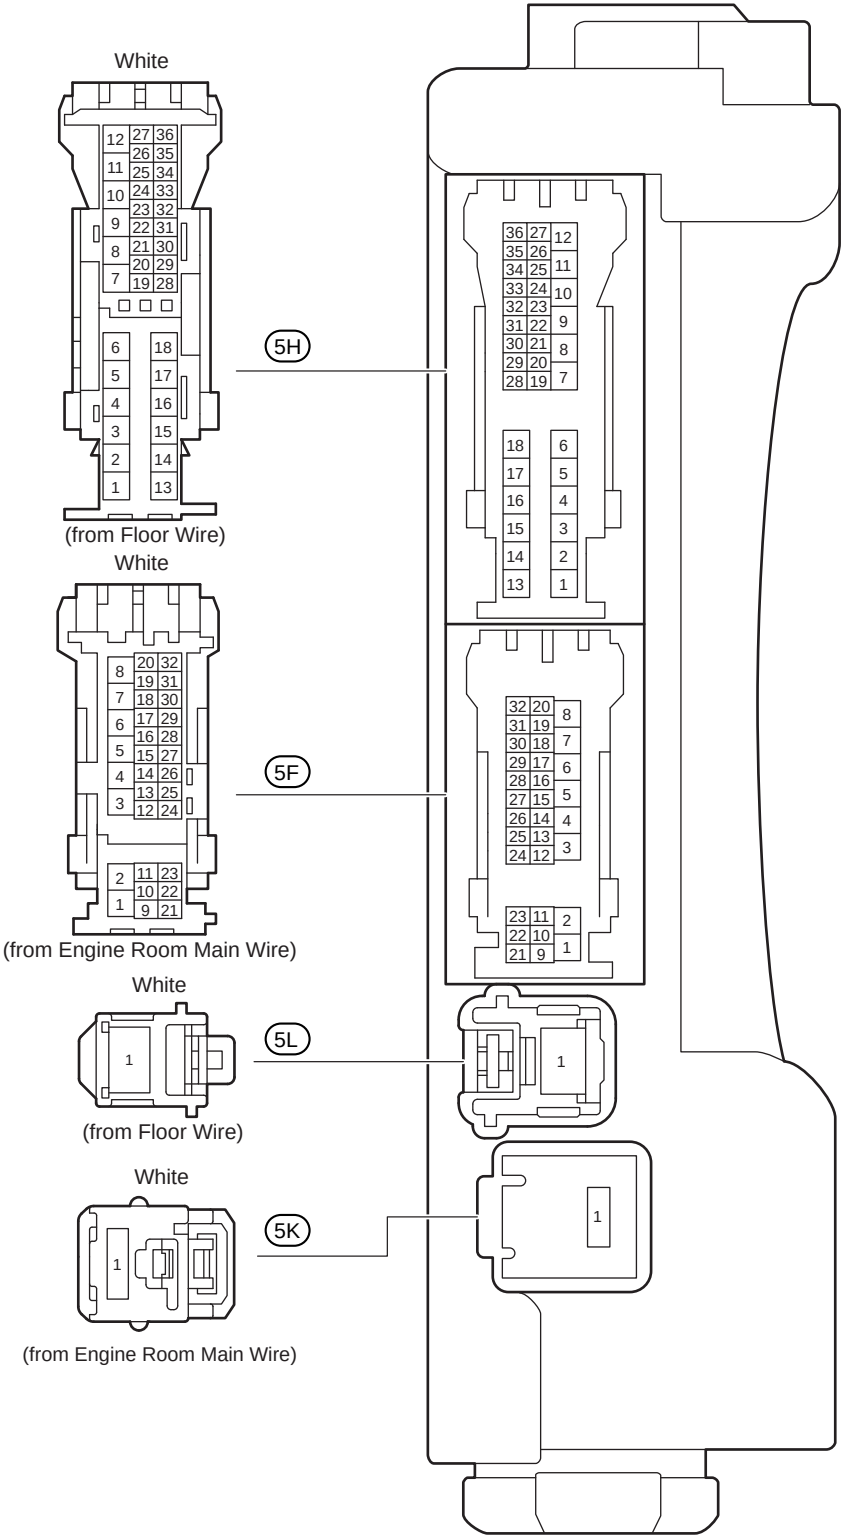

View B

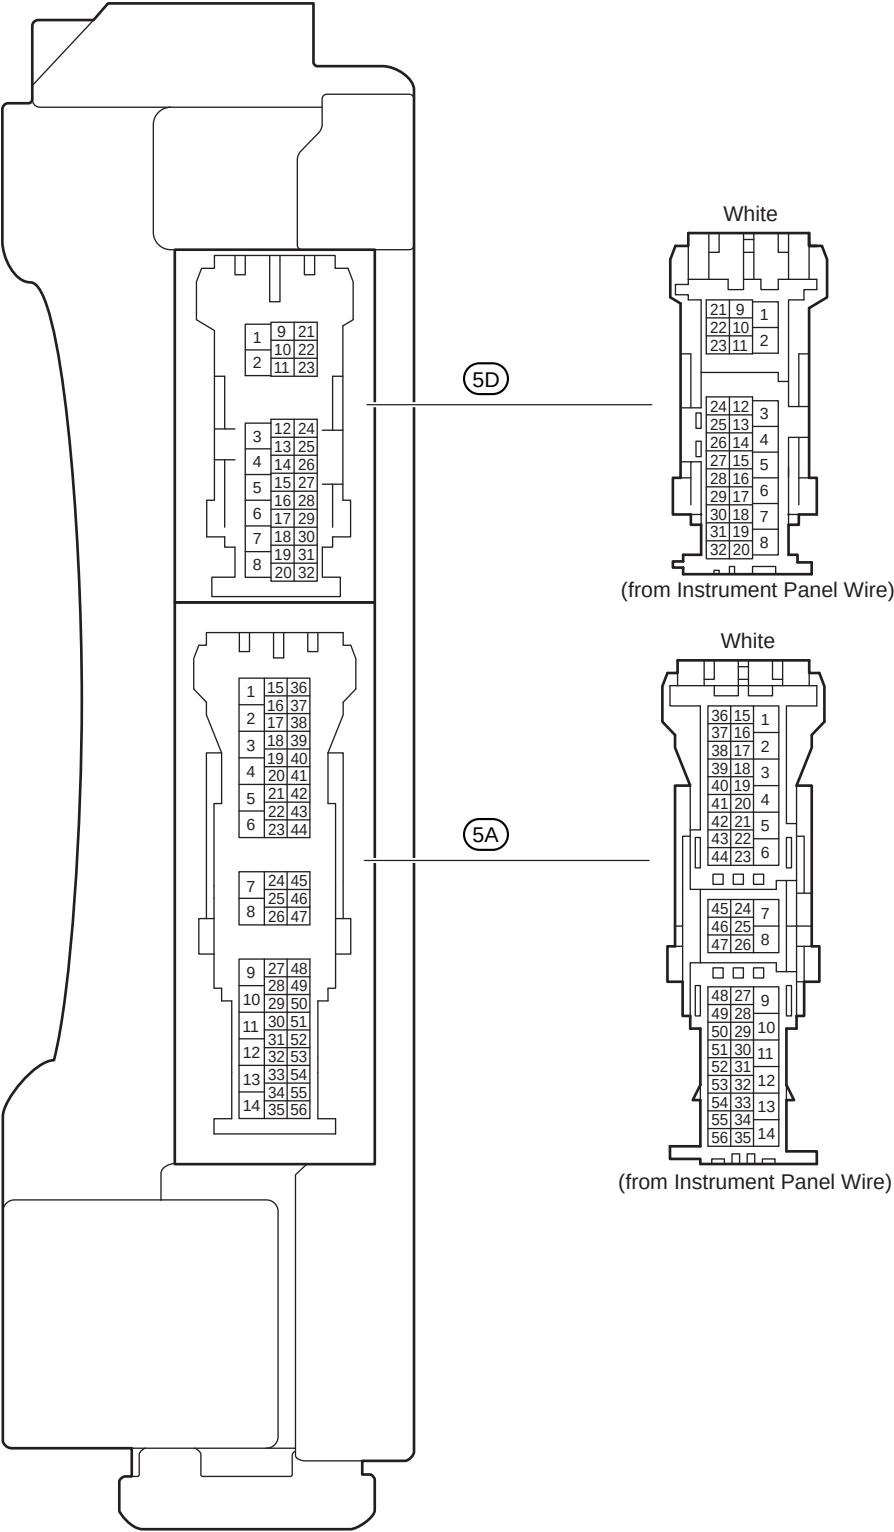

View C

- * 1:30A DOOR R/L 1 (LHD)
30A DOOR R/R 1 (RHD)
- * 2:15A FUEL OPN (LHD)
5A STOP (RHD)
- * 3:10A PANEL D (LHD)
10A ECU-B D NO.3 (RHD)
- * 4:10A DOOR D NO.3 (LHD)
10A PANEL D (RHD)
- * 5:5A STOP (LHD)
10A DOOR D NO.3 (RHD)

