




: Passenger Side J/B


Cowl Side Panel RH (LHD)
Cowl Side Panel LH (RHD)

- * 1:30A P/SEAT P NO.1
- * 2:30A DOOR R/R 2 (LHD)
30A DOOR R/L 2 (RHD)
- * 3:30A P/SEAT P NO.2
- * 4:30A DOOR P NO.3 (LHD)
30A S/ROOF NO.1 (RHD)

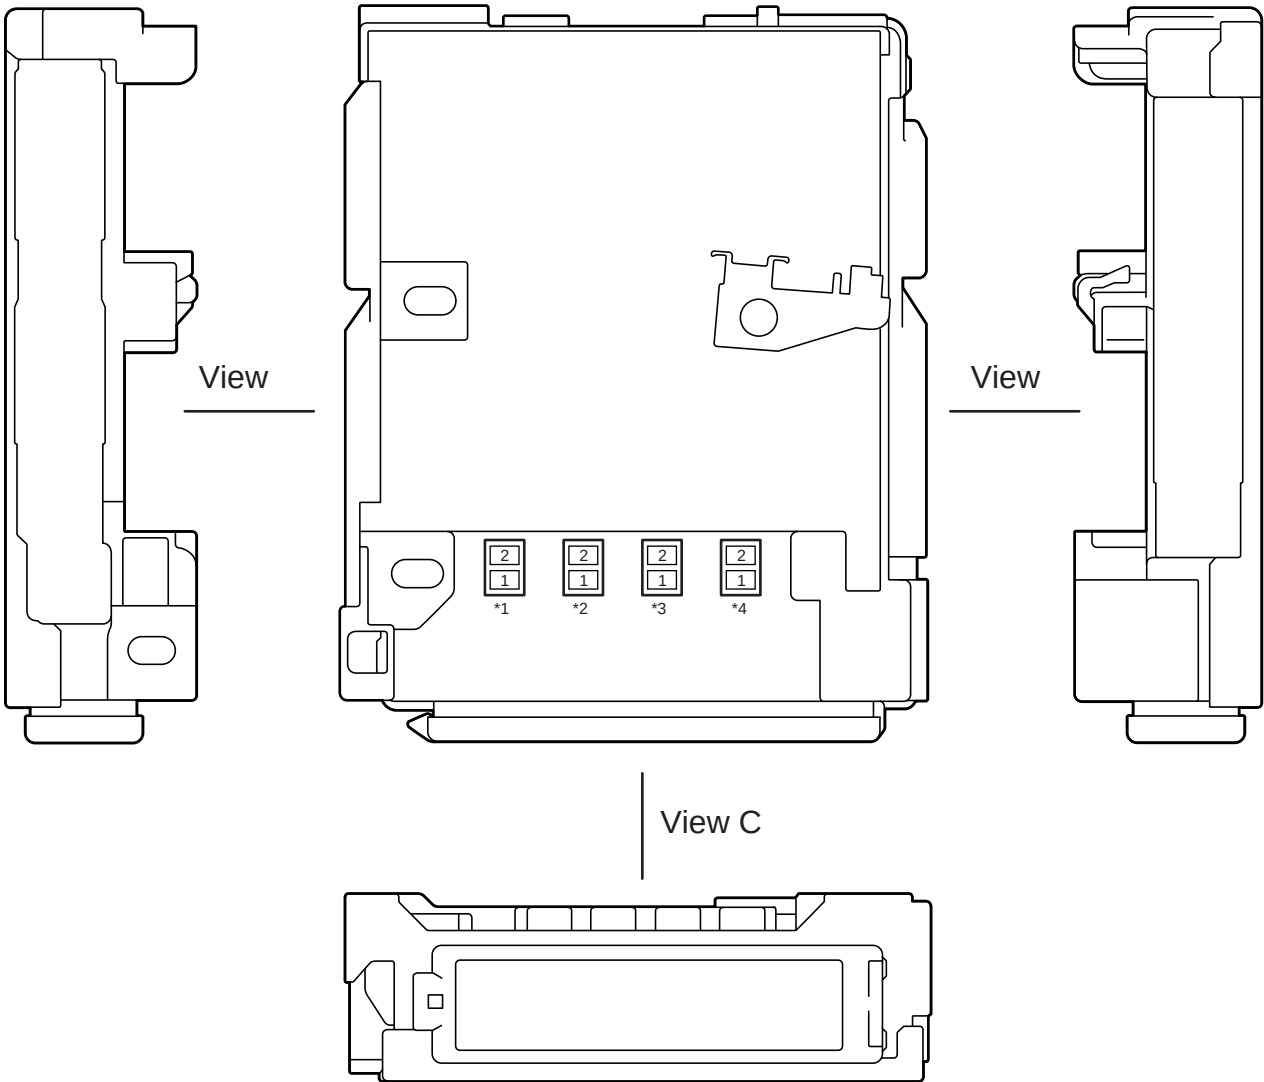


[Passenger Side J/B]

View A

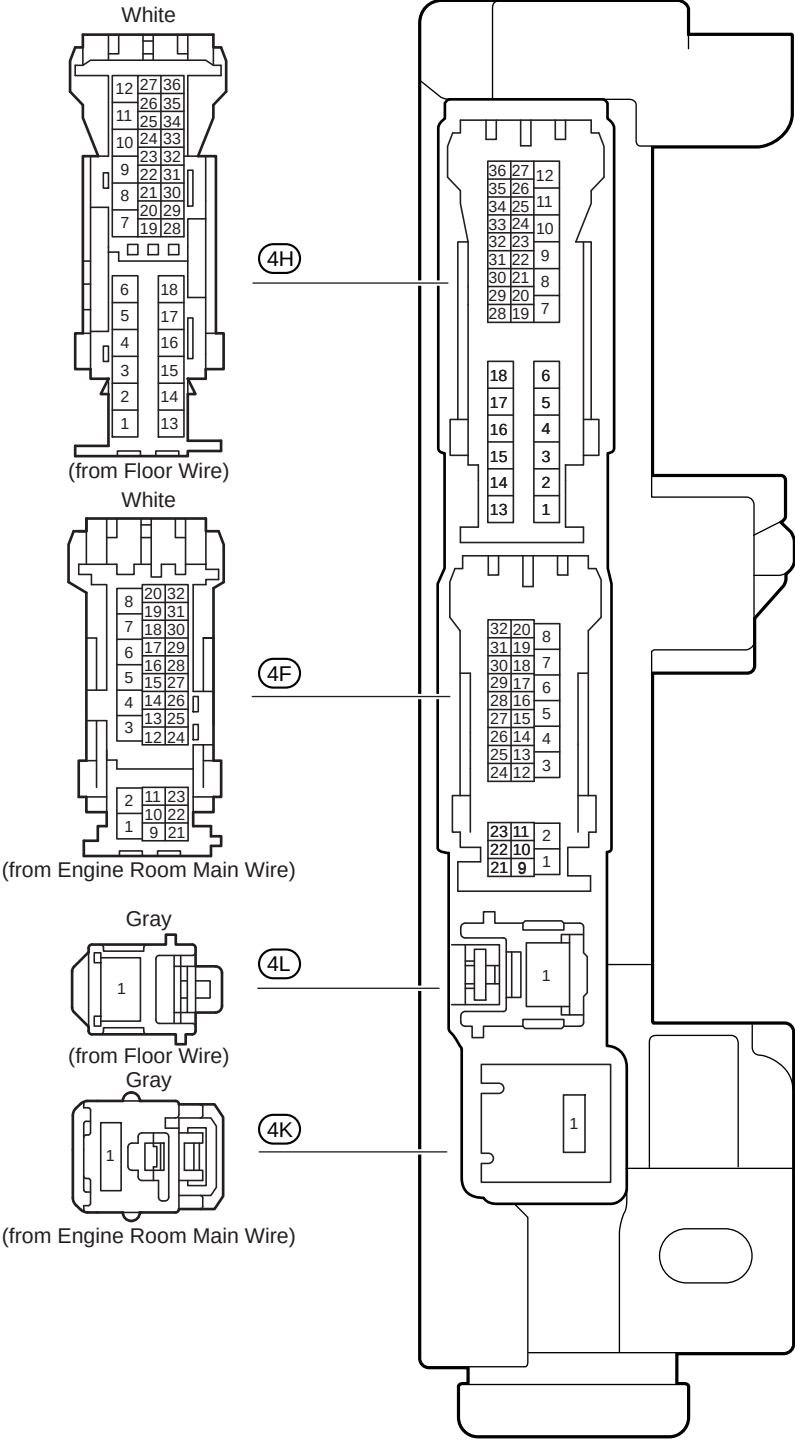

View B

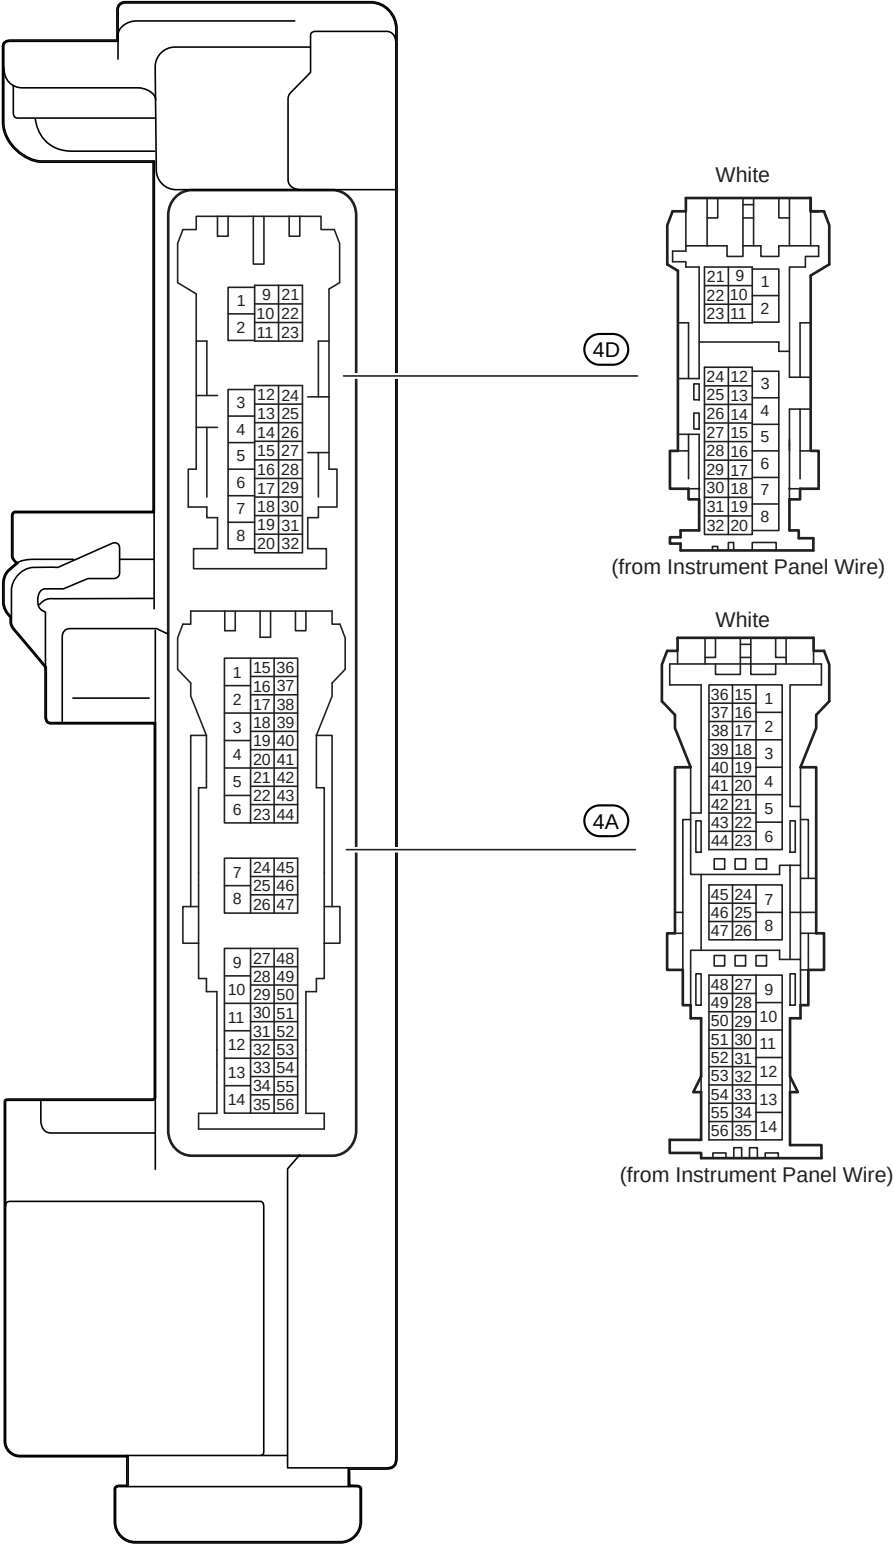

[Passenger Side J/B]

View C

- * 1:DOOR R/R 1 (LHD)
DOOR R/L 1 (RHD)
- * 2:5A ECU-B P NO.5 (LHD)
15A FUEL OPN (RHD)

