

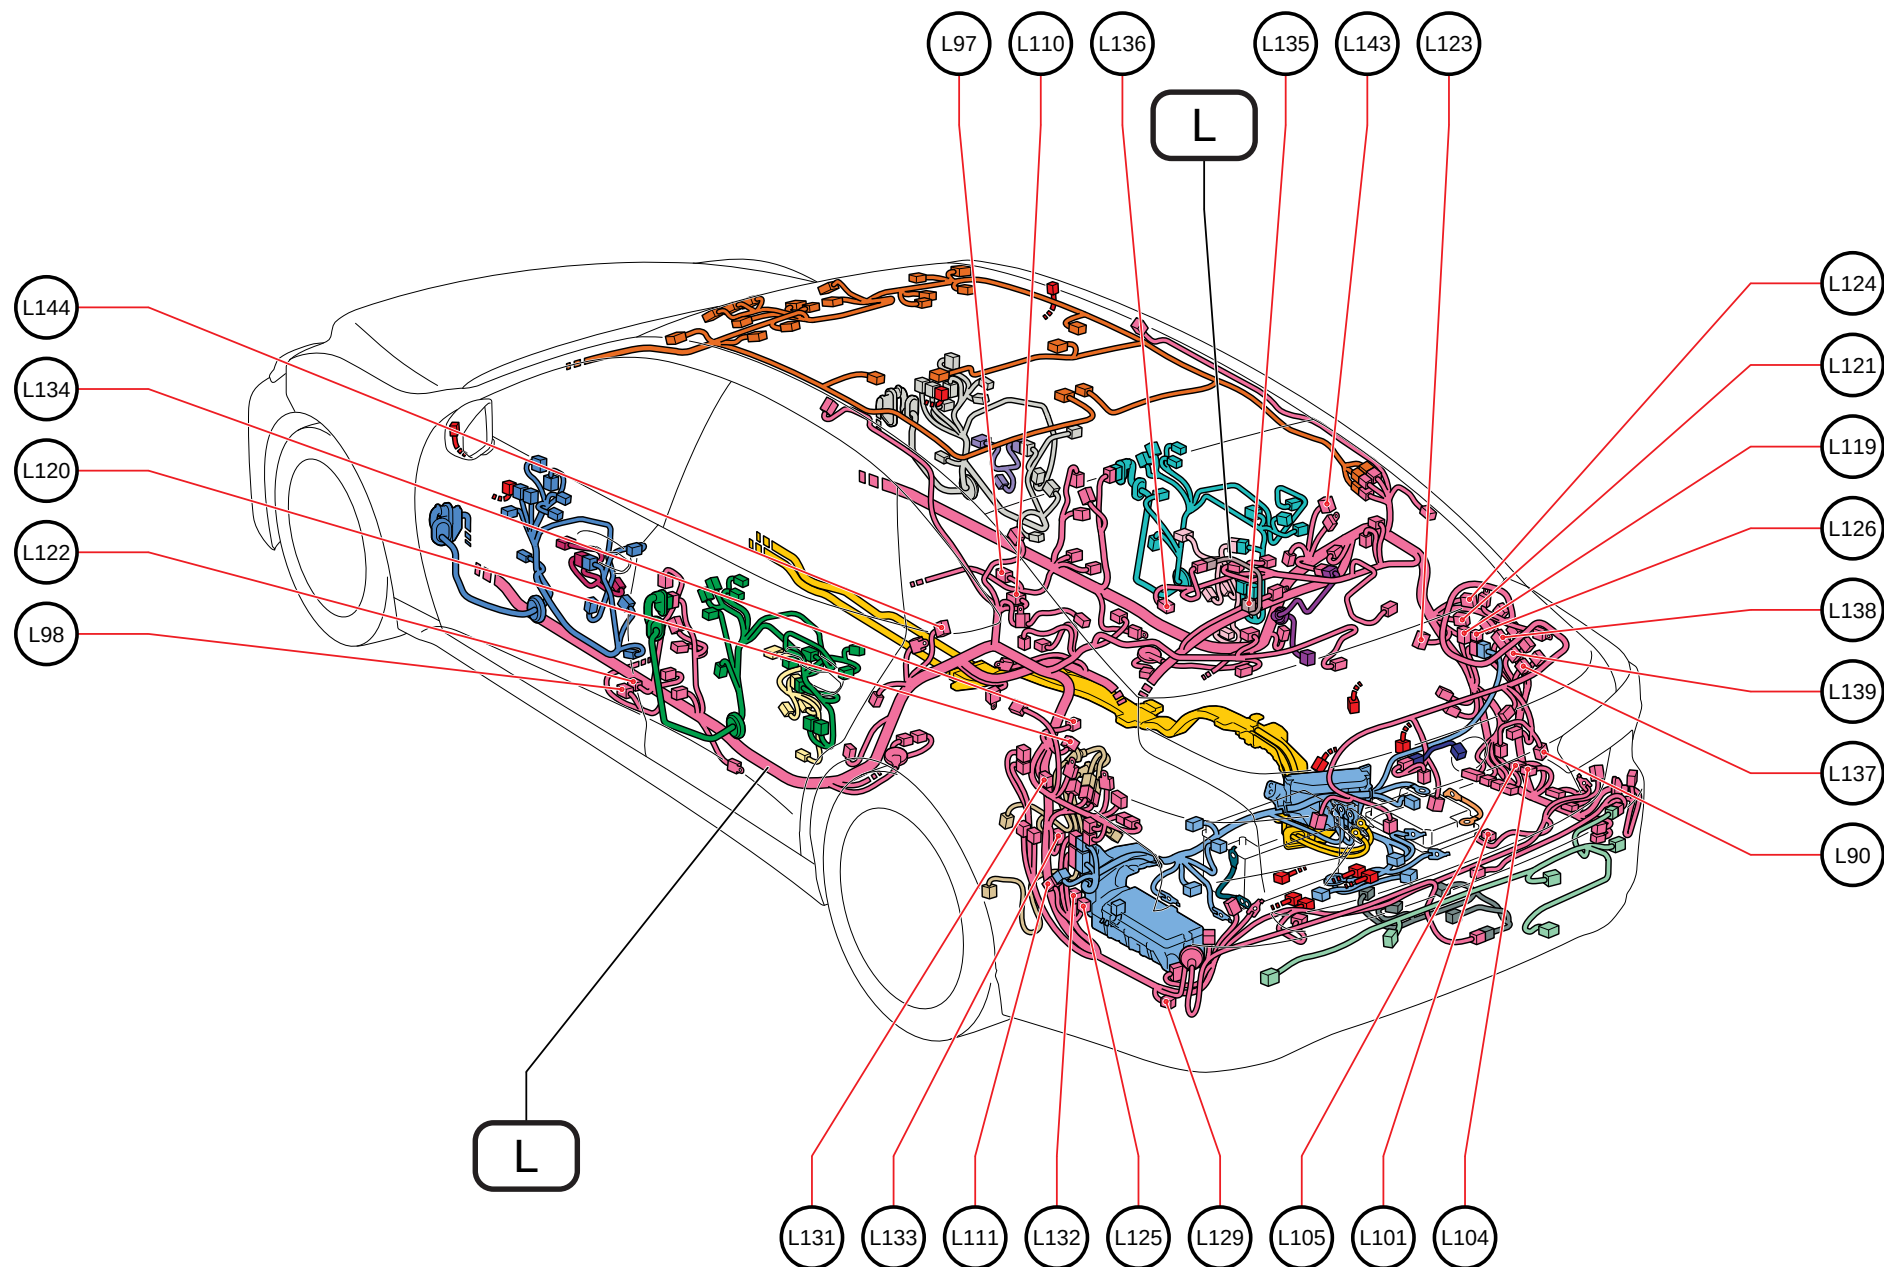
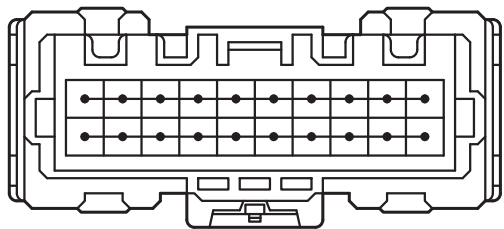
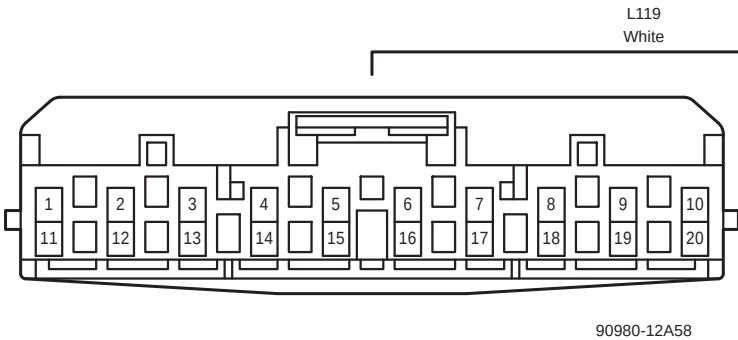
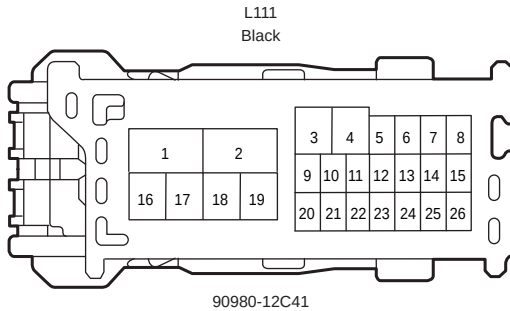
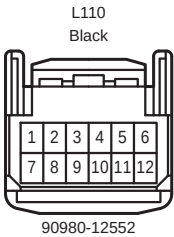
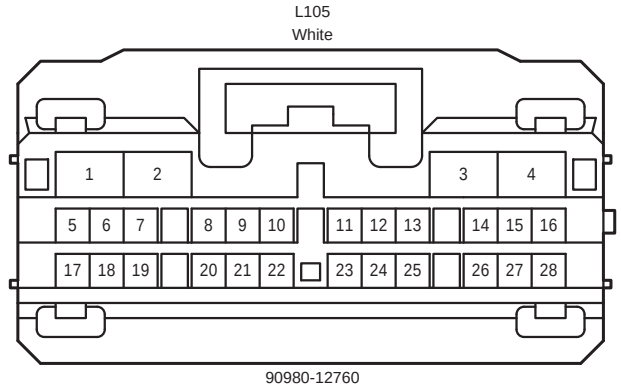
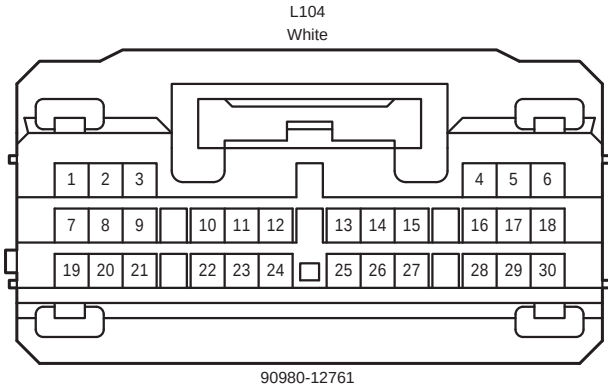
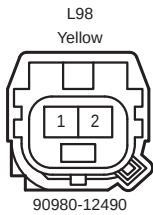


Position of Parts in Body <RHD>

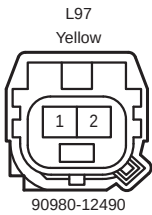


- L 90 Rear Light Assembly RH
- L 97 Side Airbag Sensor Assembly RH
- L 98 Side Airbag Sensor Assembly LH
- L 101 Brake Control Power Supply with Bracket Assembly
- L 104 Suspension Control ECU
- L 105 Suspension Control ECU
- L 110 Tire Pressure Monitor Receiver Assembly
- L 111 No. 3 Semiconductor Power Integration ECU
- L 119 No. 14 CAN Junction Connector
- L 120 No. 15 CAN Junction Connector
- L 121 No. 1 CAN Junction Terminal
- L 122 No. 2 CAN Junction Terminal
- L 123 No. 16 CAN Junction Connector
- L 124 No. 20 CAN Junction Connector
- L 125 No. 22 CAN Junction Connector
- L 126 No. 3 CAN Junction Terminal
- L 129 No. 5 CAN Junction Terminal
- L 131 No. 21 CAN Junction Connector
- L 132 No. 7 CAN Junction Terminal
- L 133 No. 8 CAN Junction Terminal
- L 134 No.2 Air Conditioning Harness Assembly
- L 135 Cooler (Solar Sensor) Thermistor
- L 136 Cooling Box Light Sub-Assembly
- L 137 Multi-Display Controller Sub-Assembly
- L 138 Multi-Display Controller Sub-Assembly
- L 139 Multi-Display Controller Sub-Assembly
- L 143 Auto Curtain Control Relay RH (Rear Side Window Curtain Assembly RH)
- L 144 Auto Curtain Control Relay LH (Rear Side Window Curtain Assembly LH)

Position of Parts in Body <RHD>

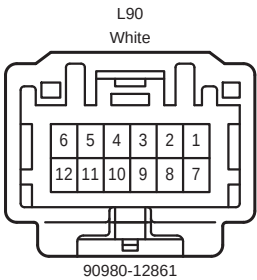

Position of Parts in Body <RHD>

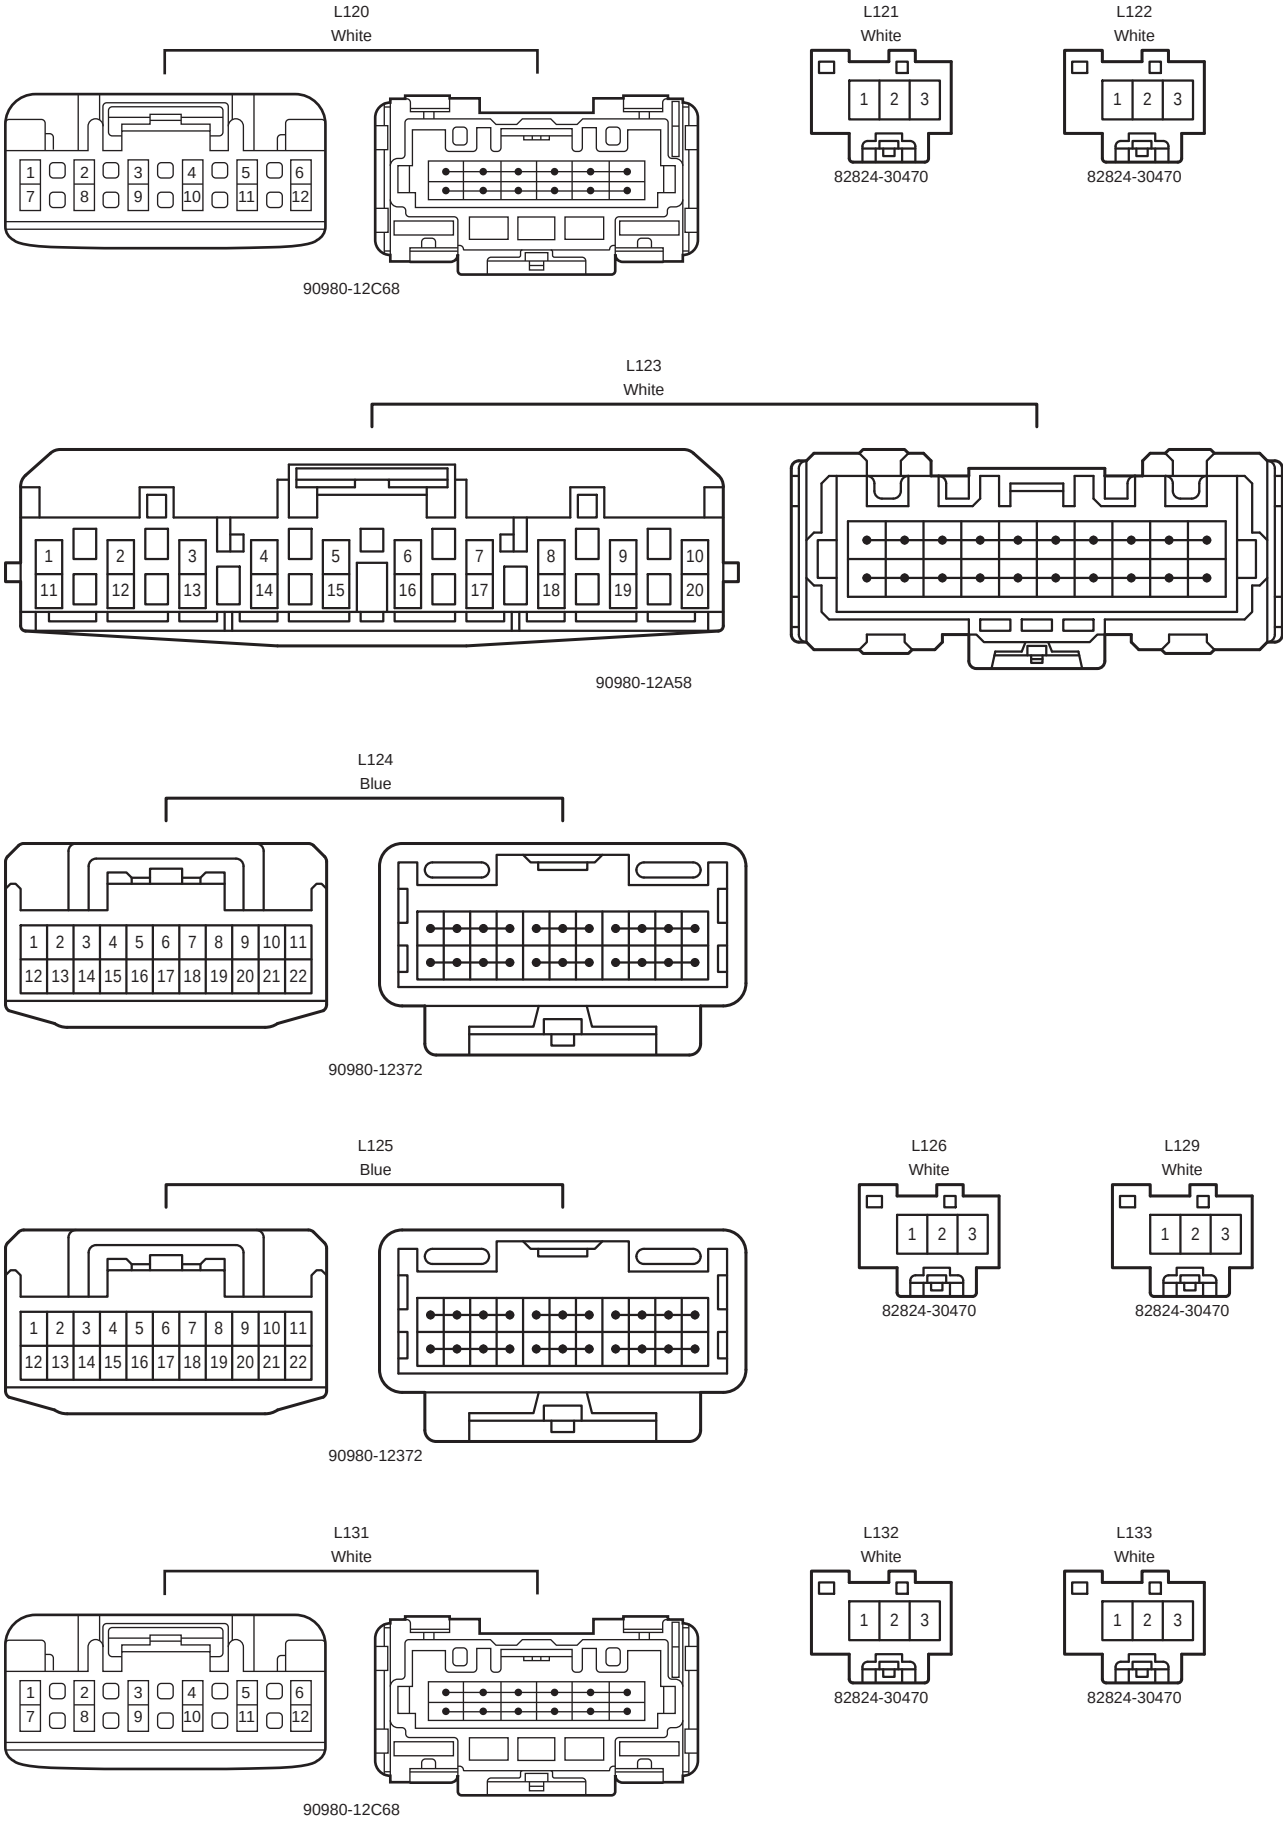

Position of Parts in Body <RHD>

