

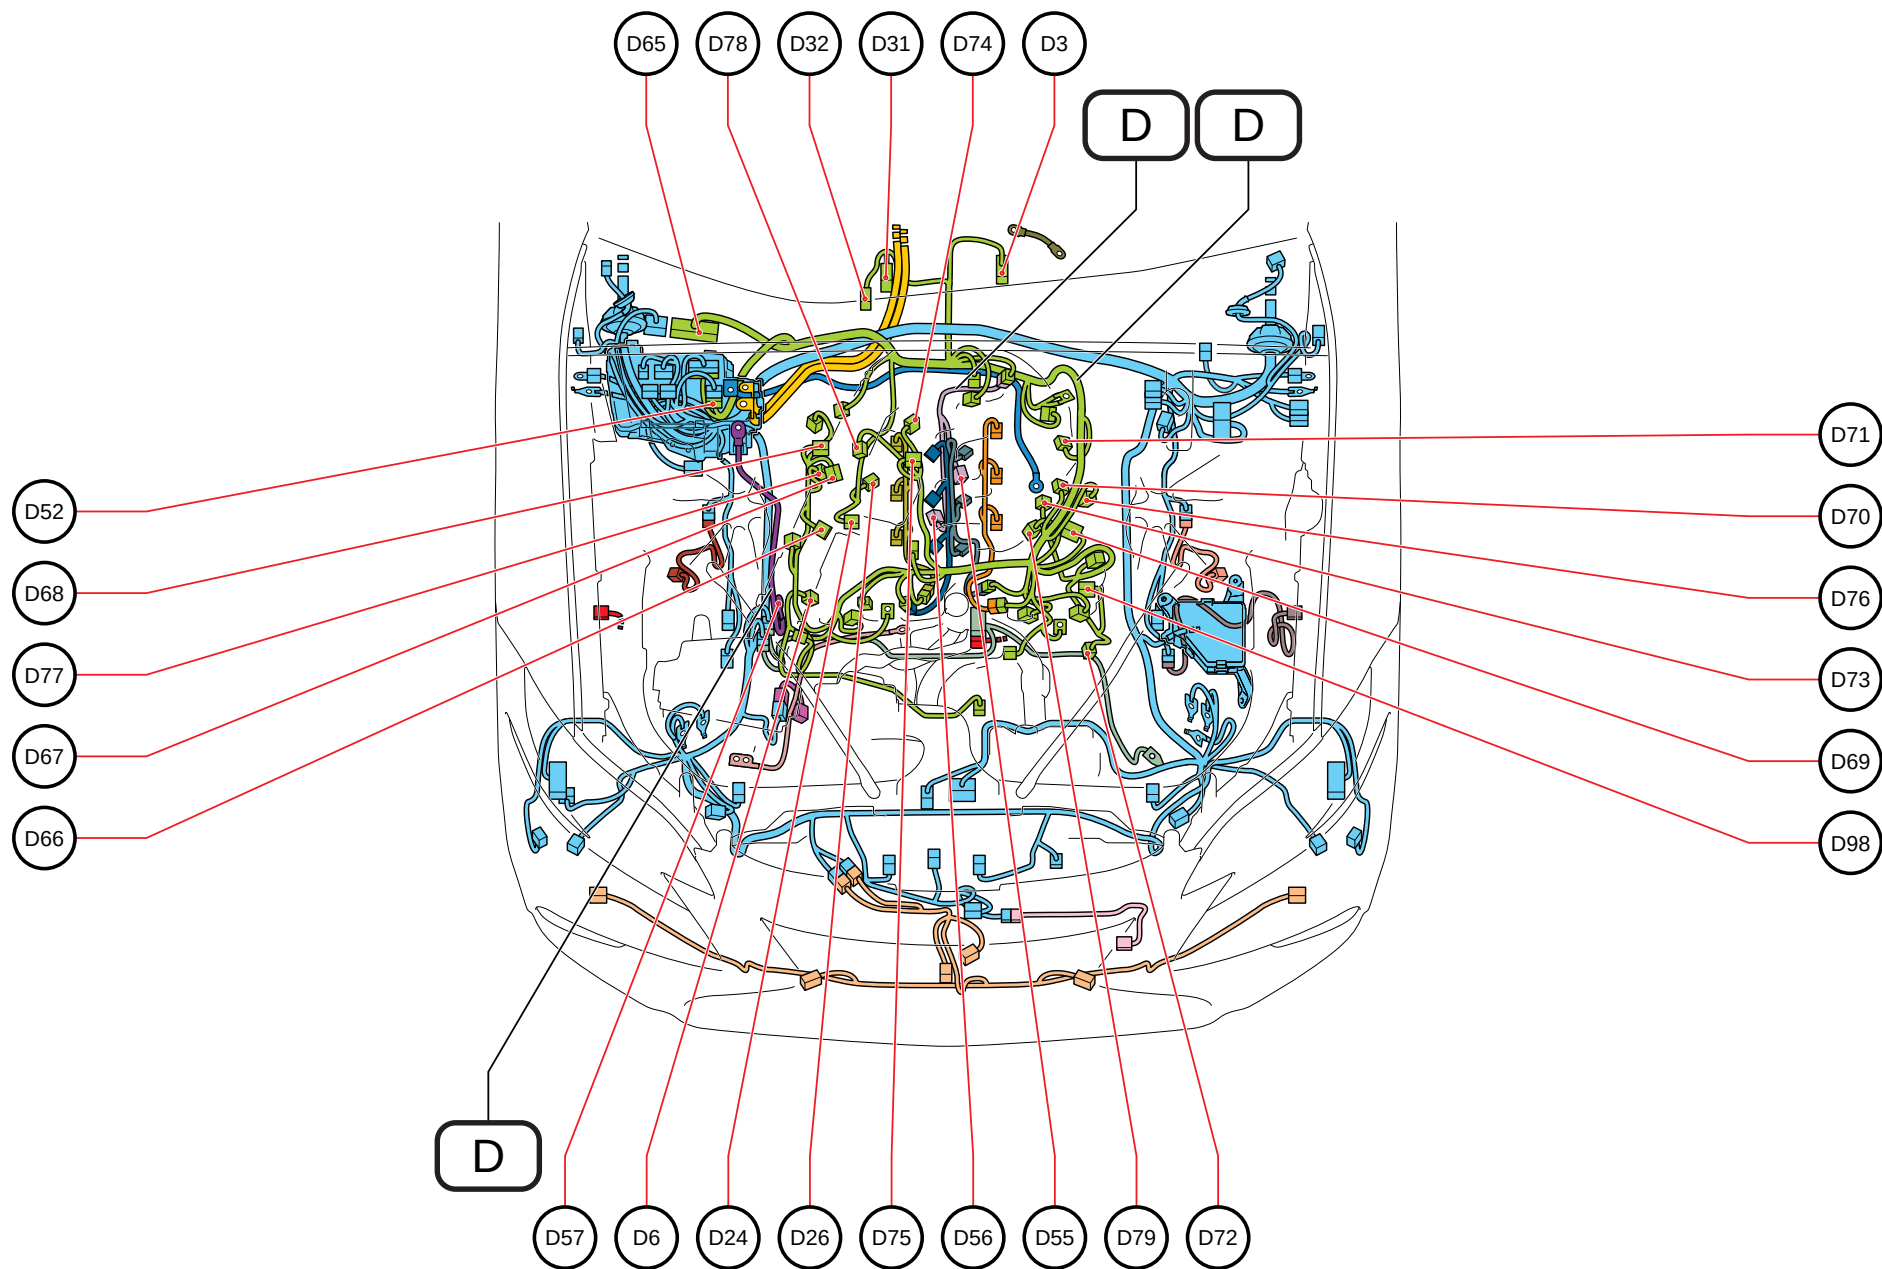
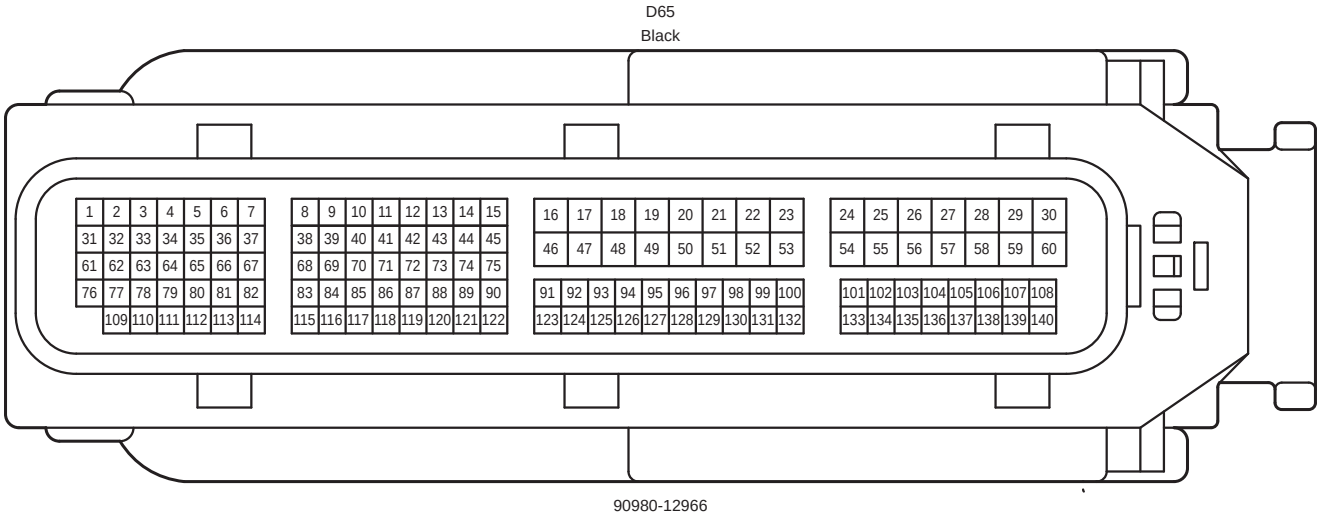
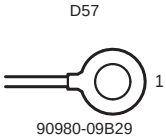
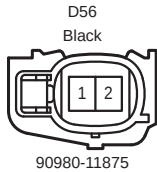
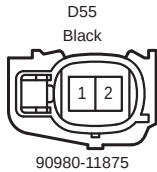
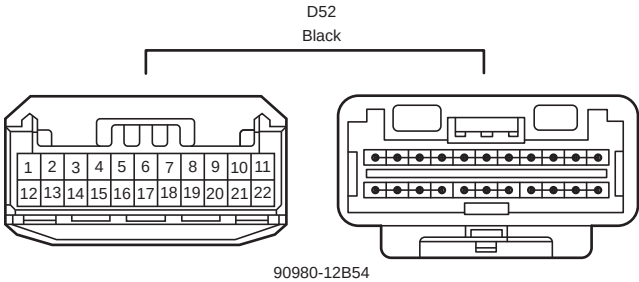
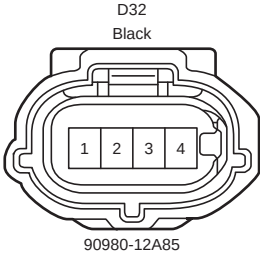
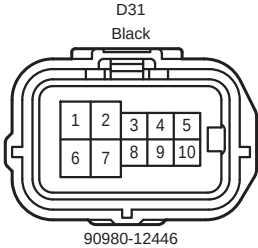
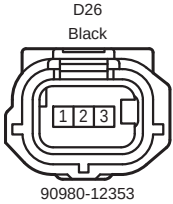


Position of Parts in Engine Compartment <LHD 8GR-FKS>

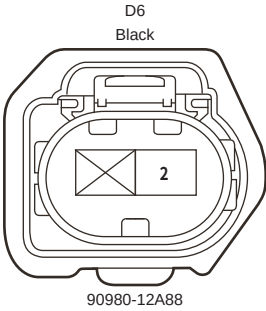

- D 3 Automatic Transmission Assembly (Transmission Wire)
- D 6 Generator Assembly
- D 24 Engine Oil Level Sensor
- D 26 Crank Position Sensor
- D 31 Shift Control Actuator Assembly
- D 32 Shift Control Actuator Assembly
- D 52 No. 3 Junction Connector
- D 55 Knock Control Sensor (Bank 2)
- D 56 Knock Control Sensor (Bank 1)
- D 57 Generator Assembly
- D 65 ECM
- D 66 Ignition Coil Assembly No. 1
- D 67 Ignition Coil Assembly No. 3
- D 68 Ignition Coil Assembly No. 5
- D 69 Ignition Coil Assembly No. 2
- D 70 Ignition Coil Assembly No. 4
- D 71 Ignition Coil Assembly No. 6
- D 72 Cooler Compressor Assembly
- D 73 Starter Assembly
- D 74 Throttle Body with Motor Assembly
- D 75 Purge VSV
- D 76 VVT Sensor (Bank 2 Exhaust Side)
- D 77 VVT Sensor (Bank 1 Exhaust Side)
- D 78 VVT Sensor (Bank 1 Intake Side)
- D 79 VVT Sensor (Bank 2 Intake Side)
- D 98 Cooler Compressor Assembly

Position of Parts in Engine Compartment <LHD 8GR-FKS>

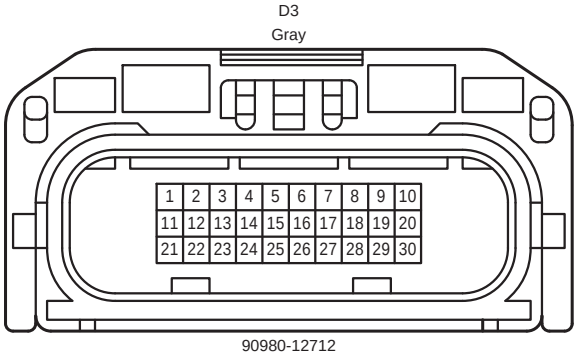

Position of Parts in Engine Compartment <LHD 8GR-FKS>

