


Position of Parts in Engine Compartment <LHD 8GR-FKS>

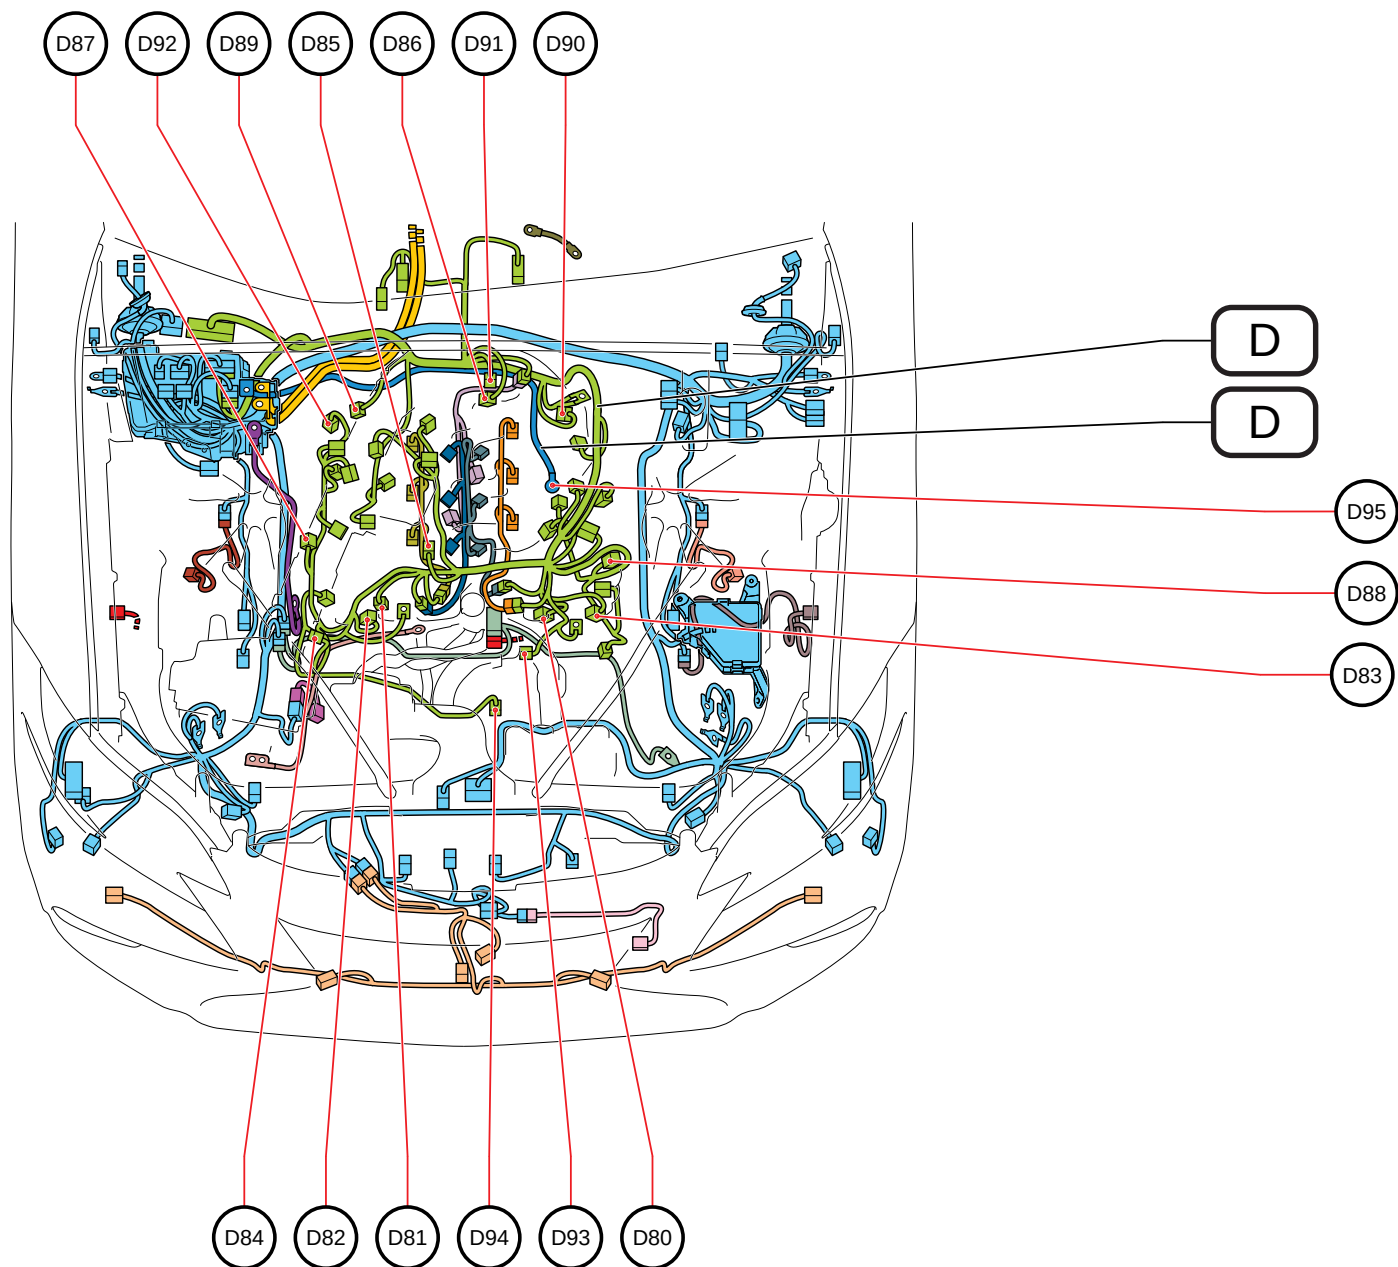

- D 80 Cam Timing Oil Control Solenoid Assembly (Bank 2 Intake Side)
- D 81 Cam Timing Oil Control Solenoid Assembly (Bank 1 Intake Side)
- D 82 Cam Timing Oil Control Solenoid Assembly (Bank 1 Exhaust Side)
- D 83 Cam Timing Oil Control Solenoid Assembly (Bank 2 Exhaust Side)
- D 84 Intake Mass Air Flow Meter Sub-Assembly
- D 85 Fuel Pressure Sensor (Low Pressure Side)
- D 86 Fuel Pressure Sensor (High Pressure Side)
- D 87 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- D 88 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- D 89 Air Fuel Ratio Sensor (Bank 1 Sensor 2)
- D 90 Air Fuel Ratio Sensor (Bank 2 Sensor 2)
- D 91 E.F.I. Engine Coolant Temperature Sensor
- D 92 Fuel Pump Assembly
- D 93 Water Inlet with Thermostat Sub-Assembly
- D 94 Engine Oil Pressure Switch Assembly
- D 95 Starter Assembly

Position of Parts in Engine Compartment <LHD 8GR-FKS>

