


Position of Parts in Engine Compartment <RHD 8GR-FKS>

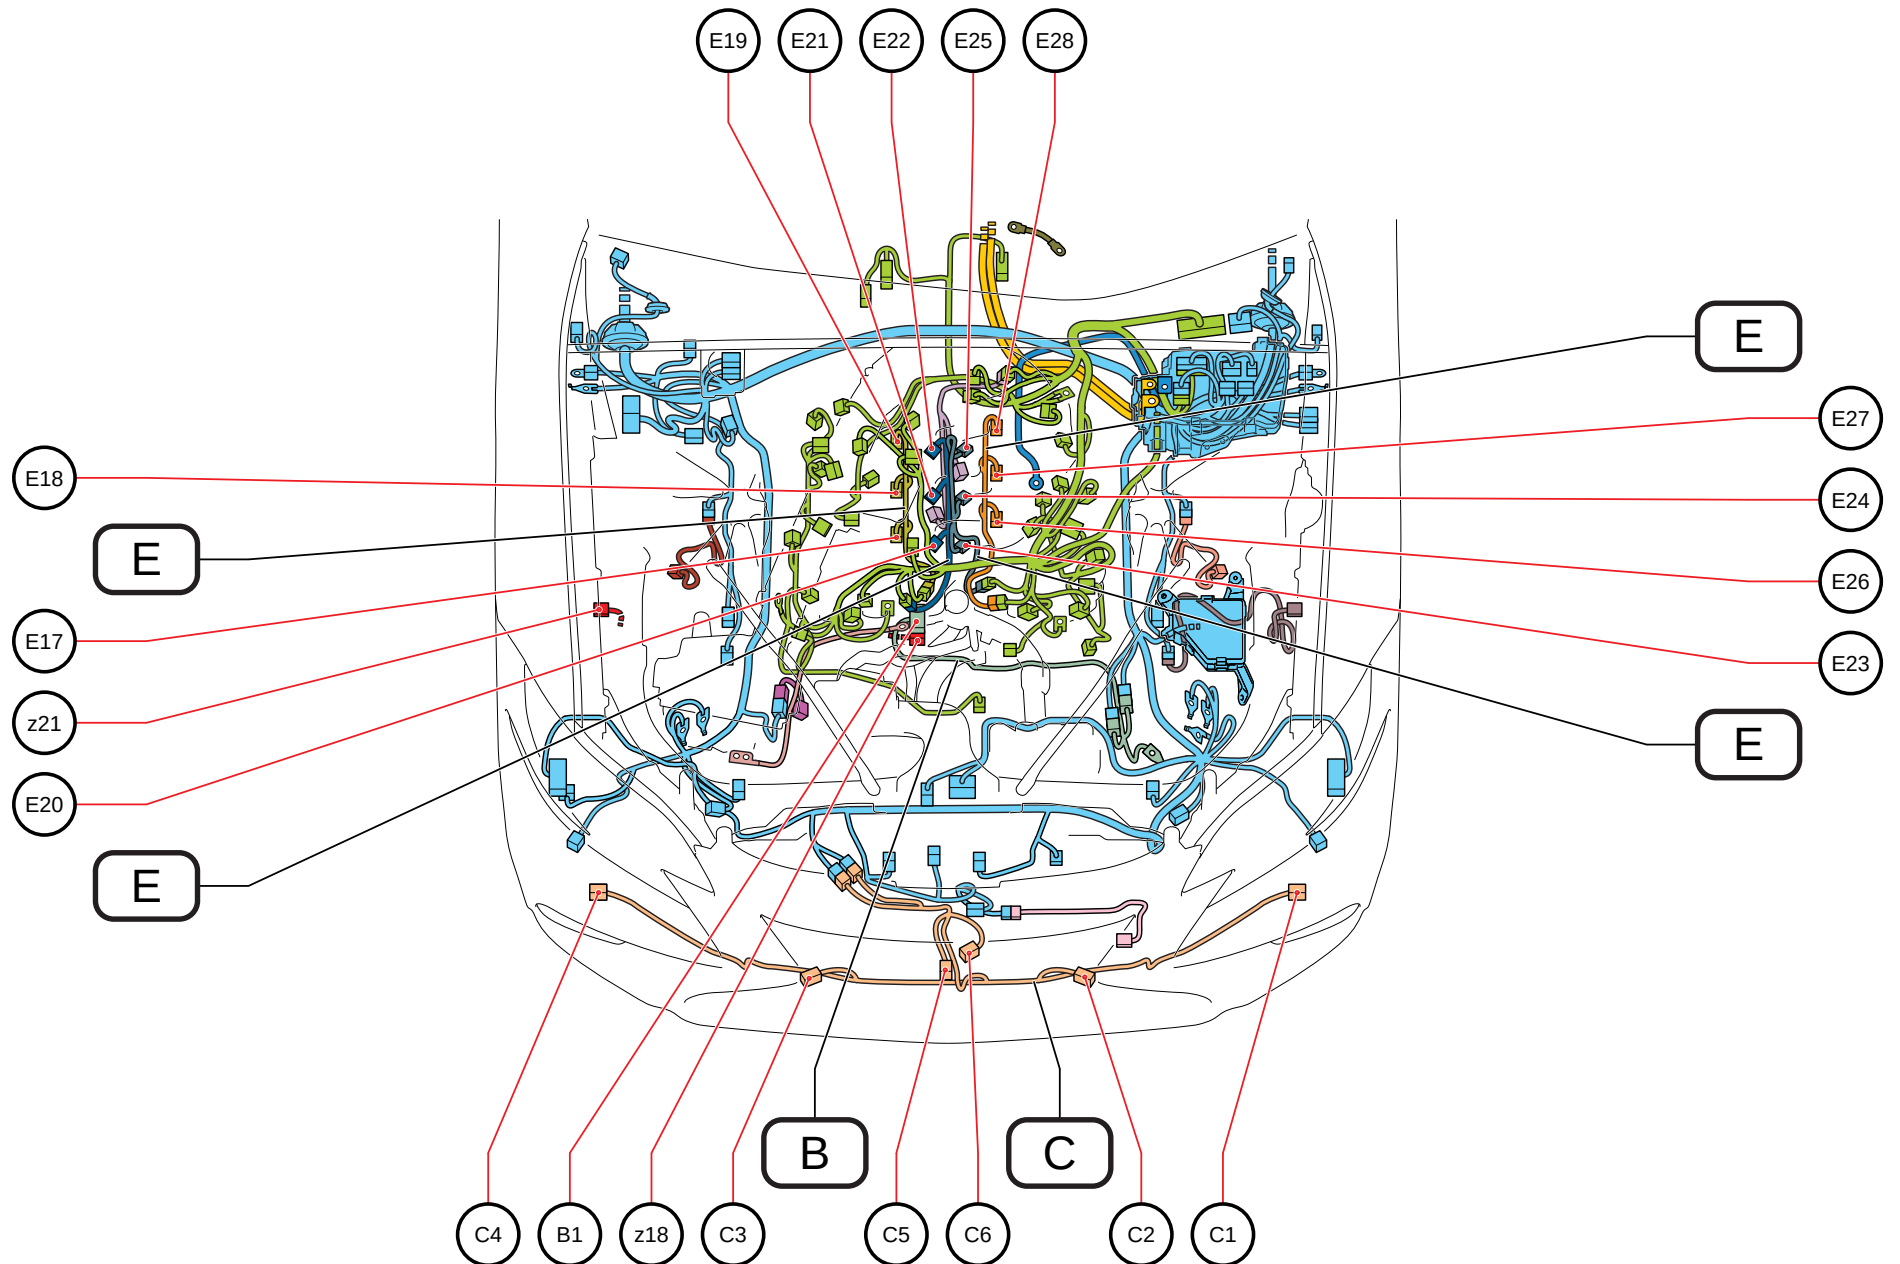

- B 1 EPS ECU (Rack & Pinion Power Steering Gear Assembly)

- C 1 Front Ultrasonic Sensor Corner LH
- C 2 Front Ultrasonic Sensor Center LH
- C 3 Front Ultrasonic Sensor Center RH
- C 4 Front Ultrasonic Sensor Corner RH
- C 5 Front Television Camera Assembly
- C 6 Millimeter Wave Radar Sensor Assembly

- E 17 Fuel Injector Assembly No. 1 (for Port Injection)
- E 18 Fuel Injector Assembly No. 3 (for Port Injection)
- E 19 Fuel Injector Assembly No. 5 (for Port Injection)
- E 20 Fuel Injector Assembly No. 1 (for Direct Injection)
- E 21 Fuel Injector Assembly No. 3 (for Direct Injection)
- E 22 Fuel Injector Assembly No. 5 (for Direct Injection)
- E 23 Fuel Injector Assembly No. 2 (for Direct Injection)
- E 24 Fuel Injector Assembly No. 4 (for Direct Injection)
- E 25 Fuel Injector Assembly No. 6 (for Direct Injection)
- E 26 Fuel Injector Assembly No. 2 (for Port Injection)
- E 27 Fuel Injector Assembly No. 4 (for Port Injection)
- E 28 Fuel Injector Assembly No. 6 (for Port Injection)

- z 18 Steering Torque Sensor Board Sub-Assembly , Rack & Pinion Power Steering Gear Assembly
- z 21 Front Speed Sensor RH , Front Skid Control Sensor Wire RH

Position of Parts in Engine Compartment <RHD 8GR-FKS>

