

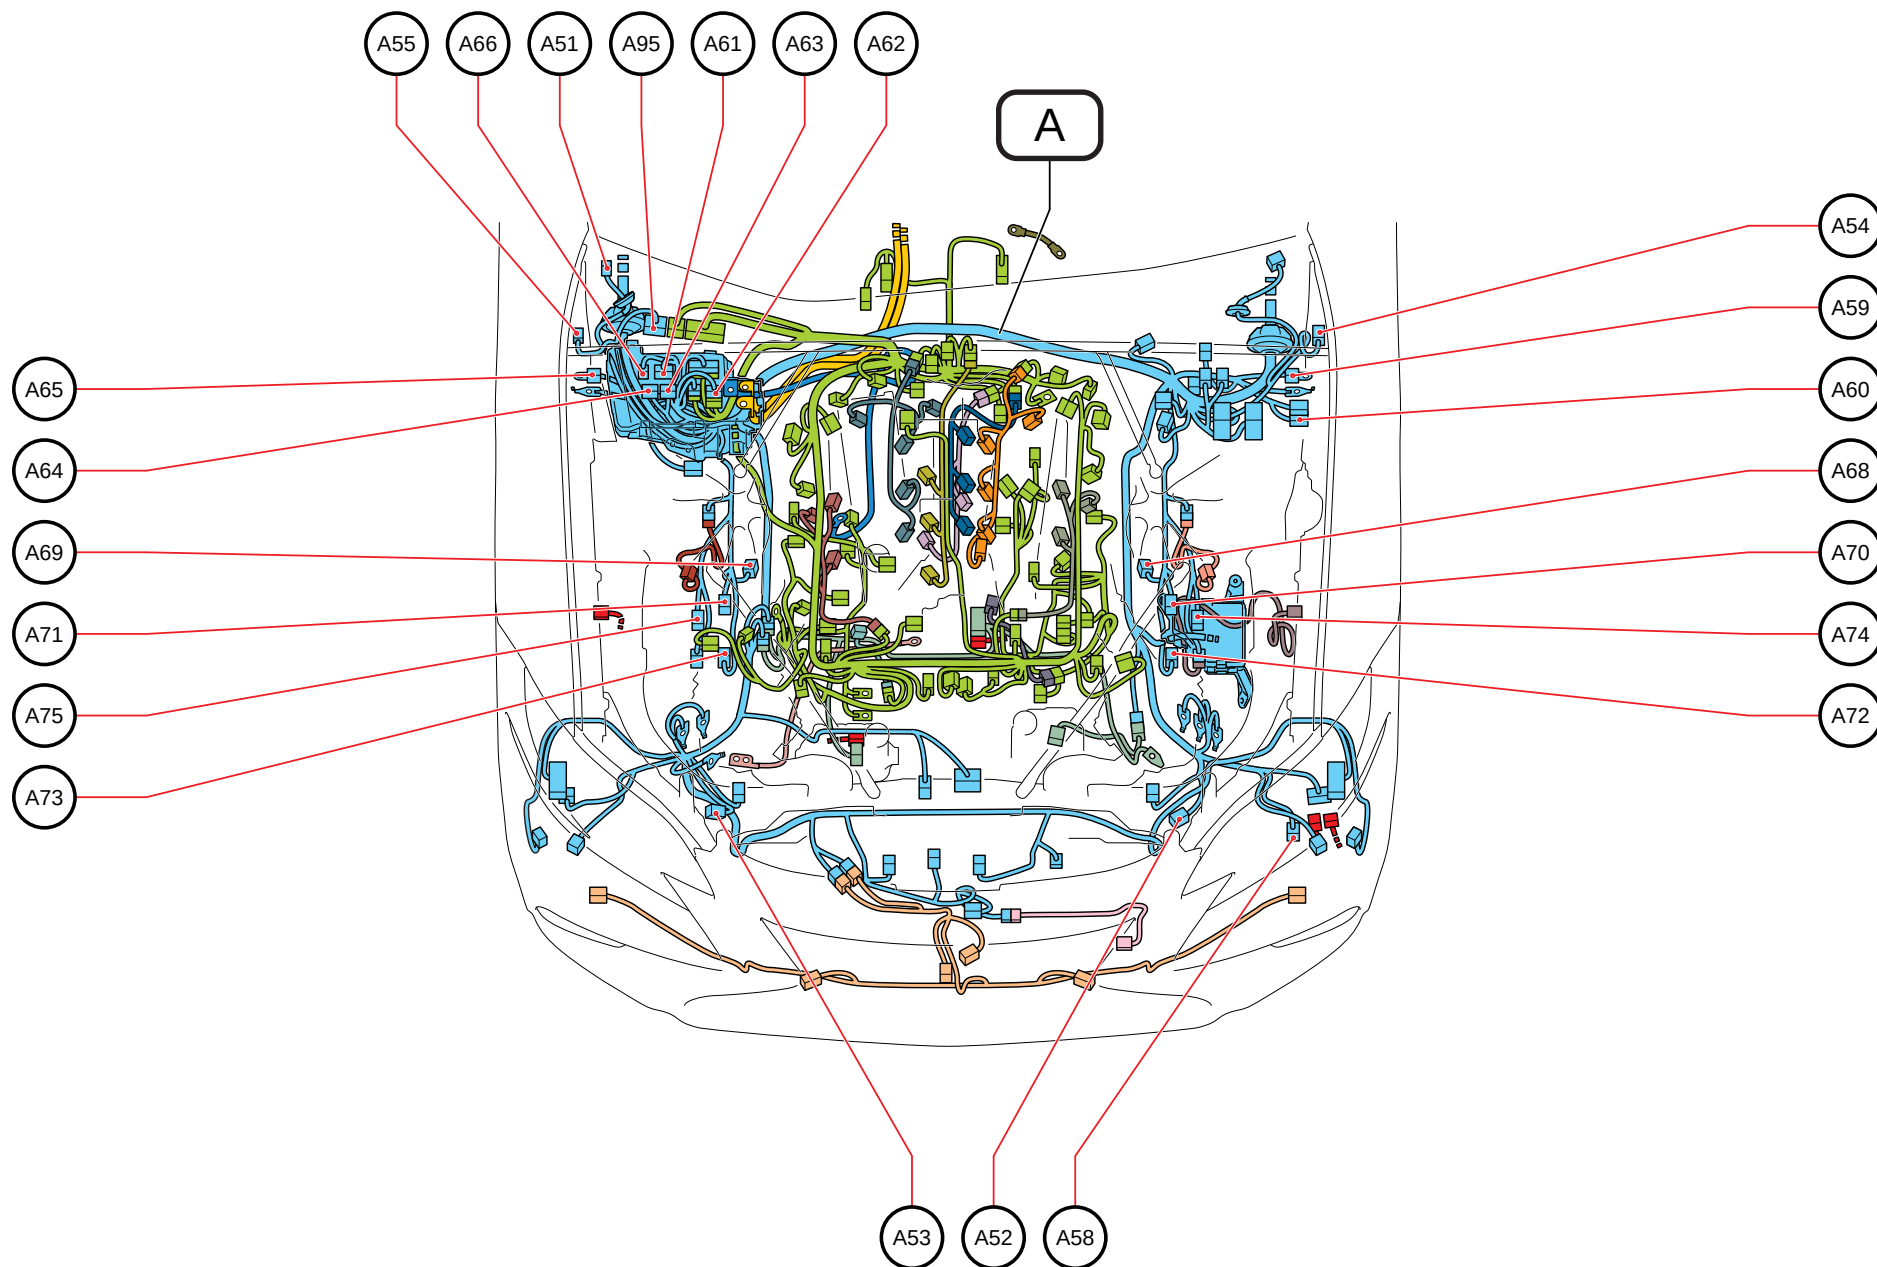
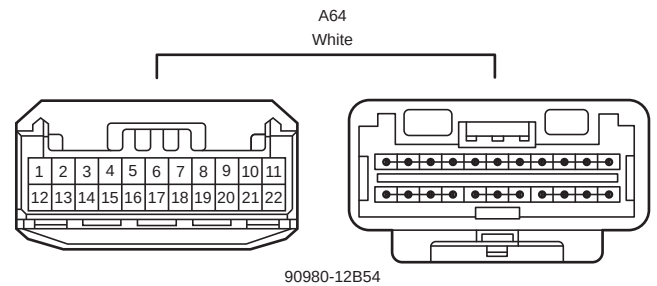
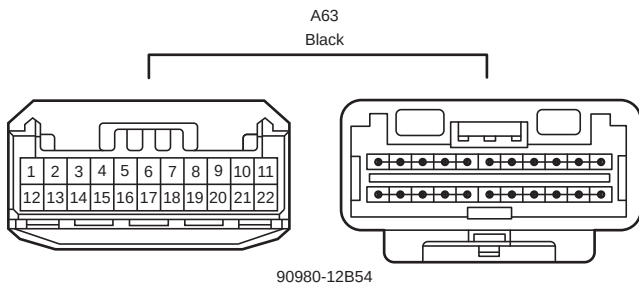
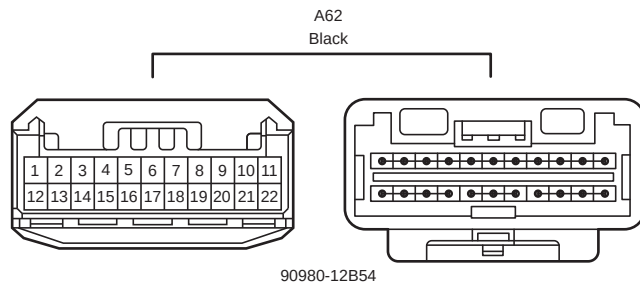
 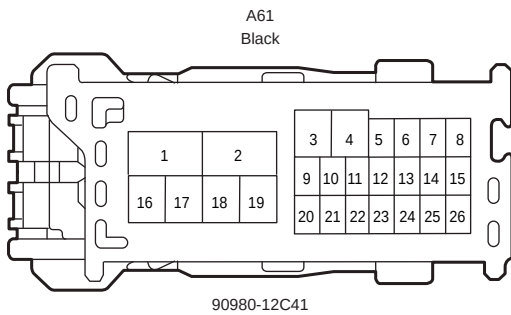
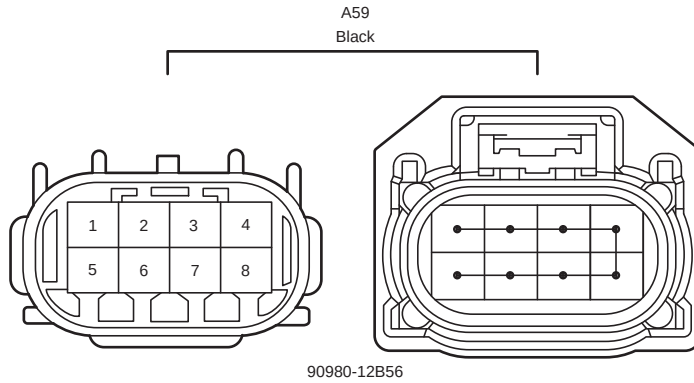



Position of Parts in Engine Compartment <LHD V35A-FTS>

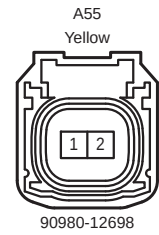

- A 51 Front Wiper Deicer (Windshield Glass)
- A 52 Pop Up Hood Lifter Assembly LH
- A 53 Pop Up Hood Lifter Assembly RH
- A 54 No. 2 Pop Up Hood Lifter Assembly LH
- A 55 No. 2 Pop Up Hood Lifter Assembly RH
- A 58 Front Active Stabilizer Control Actuator Assembly
- A 59 No. 2 Ground Junction Connector
- A 60 Headlight Cleaner Motor and Pump Assembly
- A 61 No. 1 Semiconductor Power Integration ECU
- A 62 No. 1 Junction Connector
- A 63 No. 2 Junction Connector
- A 64 No. 20 Junction Connector
- A 65 No. 1 Ground Junction Connector
- A 66 No. 1 Semiconductor Power Integration ECU
- A 68 Front Height Control Sensor Sub-Assembly LH
- A 69 Front Height Control Sensor Sub-Assembly RH
- A 70 Front Shock Absorber Assembly LH
- A 71 Front Shock Absorber Assembly RH
- A 72 Front Speed Sensor LH
- A 73 Front Speed Sensor RH
- A 74 Front Height Control Sensor Sub-Assembly LH
- A 75 Front Height Control Sensor Sub-Assembly RH
- A 95 ECM

Position of Parts in Engine Compartment <LHD V35A-FTS>

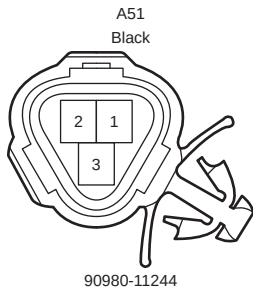

Position of Parts in Engine Compartment <LHD V35A-FTS>

