










Position of Parts in Engine Compartment <LHD V35A-FTS>

- * 1:2WD
- * 2:AWD
- * 3:2WD(Korea)
- * 4:AWD(Korea)
- * 5:2WD(except Korea)
- * 6:AWD(except Korea)

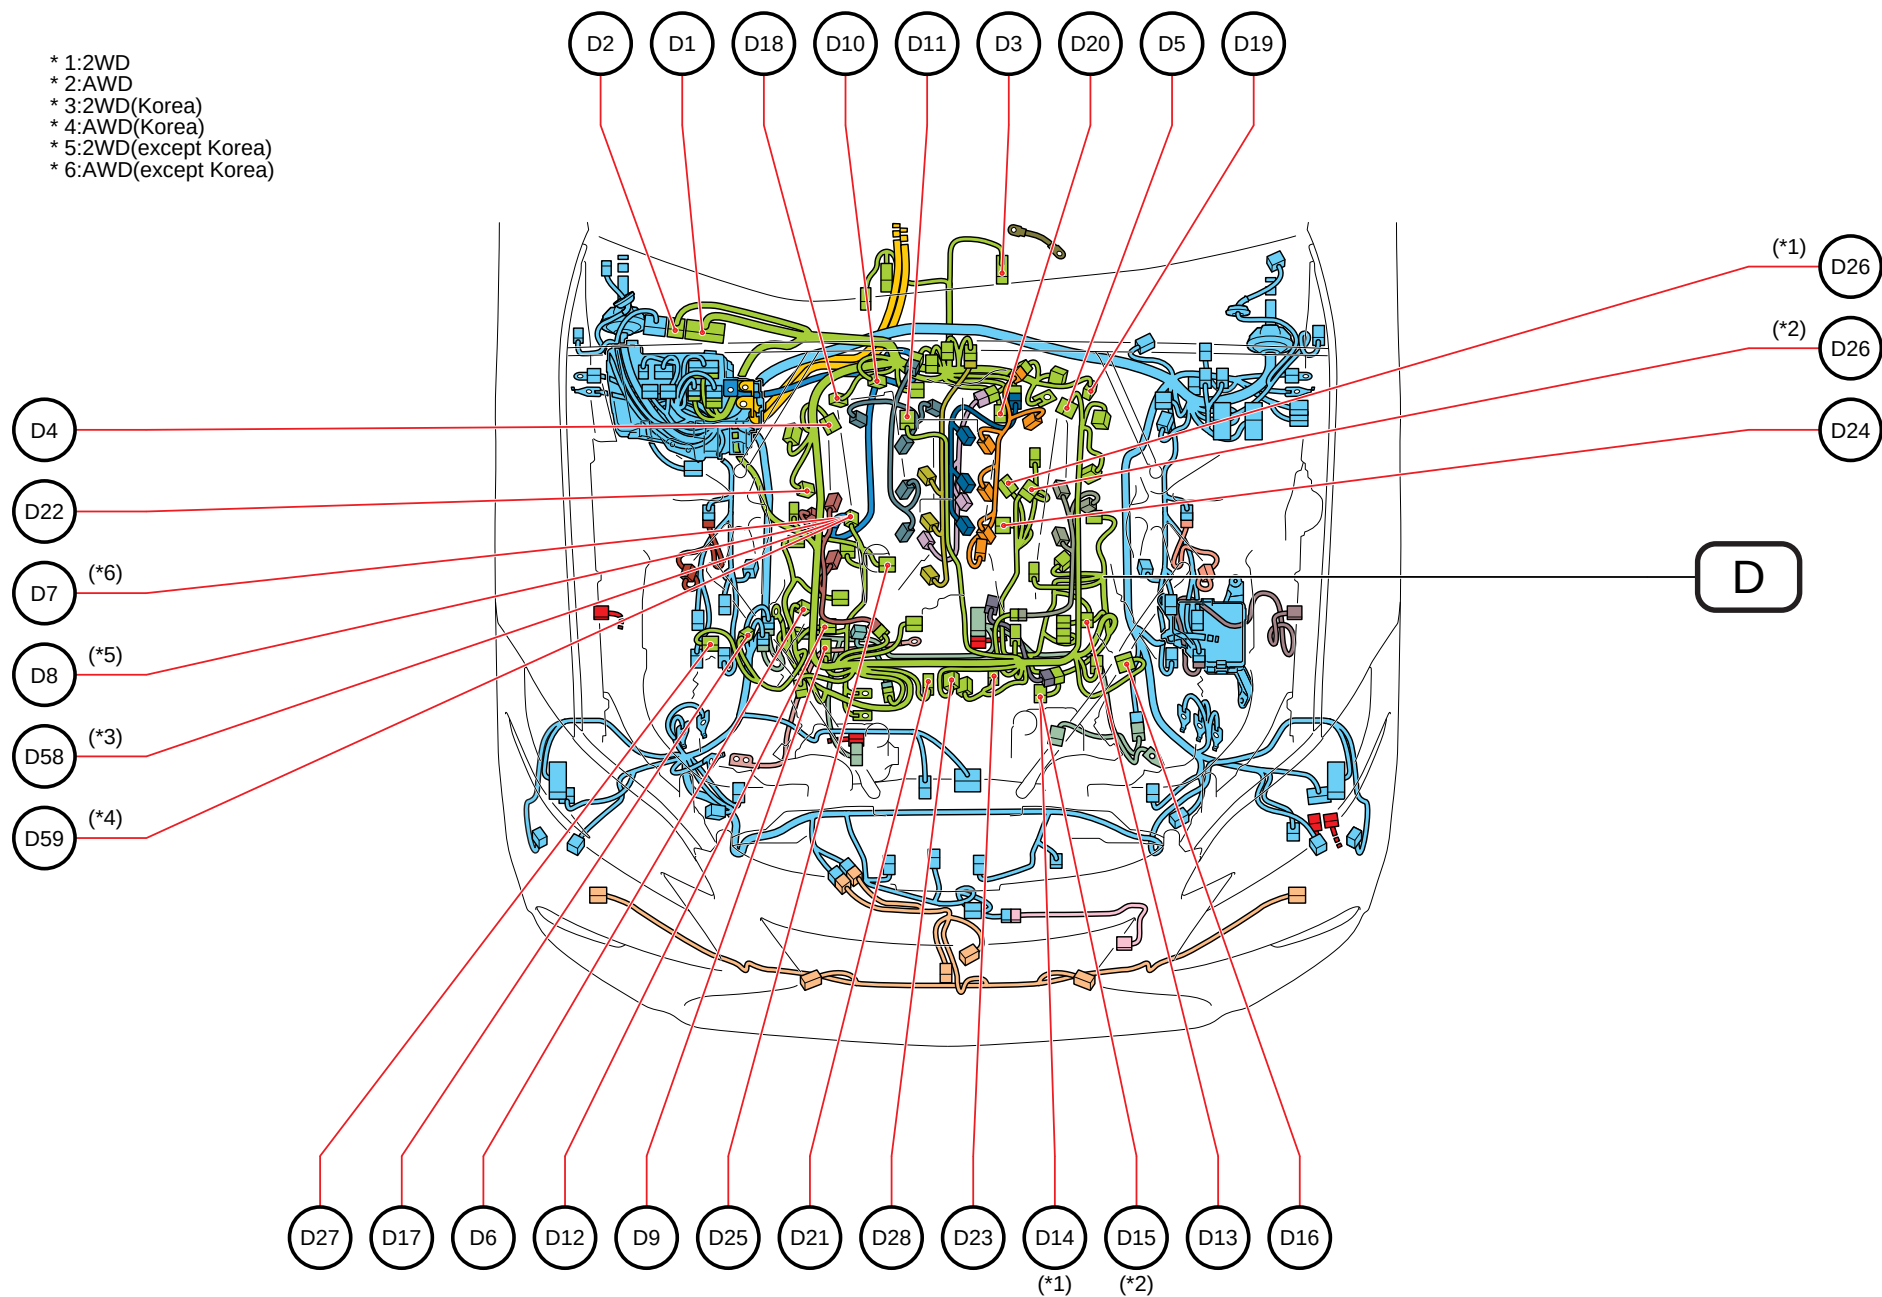

- D 1 ECM
- D 2 ECM
- D 3 Automatic Transmission Assembly (Transmission Wire)
- D 4 Ignition Coil Assembly No. 5
- D 5 Ignition Coil Assembly No. 6
- D 6 Generator Assembly
- D 7 Starter Assembly
- D 8 Starter Assembly
- D 9 Throttle Body with Motor Assembly RH
- D 10 Purge VSV
- D 11 No. 3 Turbo Pressure Sensor
- D 12 Cam Timing Oil Control Solenoid Assembly (Bank 1 Exhaust Side)
- D 13 Cam Timing Oil Control Solenoid Assembly (Bank 2 Exhaust Side)
- D 14 Engine Oil Pressure Switch Assembly
- D 15 Engine Oil Pressure Switch Assembly
- D 16 Intake Mass Air Flow Meter Sub-Assembly LH
- D 17 Intake Mass Air Flow Meter Sub-Assembly RH
- D 18 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- D 19 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- D 20 E.F.I. Engine Coolant Temperature Sensor
- D 21 E.F.I. Engine Coolant Temperature Sensor
- D 22 Fuel Pump Assembly RH
- D 23 Engine Coolant Temperature Sensor
- D 24 Engine Oil Level Sensor
- D 25 Engine Oil Level Sensor
- D 26 Crank Position Sensor
- D 27 VSV (AIRV)
- D 28 No. 1 Turbo Pressure Sensor RH
- D 58 Starter Assembly
- D 59 Starter Assembly

Position of Parts in Engine Compartment <LHD V35A-FTS>

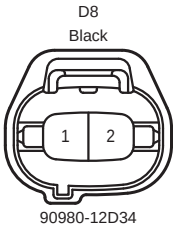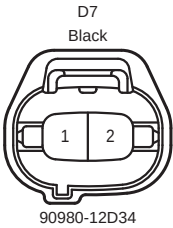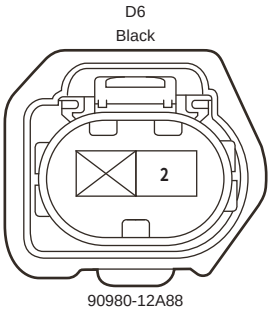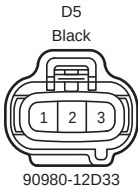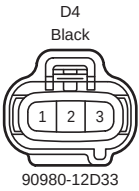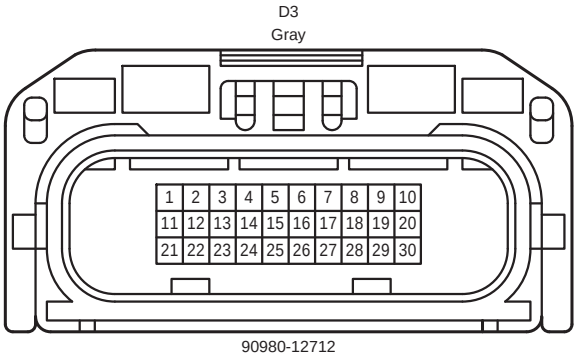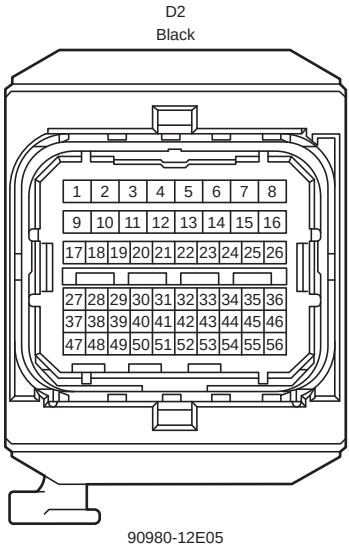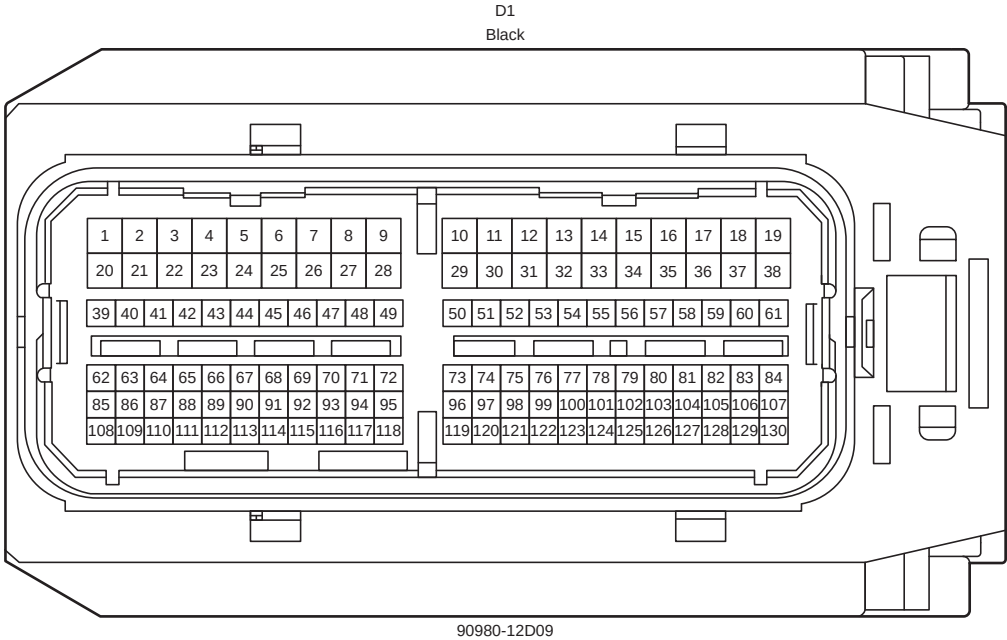

Position of Parts in Engine Compartment <LHD V35A-FTS>

