

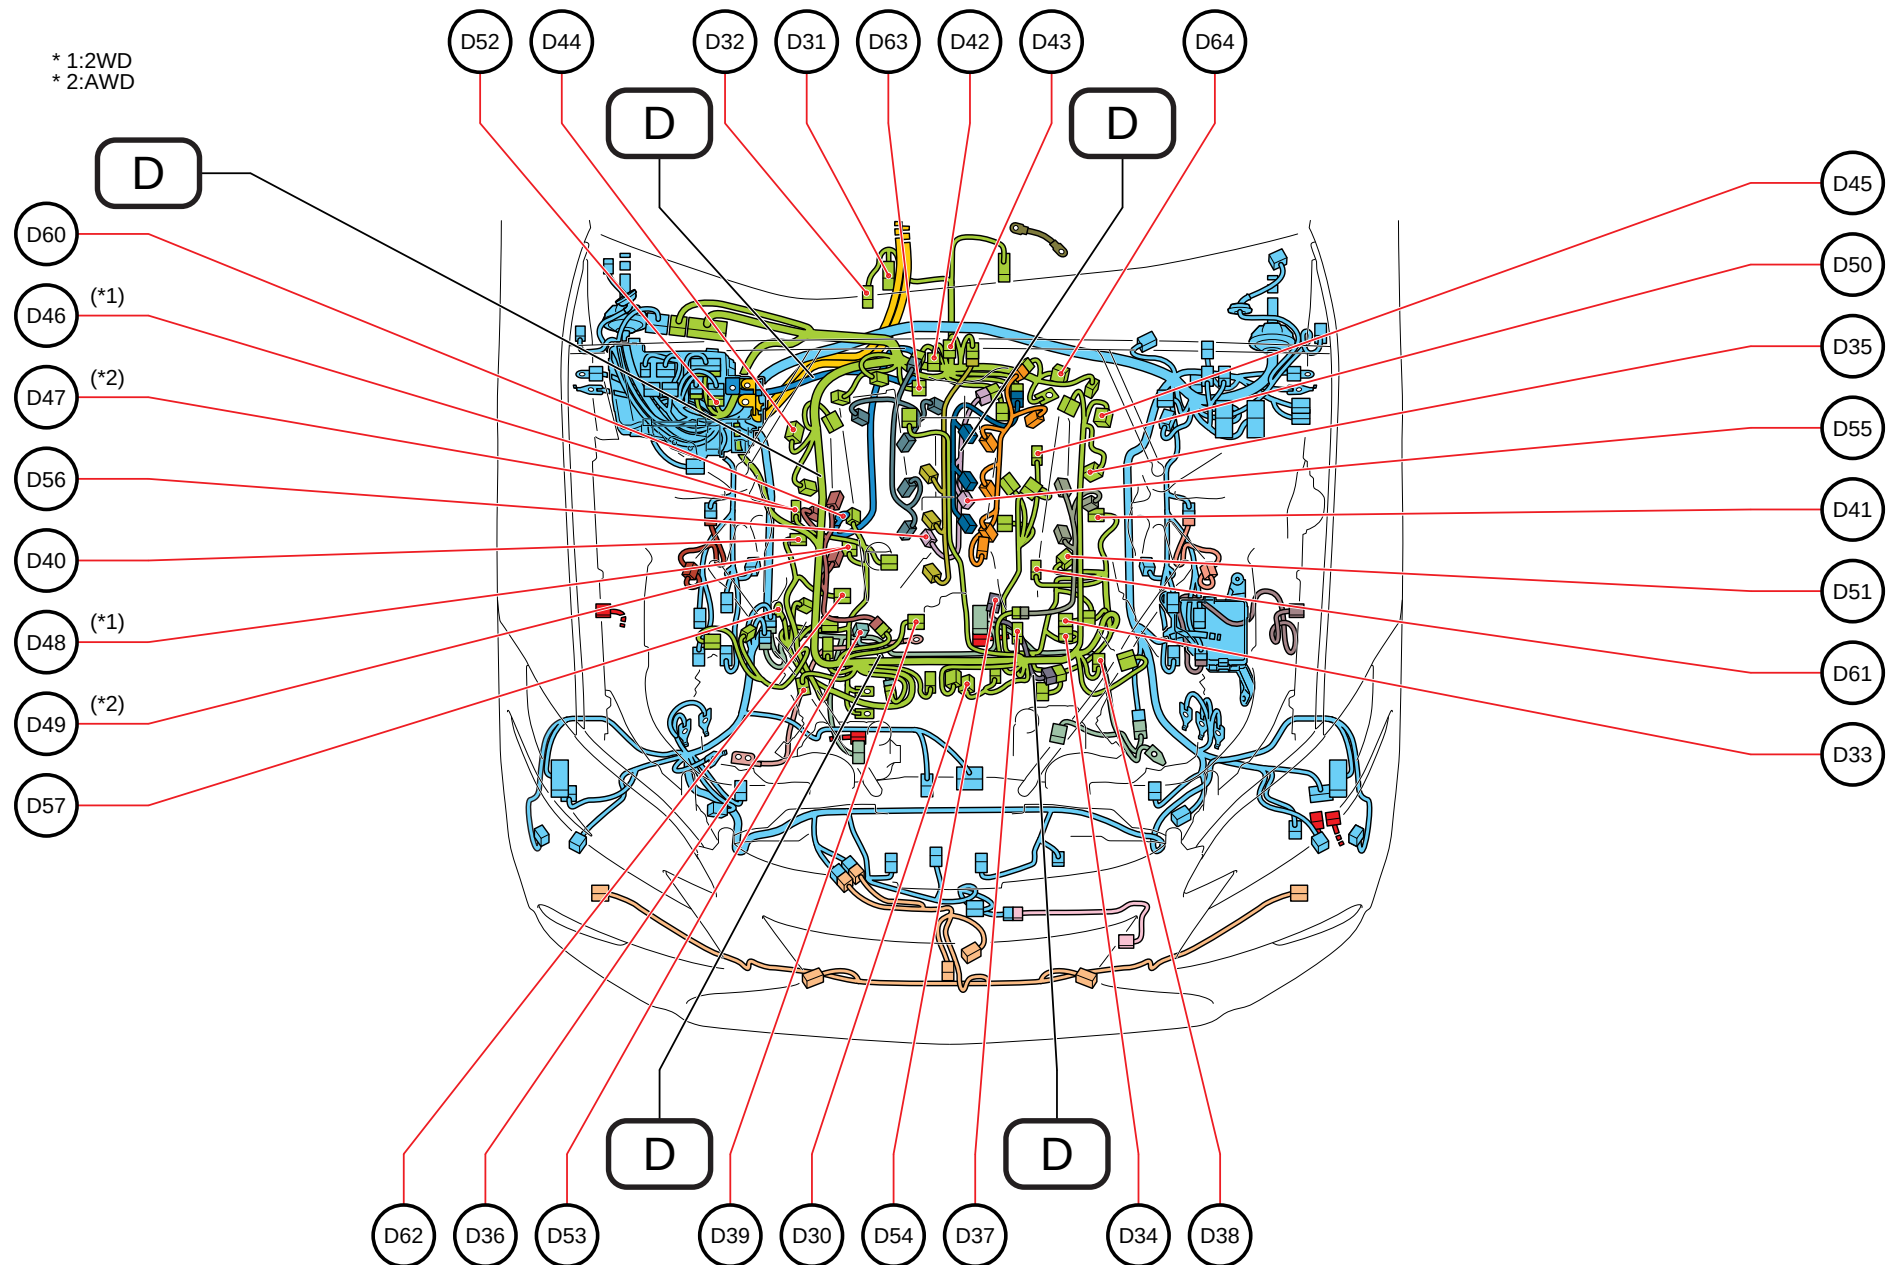
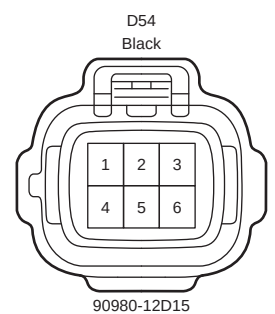
 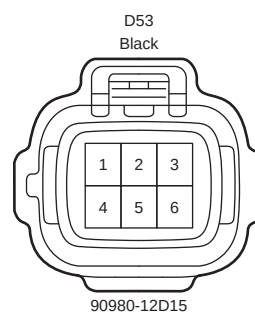
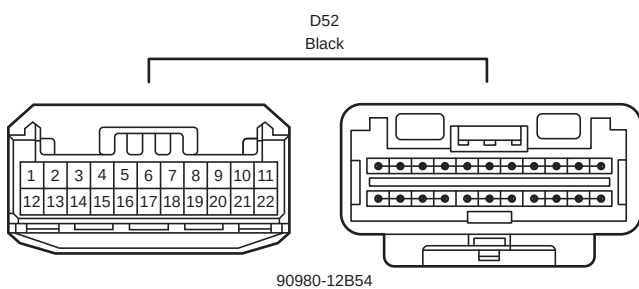

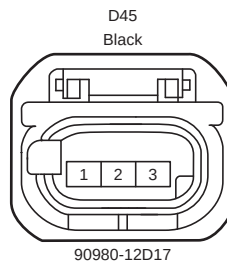
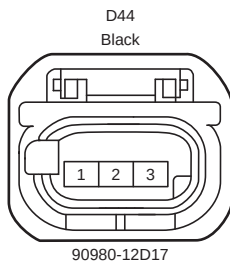
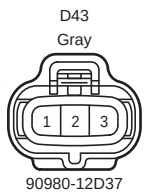
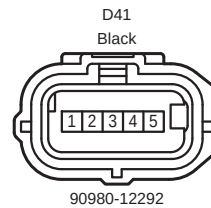
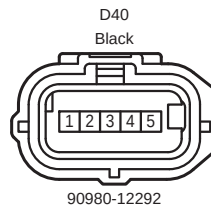
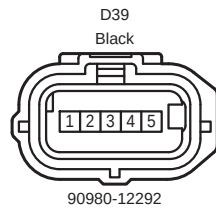
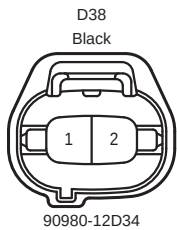
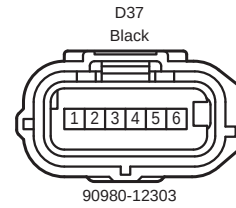
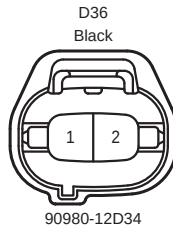
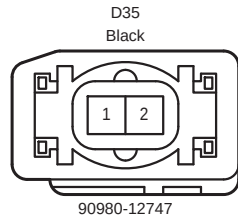
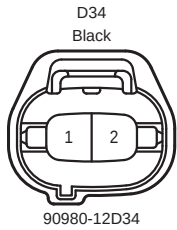
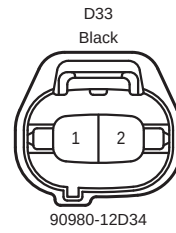
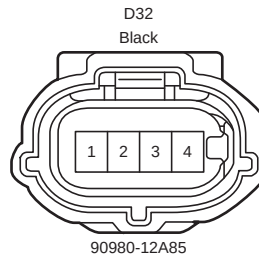


Position of Parts in Engine Compartment <LHD V35A-FTS>

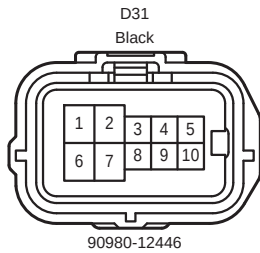

- D 30 No. 1 Turbo Pressure Sensor LH
- D 31 Shift Control Actuator Assembly
- D 32 Shift Control Actuator Assembly
- D 33 Compressor with Pulley Assembly
- D 34 Compressor with Pulley Assembly
- D 35 Fuel Pump Assembly LH
- D 36 Air By-Pass Valve Assembly RH
- D 37 Throttle Body with Motor Assembly LH
- D 38 Air By-Pass Valve Assembly LH
- D 39 Water Control Valve
- D 40 No. 1 Turbocharger Sub-Assembly
- D 41 No. 2 Turbocharger Sub-Assembly
- D 42 No. 2 Turbo Pressure Sensor RH
- D 43 No. 2 Turbo Pressure Sensor LH
- D 44 E.F.I. Vacuum Sensor Assembly RH
- D 45 E.F.I. Vacuum Sensor Assembly LH
- D 46 Starter Assembly
- D 47 Starter Assembly
- D 48 Air Fuel Ratio Sensor (Bank 1 Sensor 2)
- D 49 Air Fuel Ratio Sensor (Bank 1 Sensor 2)
- D 50 Air Fuel Ratio Sensor (Bank 2 Sensor 2)
- D 51 Air Fuel Ratio Sensor (Bank 2 Sensor 2)
- D 52 No. 3 Junction Connector
- D 53 Cam Timing Oil Control Motor with EDU Assembly RH
- D 54 Cam Timing Oil Control Motor with EDU Assembly LH
- D 55 Knock Control Sensor (Bank 2)
- D 56 Knock Control Sensor (Bank 1)
- D 57 Generator Assembly
- D 60 Starter Assembly
- D 61 Oil Pressure Switching Valve Assembly
- D 62 Oil Pressure Sender Gage Assembly
- D 63 Differential Pressure Sensor RH
- D 64 Differential Pressure Sensor LH

Position of Parts in Engine Compartment <LHD V35A-FTS>

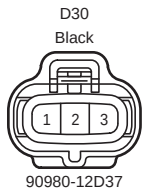

Position of Parts in Engine Compartment <LHD V35A-FTS>

