


Position of Parts in Engine Compartment <LHD V35A-FTS>

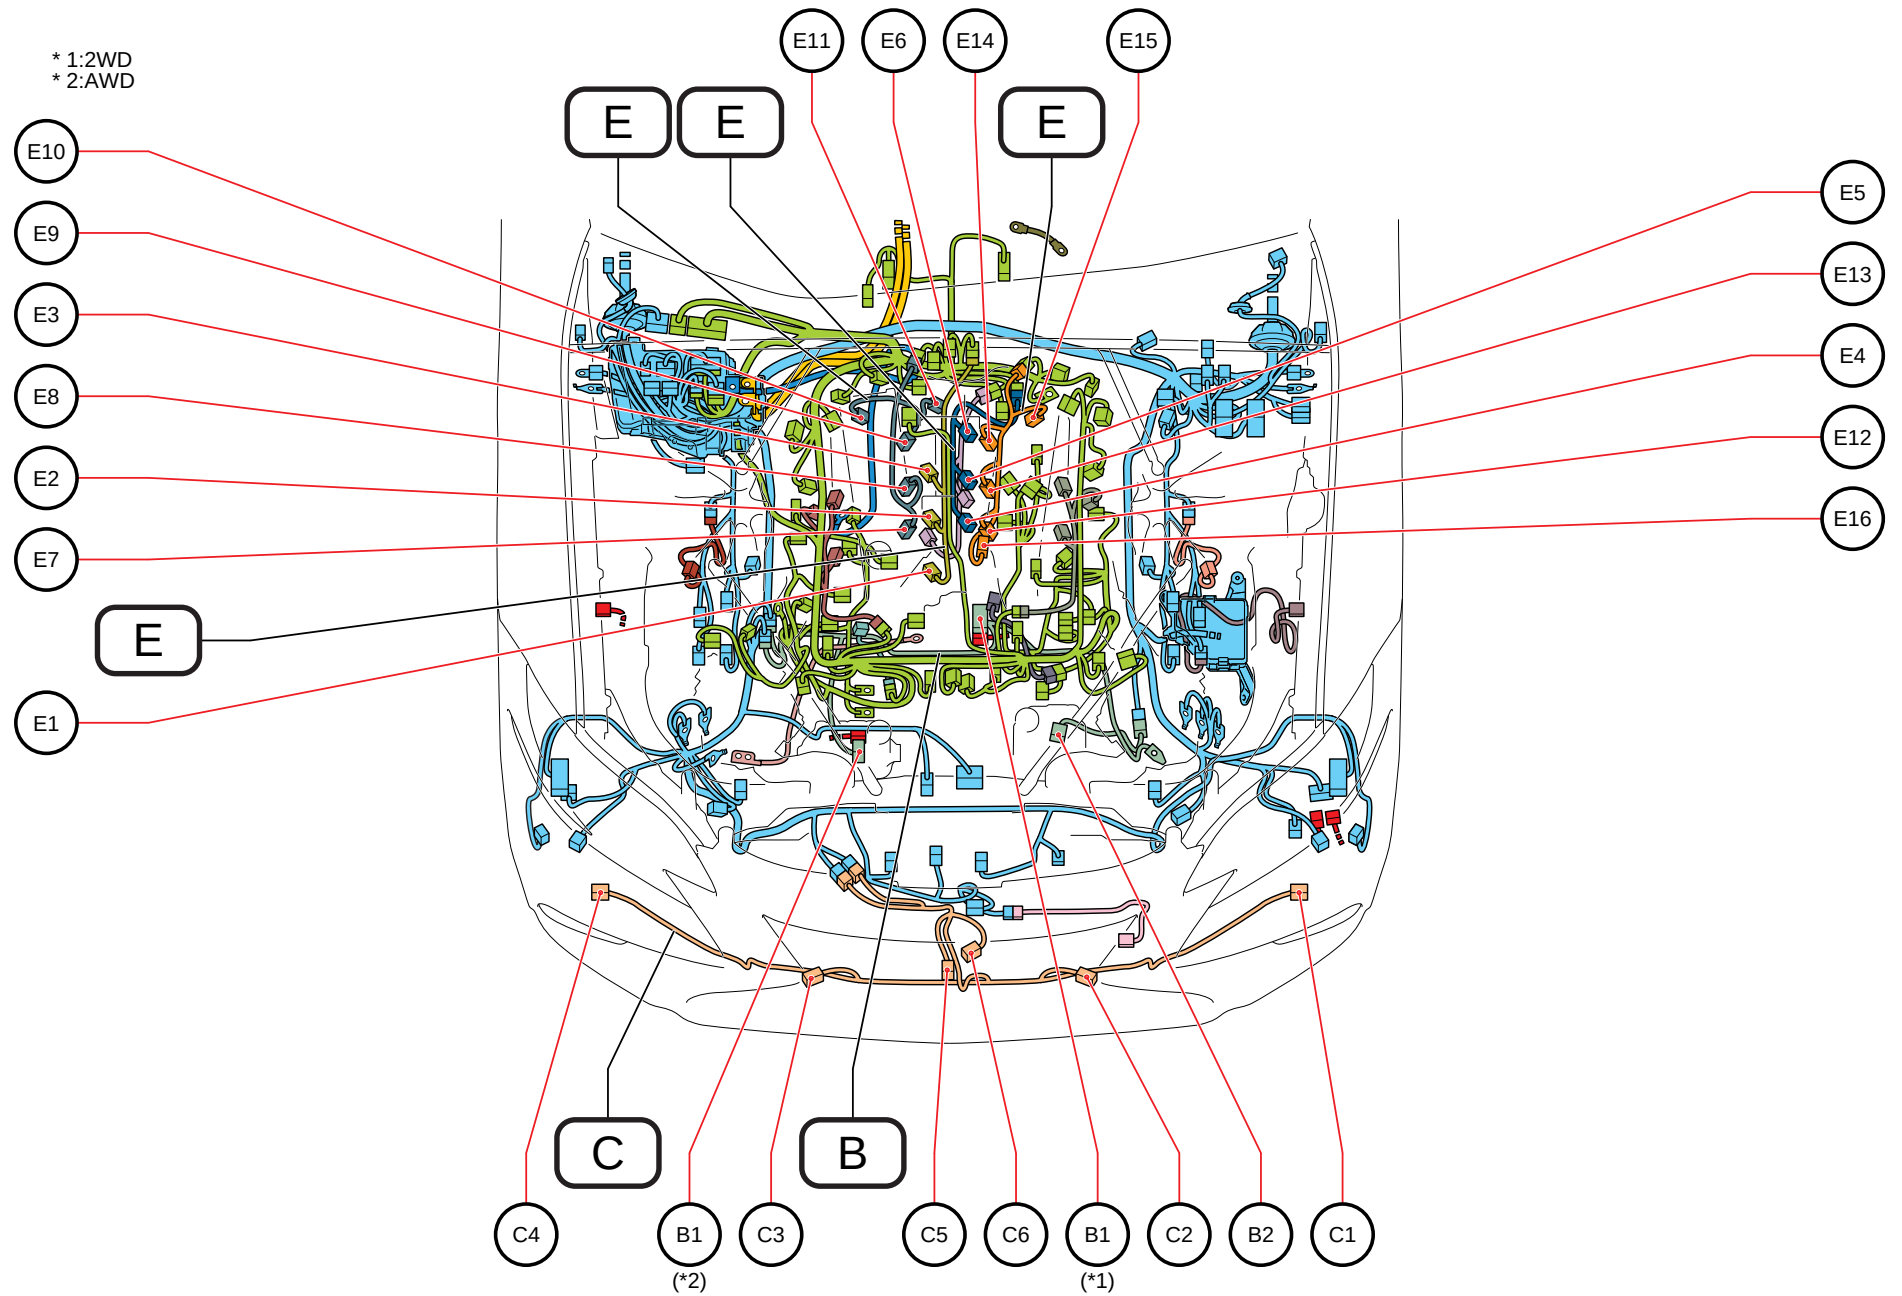

B 1 EPS ECU (Rack & Pinion Power Steering Gear Assembly)

B 2 Electric Water Pump Assembly

C 1 Front Ultrasonic Sensor Corner LH

C 2 Front Ultrasonic Sensor Center LH

C 3 Front Ultrasonic Sensor Center RH

C 4 Front Ultrasonic Sensor Corner RH

C 5 Front Television Camera Assembly

C 6 Millimeter Wave Radar Sensor Assembly

E 1 Fuel Injector Assembly No. 1 (for Direct Injection)

E 2 Fuel Injector Assembly No. 3 (for Direct Injection)

E 3 Fuel Injector Assembly No. 5 (for Direct Injection)

E 4 Fuel Injector Assembly No. 2 (for Direct Injection)

E 5 Fuel Injector Assembly No. 4 (for Direct Injection)

E 6 Fuel Injector Assembly No. 6 (for Direct Injection)

E 7 Fuel Injector Assembly No. 1 (for Port Injection)

E 8 Fuel Injector Assembly No. 3 (for Port Injection)

E 9 Fuel Injector Assembly No. 5 (for Port Injection)

E 10 VVT Sensor (Bank 1 Intake Side)

E 11 Fuel Pressure Sensor (High Pressure Side)

E 12 Fuel Injector Assembly No. 2 (for Port Injection)

















E 13 Fuel Injector Assembly No. 4 (for Port Injection)

E 14 Fuel Injector Assembly No. 6 (for Port Injection)

E 15 VVT Sensor (Bank 2 Intake Side)


E 16 Fuel Pressure Sensor (Low Pressure Side)

Position of Parts in Engine Compartment <LHD V35A-FTS>

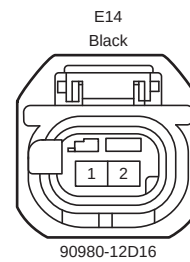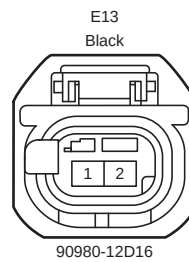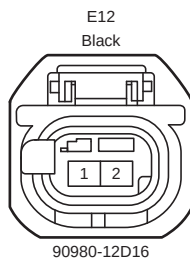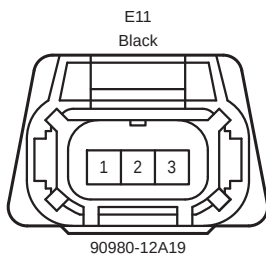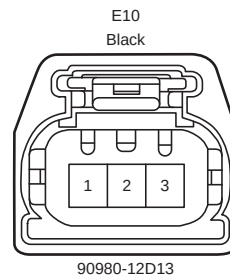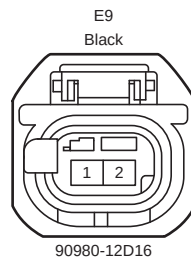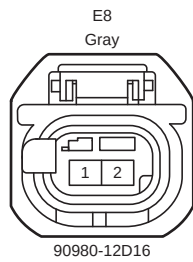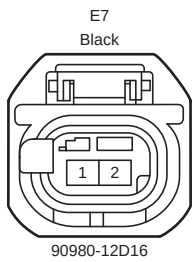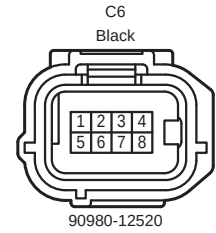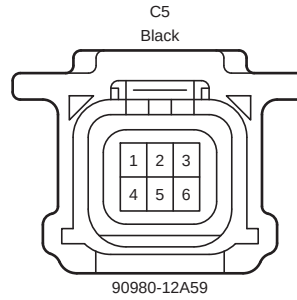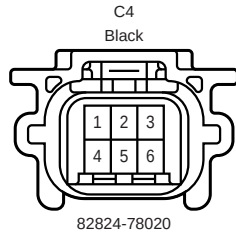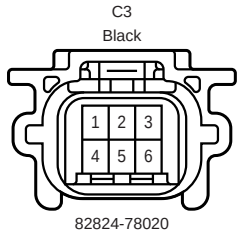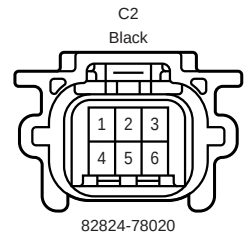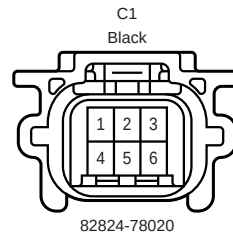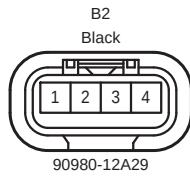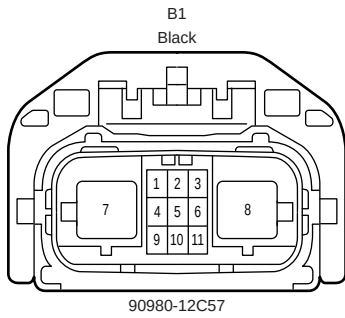


Position of Parts in Engine Compartment <LHD V35A-FTS>

E15
Black

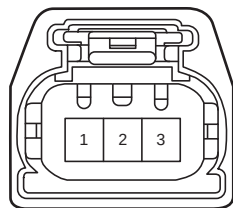

90980-12D13

E16
Black

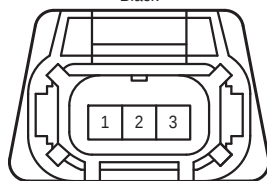

90980-12A19