


Position of Parts in Instrument Panel <LHD>

* 1:Refer to the Service Bulletin
for the installation position of the parts.













 
 
* 6:for Stereo Camera type

* 7:for Mono Camera type










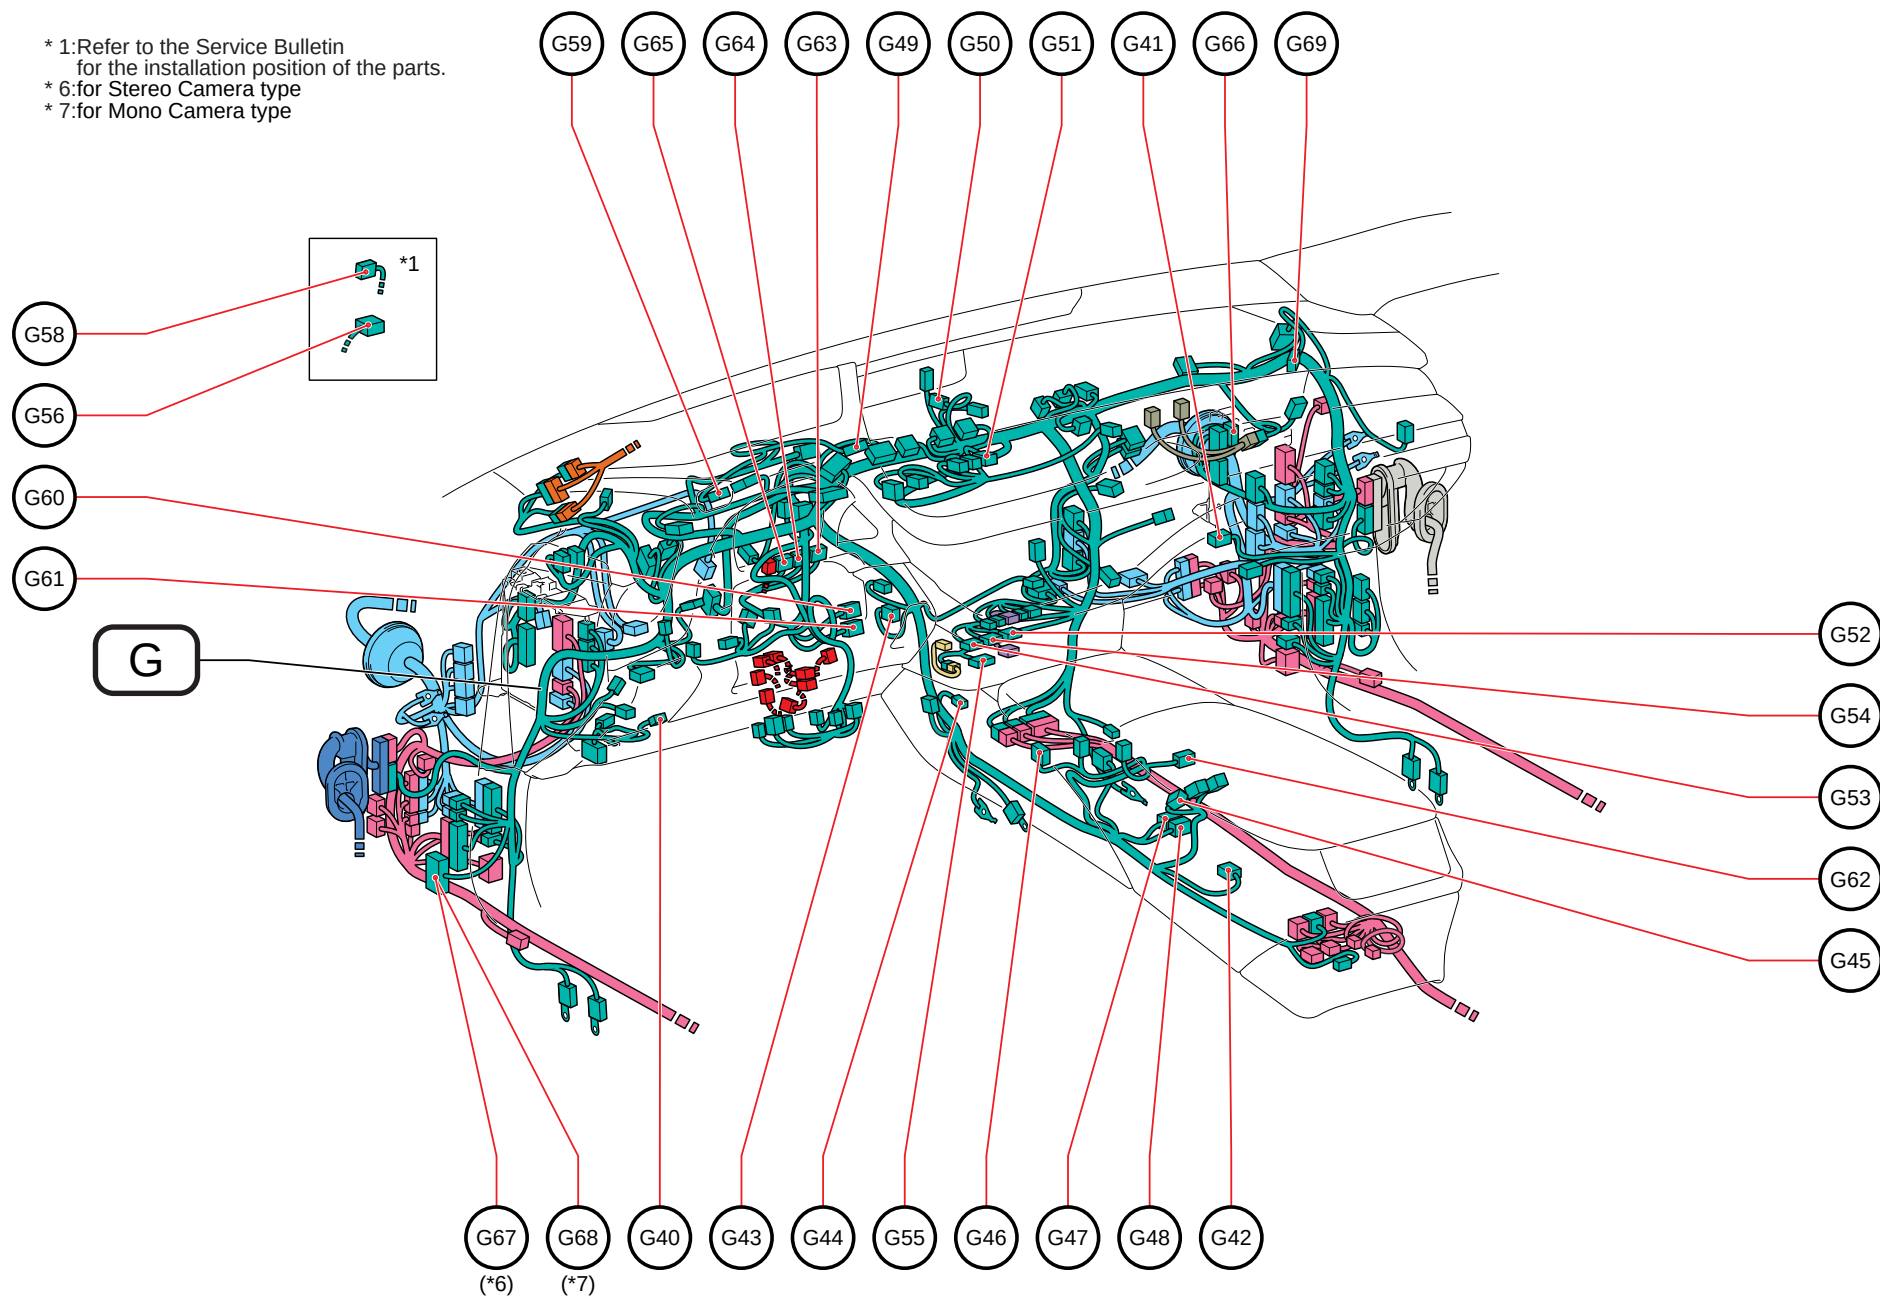


- 40 Lower No. 1 Instrument Panel Airbag Assembly
- 41 Lower No. 2 Instrument Panel Airbag Assembly
- 42 Yaw Rate Sensor
- 43 Electric Parking Brake Switch Assembly
- 44 No. 1 Indoor Electrical Key Antenna Assembly
- 45 No. 1 Power Outlet Socket Assembly
- 46 Shift Position Indicator
- 47 Pedestrian Detection ECU Assembly
- 48 Pedestrian Detection ECU Assembly
- 49 Satellite Switch Set
- 50 Front No. 3 Speaker Assembly
- 51 Multi-Display
- 52 Radio Receiver Assembly
- 53 Radio Receiver Assembly
- 54 Radio Receiver Assembly
- 55 Navigation ECU
- 56 Telematics Transceiver Assembly
- 58 ID Code Box
- 59 No.2 Satellite Switch Set
- 60 Quick Heater Assembly
- 61 Quick Heater Assembly
- 62 No. 1 Power Outlet Socket Assembly
- 63 Air Conditioning Amplifier Assembly
- 64 Air Conditioning Amplifier Assembly
- 65 Air Conditioning Amplifier Assembly
- 66 Network Gateway ECU
- 67 Driving Support ECU Assembly
- 68 Driving Support ECU Assembly
- 69 Front No. 2 Speaker Assembly RH

Position of Parts in Instrument Panel <LHD>

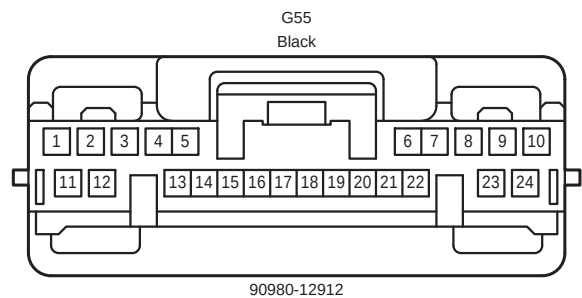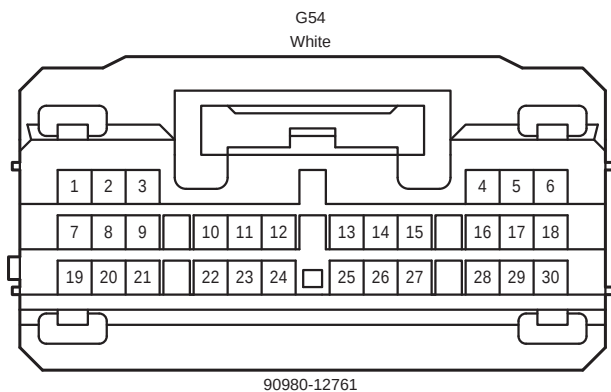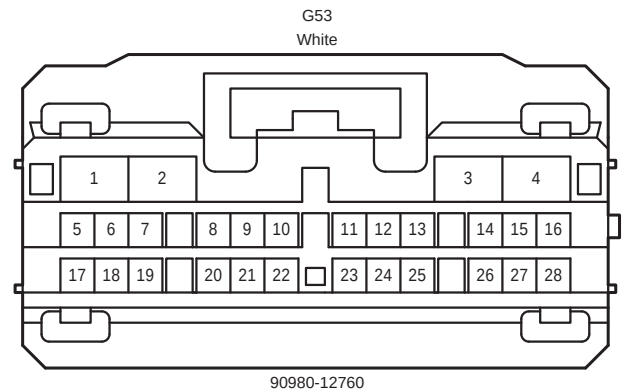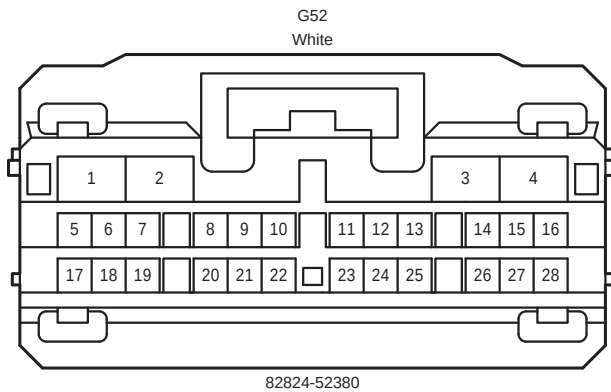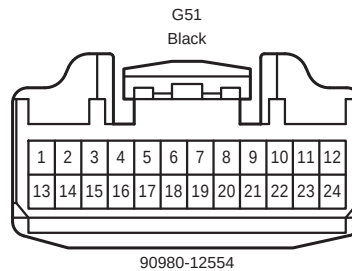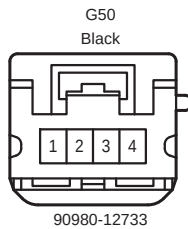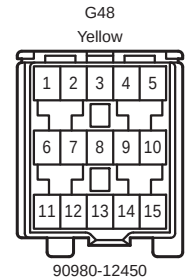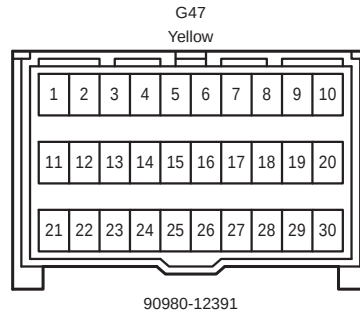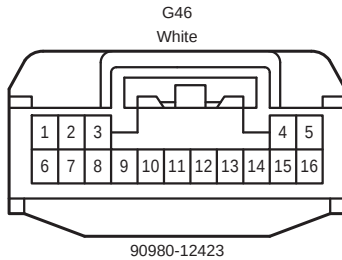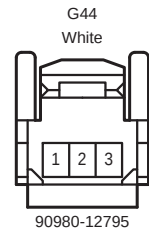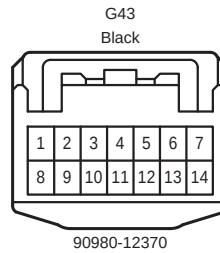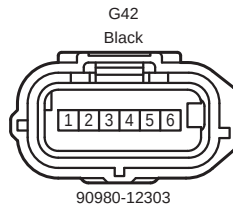

Position of Parts in Instrument Panel <LHD>

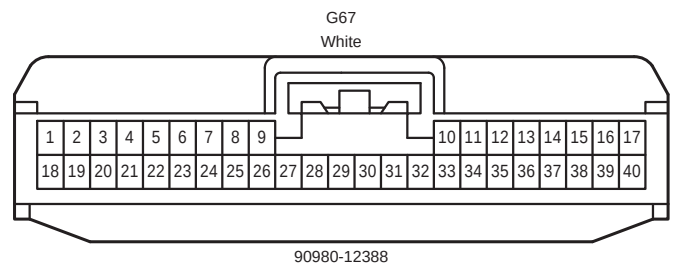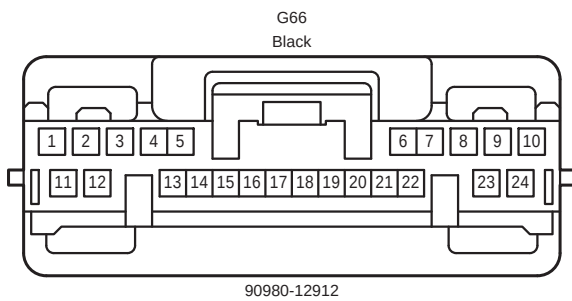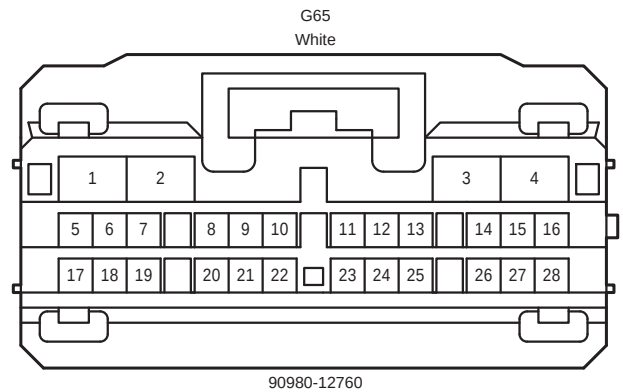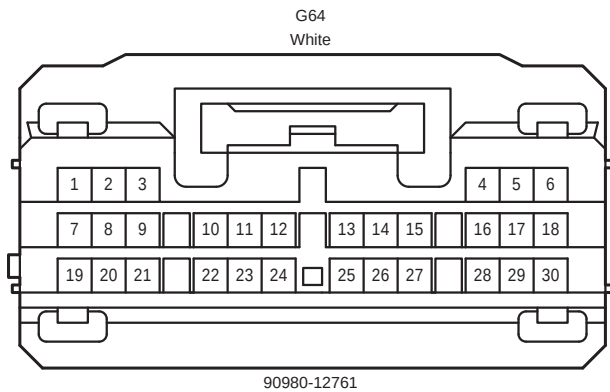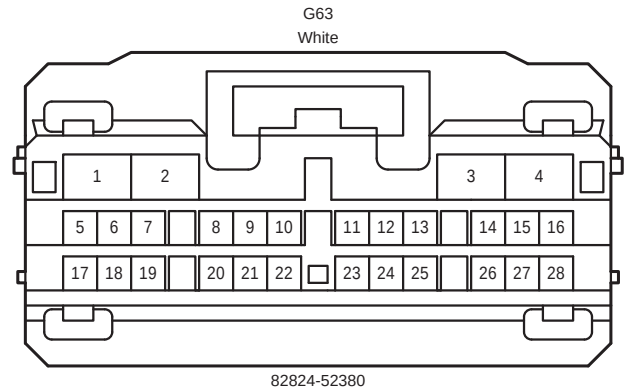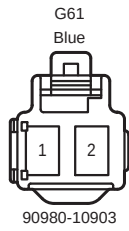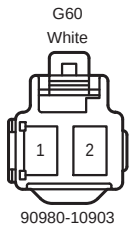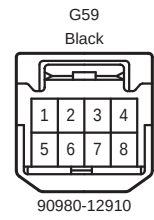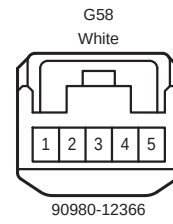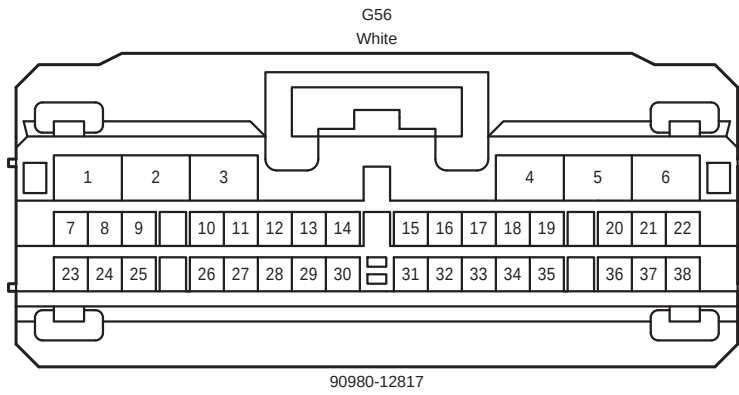

Position of Parts in Instrument Panel <LHD>

