


Position of Parts in Instrument Panel <LHD>

 













*1 : Refer to the Service Bulletin
for the installation position of the parts.

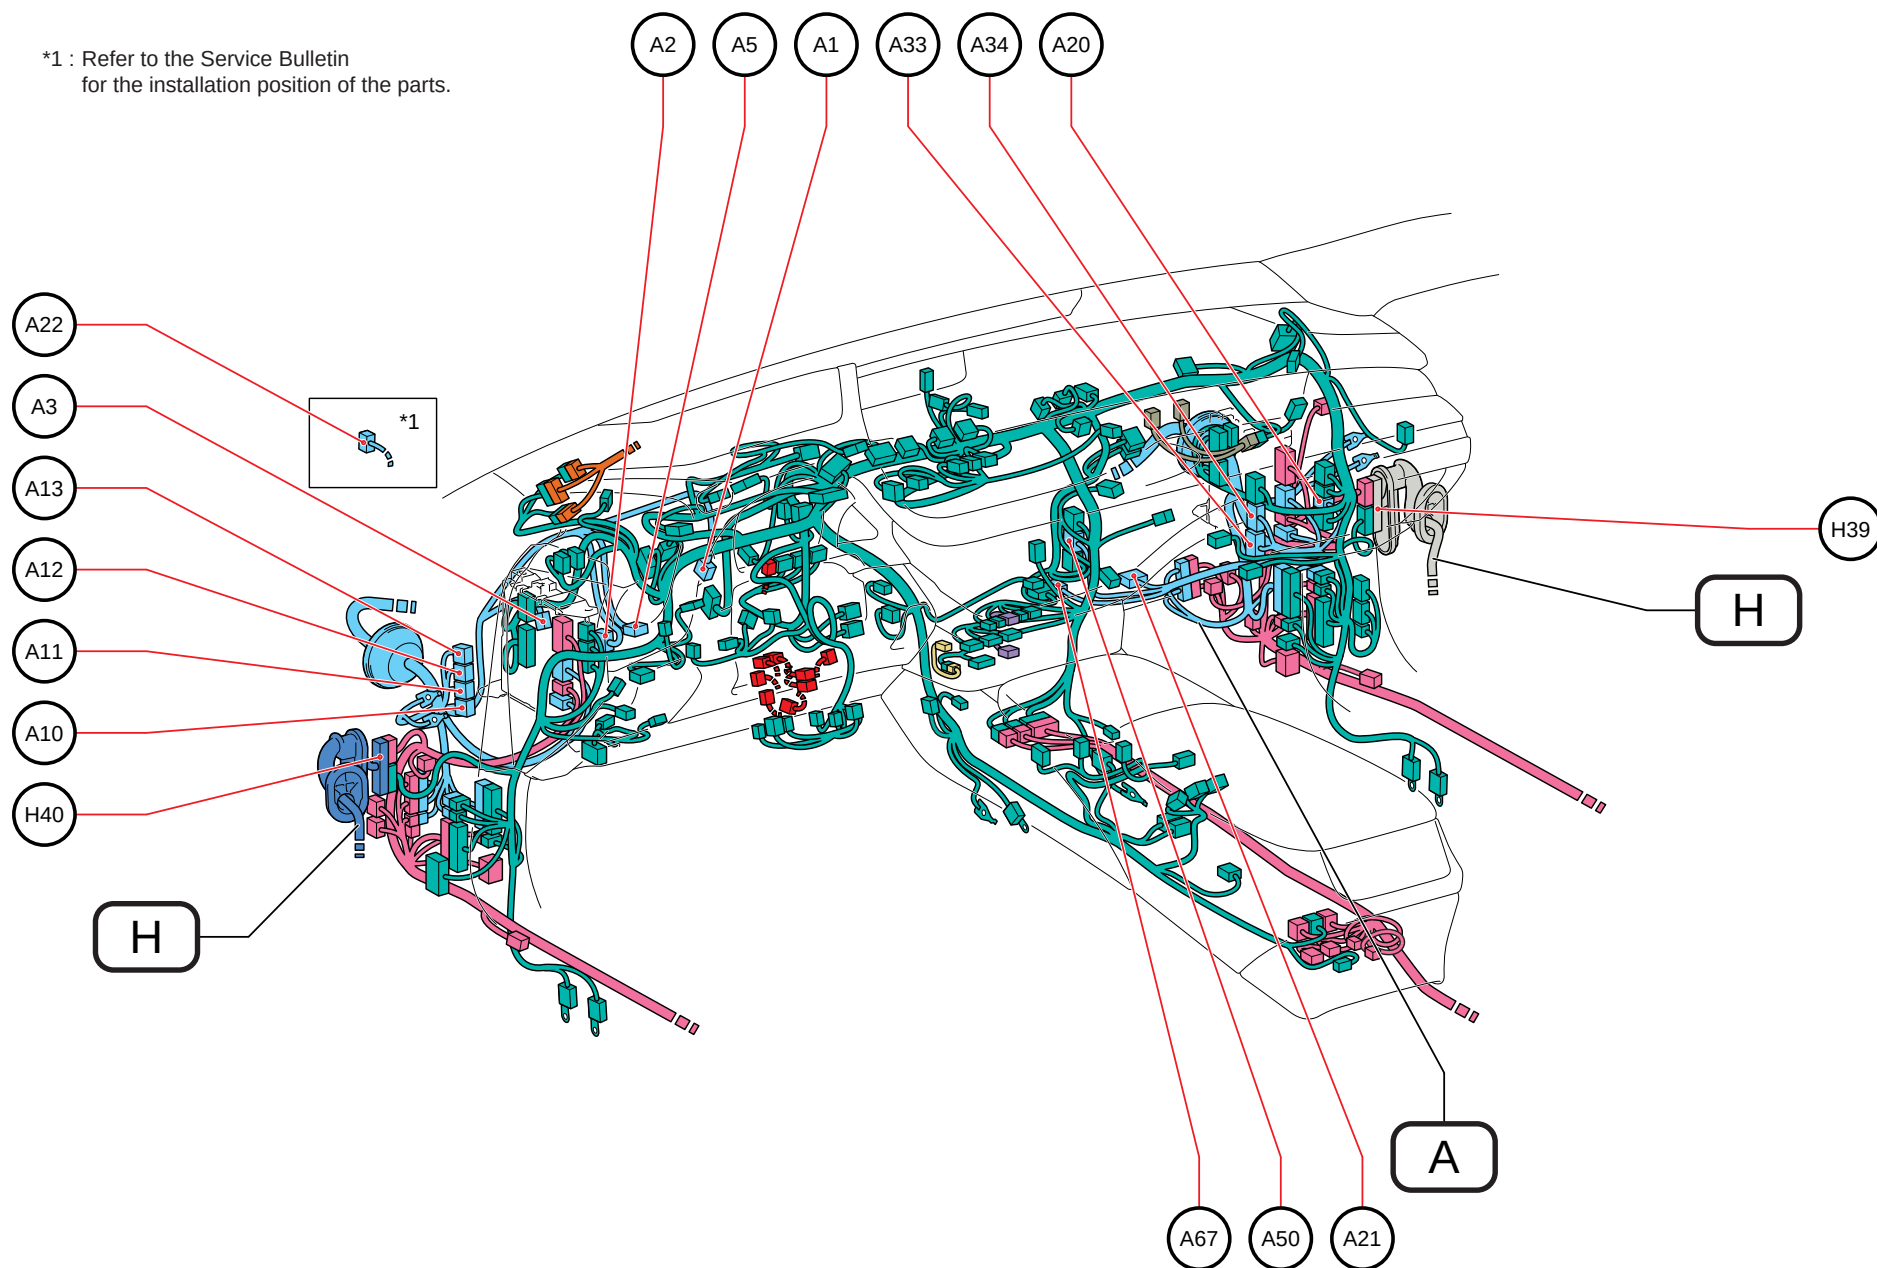



- A 1 Accelerator Pedal Sensor Assembly
- A 2 Brake Pedal Stroke Sensor Assembly
- A 3 Stop Light Switch Assembly
- A 5 Brake Pedal Load Sensing Switch
- A 10 Skid Control ECU Assembly
- A 11 Skid Control ECU Assembly
- A 12 Skid Control ECU Assembly
- A 13 Skid Control ECU Assembly
- A 20 Front Steering Control ECU
- A 21 Blower Motor with Fan Sub-Assembly
- A 22 Certification ECU Assembly
- A 33 Engine Stop and Start ECU
- A 34 Engine Stop and Start ECU
- A 50 Shift Control ECU
- A 67 No. 2 Semiconductor Power Integration ECU

- H 39 No. 1 Short Connector
- H 40 No. 2 Short Connector

Position of Parts in Instrument Panel <LHD>

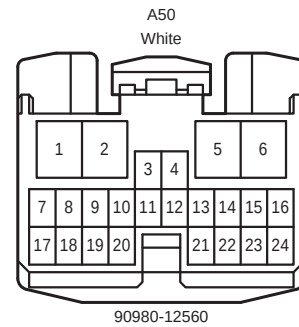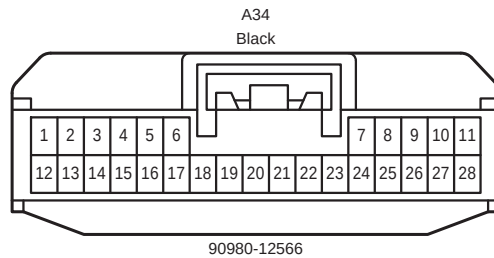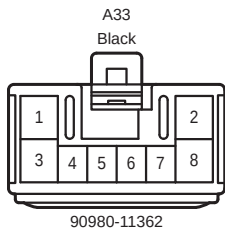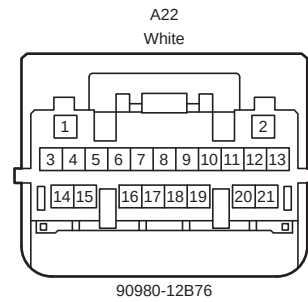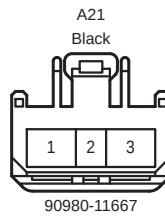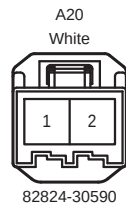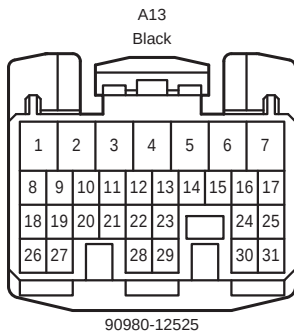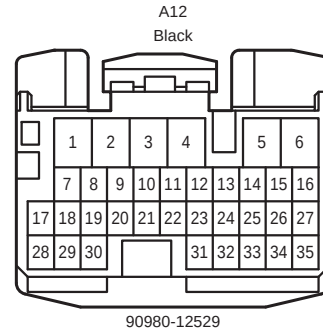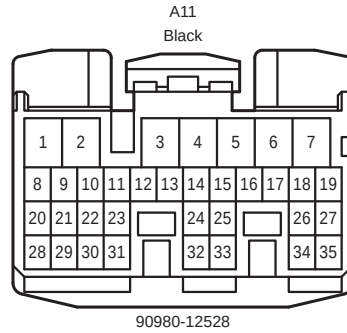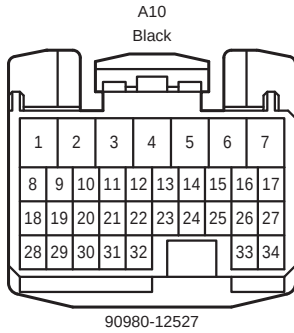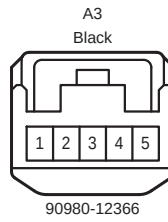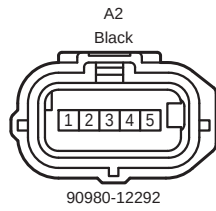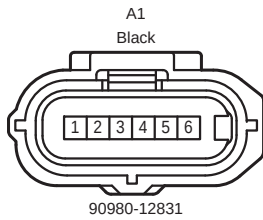

Position of Parts in Instrument Panel <LHD>

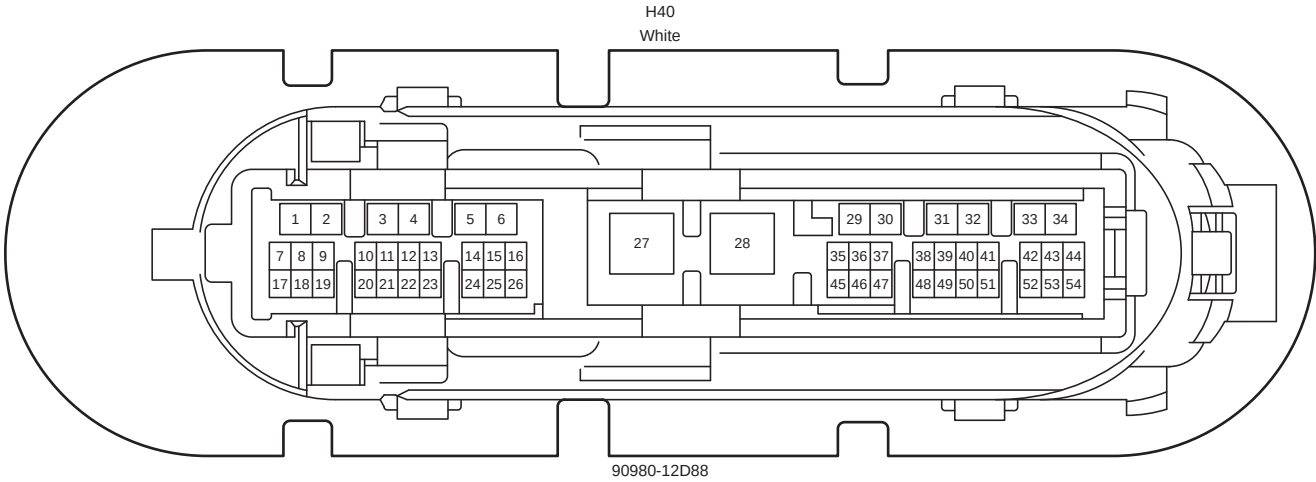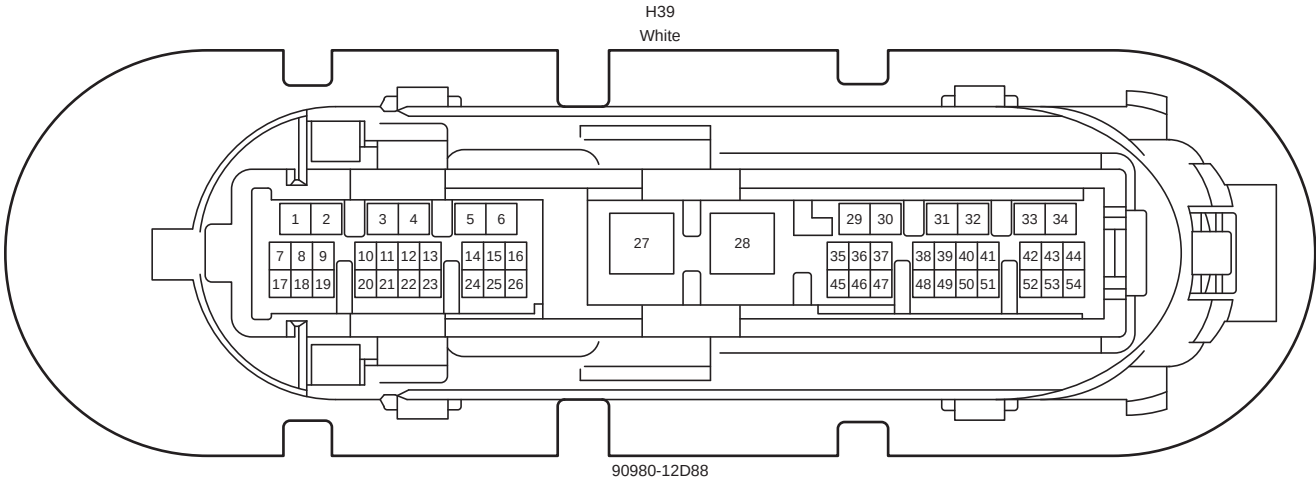

90980-12D88