


Position of Parts in Instrument Panel <RHD>

*1 : Refer to the Service Bulletin
for the installation position of the parts.













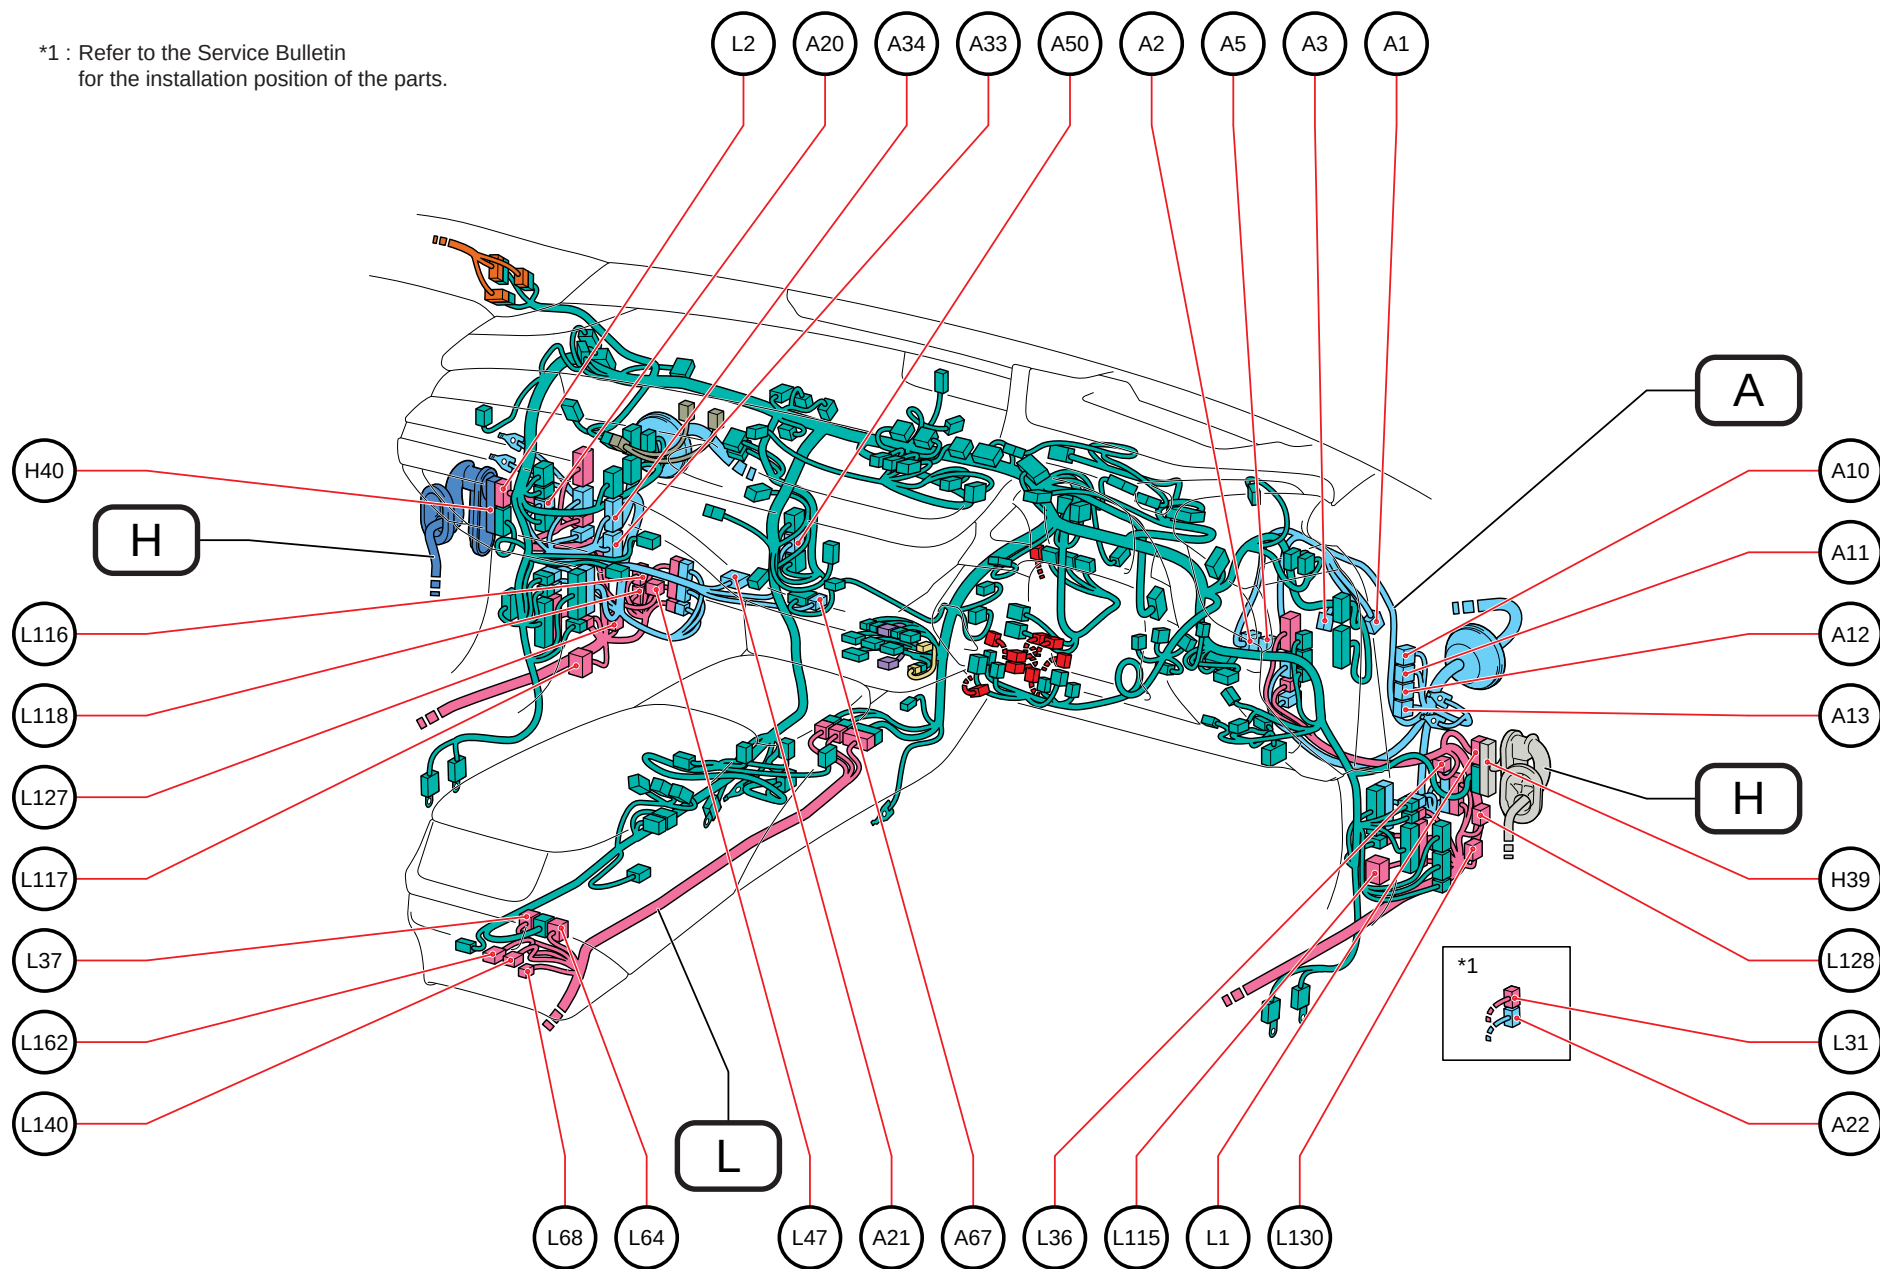


A 1 Accelerator Pedal Sensor Assembly
 A 2 Brake Pedal Stroke Sensor Assembly
 A 3 Stop Light Switch Assembly
 A 5 Brake Pedal Load Sensing Switch
 A 10 Skid Control ECU Assembly
 A 11 Skid Control ECU Assembly
 A 12 Skid Control ECU Assembly
 A 13 Skid Control ECU Assembly
 A 20 Front Steering Control ECU
 A 21 Blower Motor with Fan Sub-Assembly
 A 22 Certification ECU Assembly
 A 33 Engine Stop and Start ECU
 A 34 Engine Stop and Start ECU
 A 50 Shift Control ECU
 A 67 No. 2 Semiconductor Power Integration ECU









H 39 No. 1 Short Connector
 H 40 No. 2 Short Connector

L 1 No. 1 Short Connector
 L 2 No. 2 Short Connector
 L 31 Certification ECU Assembly
 L 36 Acceleration Sensor Assembly RH
 L 37 Airbag ECU Assembly
 L 47 Acceleration Sensor Assembly LH
 L 64 Airbag ECU Assembly
 L 68 No. 1 Rear Power Outlet Socket Assembly
 L 115 No. 10 CAN Junction Connector
 L 116 No. 11 CAN Junction Connector
 L 117 No. 12 CAN Junction Connector
 L 118 No. 13 CAN Junction Connector
 L 127 No. 24 CAN Junction Connector
 L 128 No. 25 CAN Junction Connector
 L 130 No. 6 CAN Junction Terminal
 L 140 Disk Player Assembly
 L 162 Disk Player Assembly







Position of Parts in Instrument Panel <RHD>

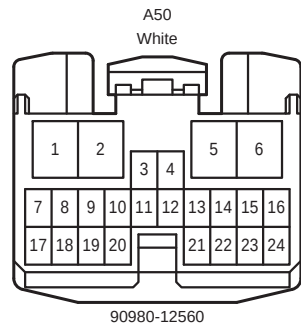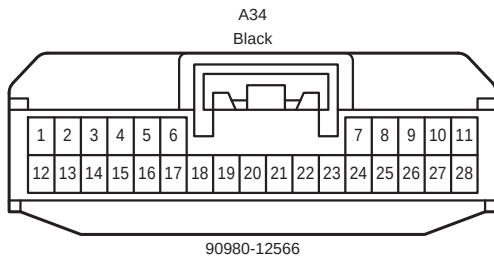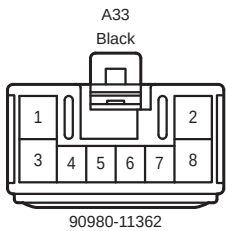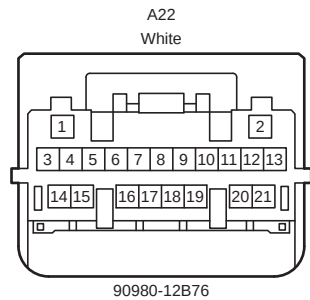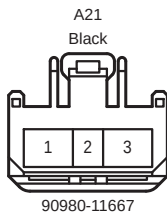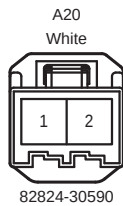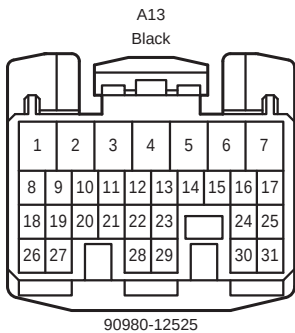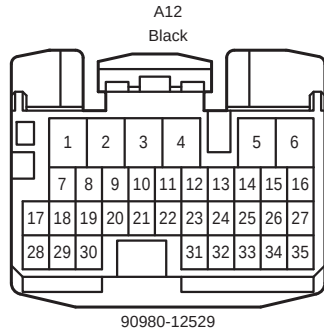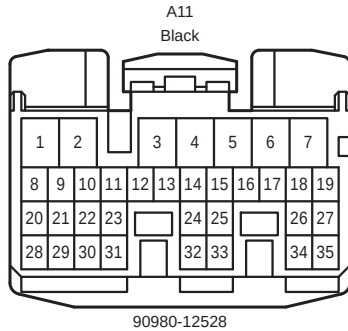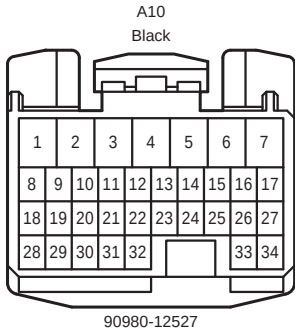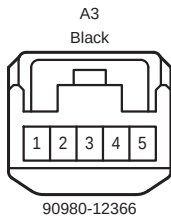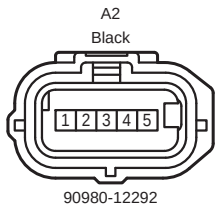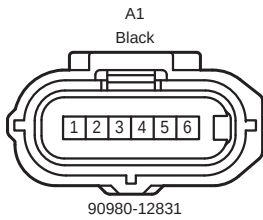

Position of Parts in Instrument Panel <RHD>

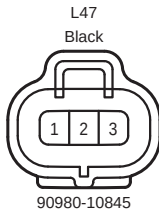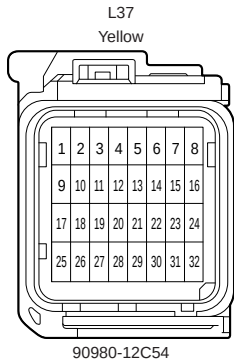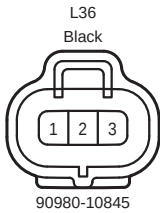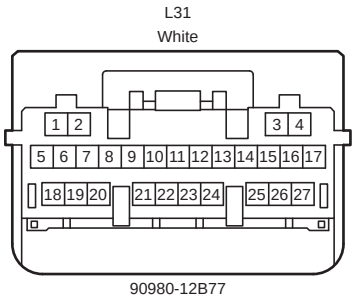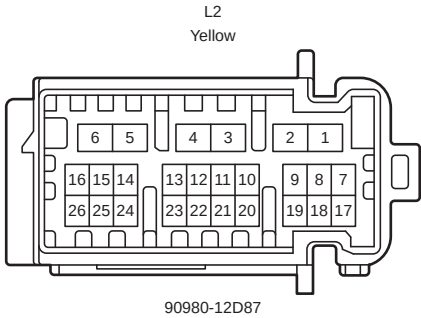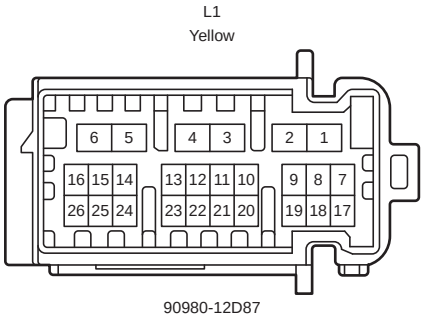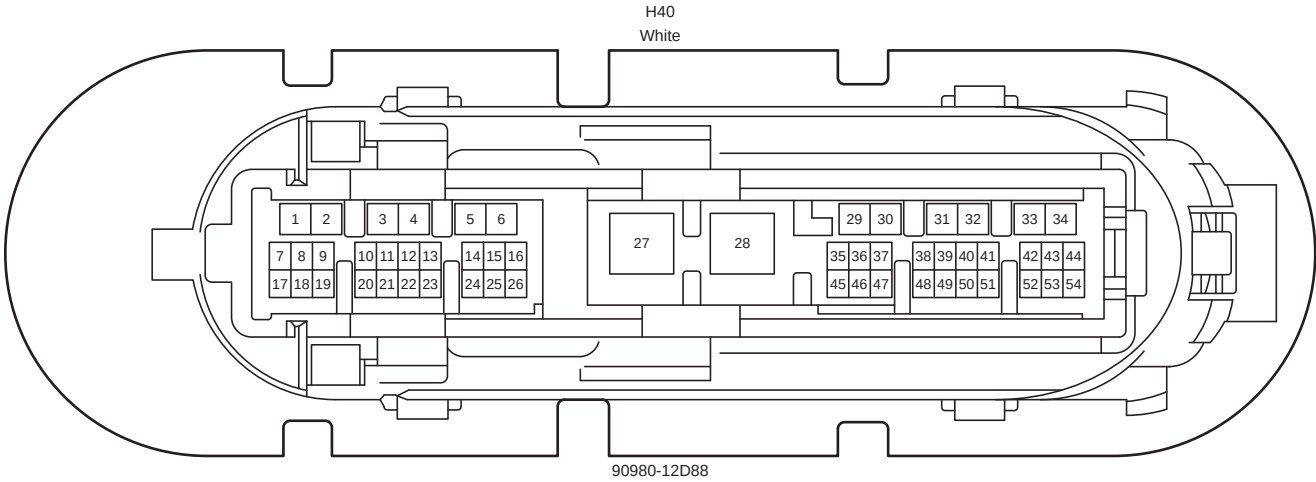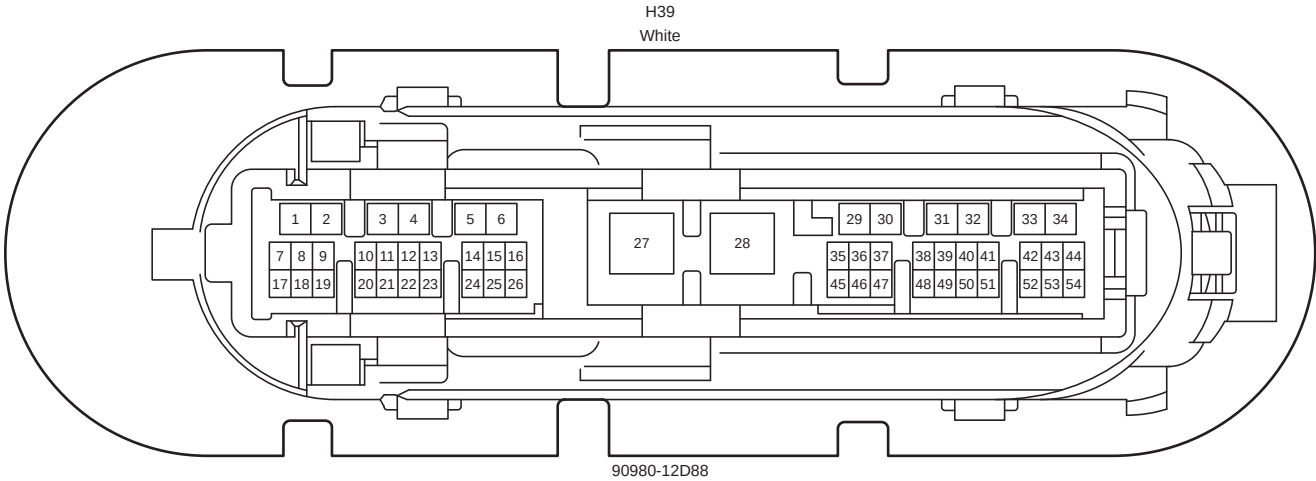

Position of Parts in Instrument Panel <RHD>

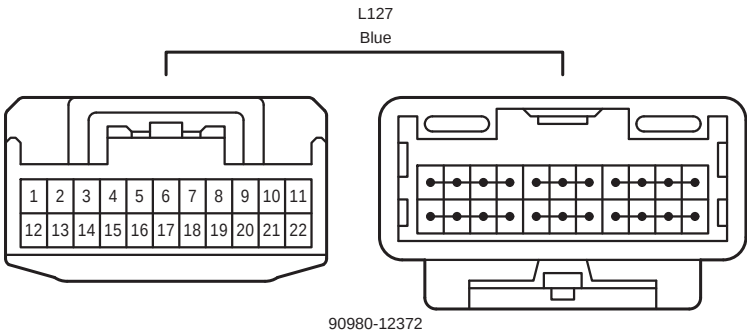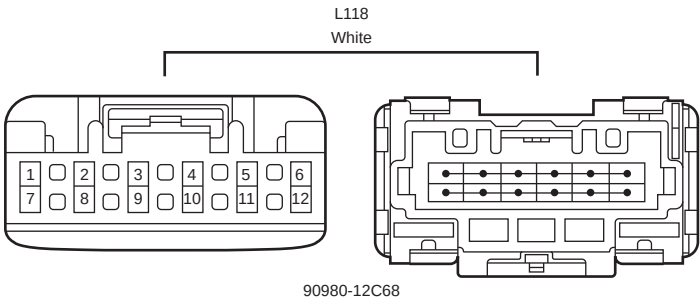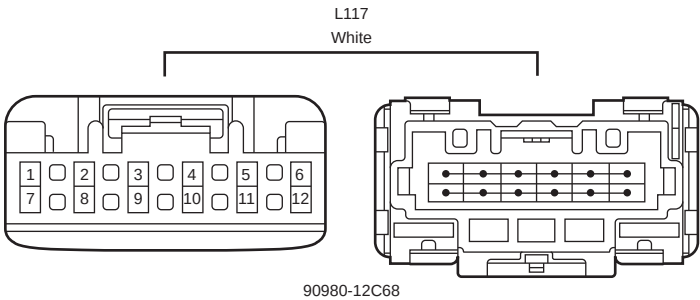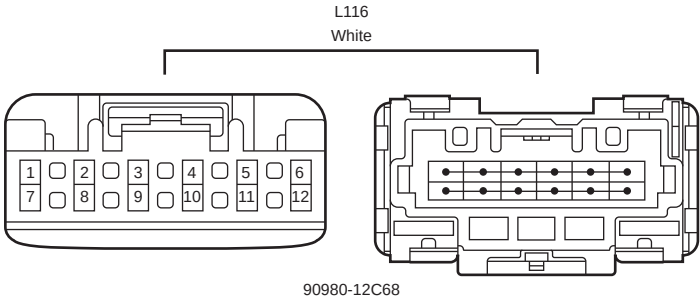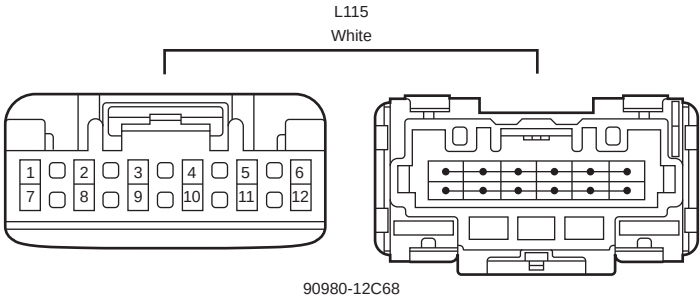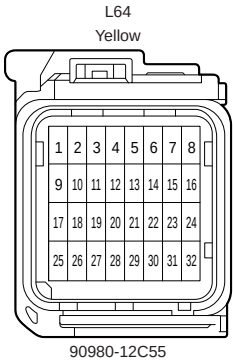

Position of Parts in Instrument Panel <RHD>

