

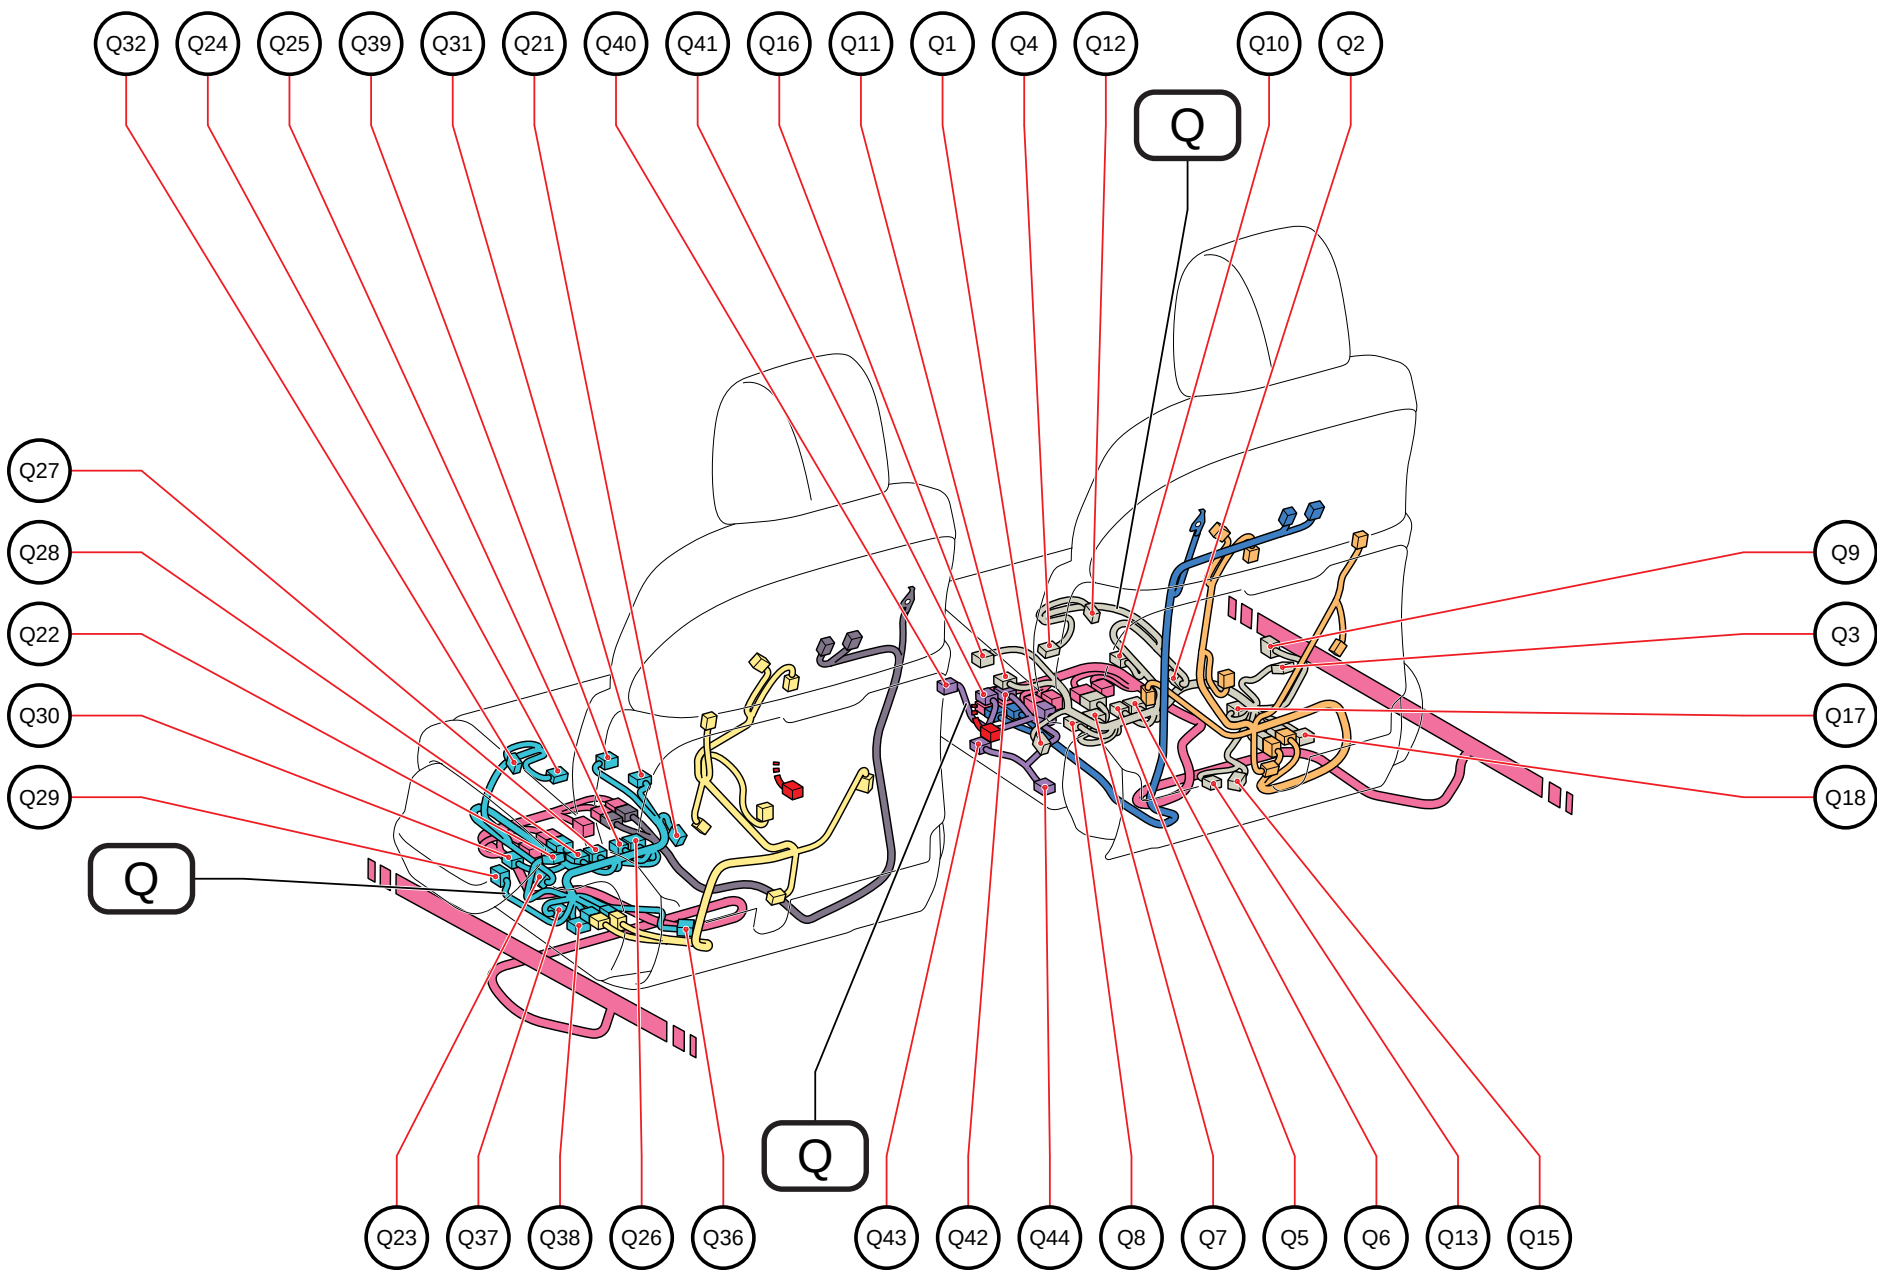
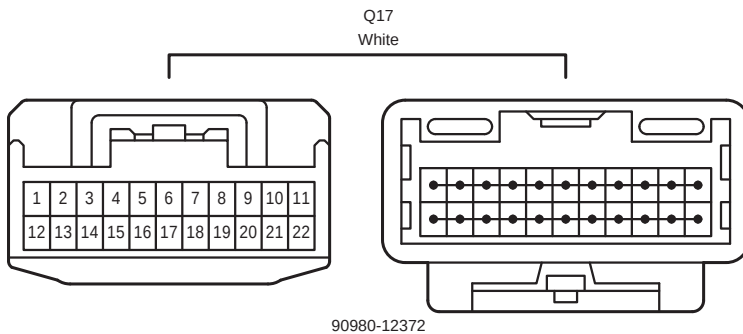
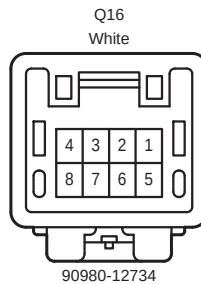
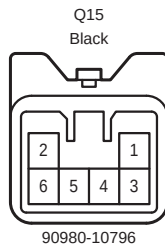
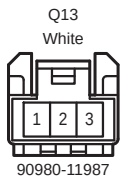
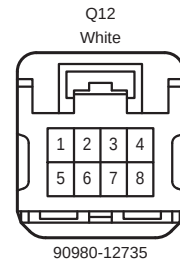
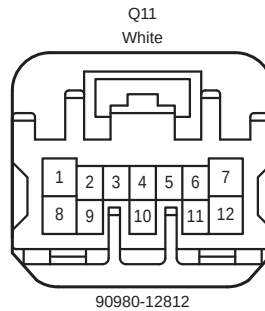
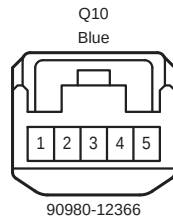
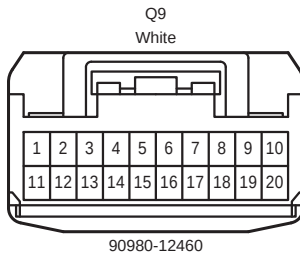
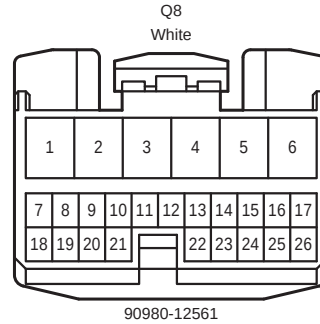
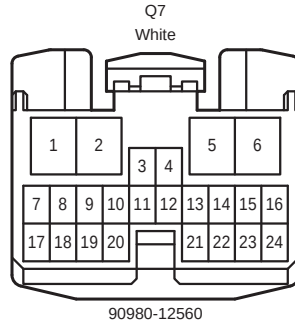
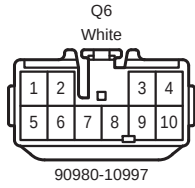
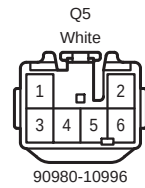
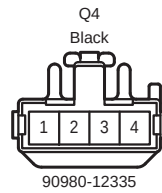
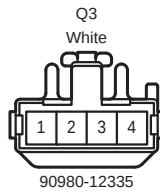


Position of Parts in Seat <LHD Front>

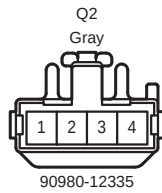


- Q 1 Front Power Seat Slide Motor RH (Front Seat Adjuster Assembly RH)
- Q 2 Front Power Seat Tilt Motor RH (Front Seat Adjuster Assembly RH)
- Q 3 Front Power Seat Lift Motor RH (Front Seat Adjuster Assembly RH)
- Q 4 Cushion Length Motor (Front Seat Adjuster Assembly RH)
- Q 5 Front Position Control ECU Assembly RH
- Q 6 Front Position Control ECU Assembly RH
- Q 7 Front Position Control ECU Assembly RH
- Q 8 Front Position Control ECU Assembly RH
- Q 9 Front Power Seat Switch RH
- Q 10 Pneumatic Valve Control ECU (Front Seat RH) (Refresh)
- Q 11 Front Seat Heater Control Sub-Assembly RH
- Q 12 Seat Cushion Climate Control Blower Assembly RH
- Q 13 Belt Warning Occupant Detection Sensor (Front Seat RH)
- Q 15 Front Seat Heater Assembly RH
- Q 16 Front Seat Inner Belt Assembly RH
- Q 17 No. 14 Junction Connector
- Q 18 No. 15 Junction Connector
- Q 21 Front Power Seat Slide Motor LH (Front Seat Adjuster Assembly LH)
- Q 22 Front Power Seat Lift Motor LH (Front Seat Adjuster Assembly LH)
- Q 23 Front Power Seat Tilt Motor LH (Front Seat Adjuster Assembly LH)
- Q 24 Cushion Length Motor (Front Seat Adjuster Assembly LH)
- Q 25 Front Position Control ECU Assembly LH
- Q 26 Front Position Control ECU Assembly LH
- Q 27 Front Position Control ECU Assembly LH
- Q 28 Front Position Control ECU Assembly LH
- Q 29 Front Power Seat Switch LH
- Q 30 Pneumatic Valve Control ECU (Front Seat LH) (Refresh)
- Q 31 Front Seat Heater Control Sub-Assembly LH
- Q 32 Seat Cushion Climate Control Blower Assembly LH
- Q 36 Front Seat Heater Assembly LH
- Q 37 No. 16 Junction Connector
- Q 38 No. 17 Junction Connector
- Q 39 Front Seat Inner Belt Assembly LH
- Q 40 Front Seat Inner Belt Assembly RH
- Q 41 Occupant Detection ECU
- Q 42 Occupant Detection ECU
- Q 43 Front Occupant Classification Sensor LH
- Q 44 Rear Occupant Classification Sensor LH

Position of Parts in Seat <LHD Front>

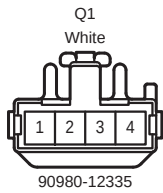

Position of Parts in Seat <LHD Front>

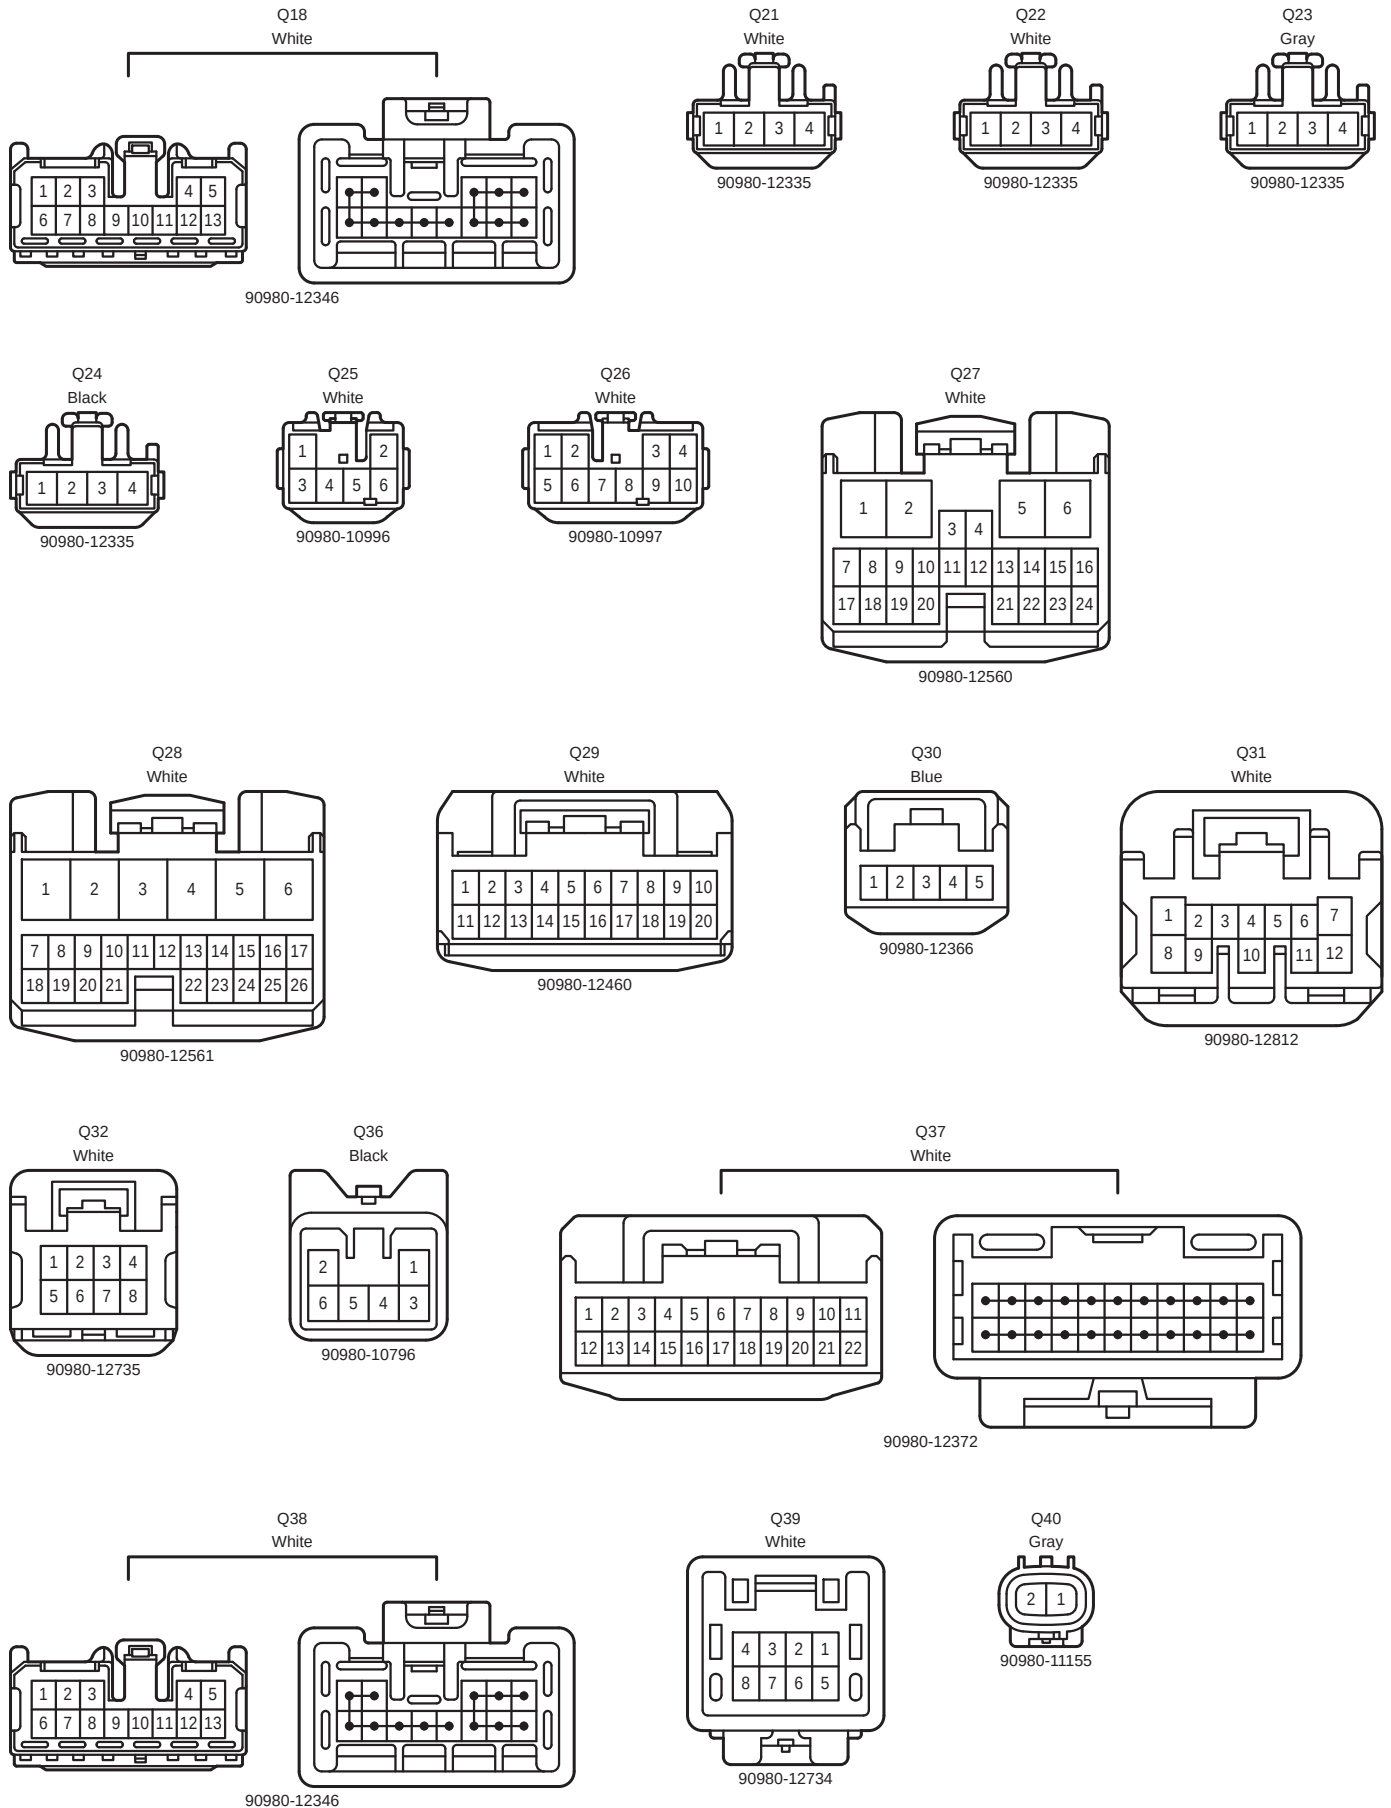

Position of Parts in Seat <LHD Front>

