

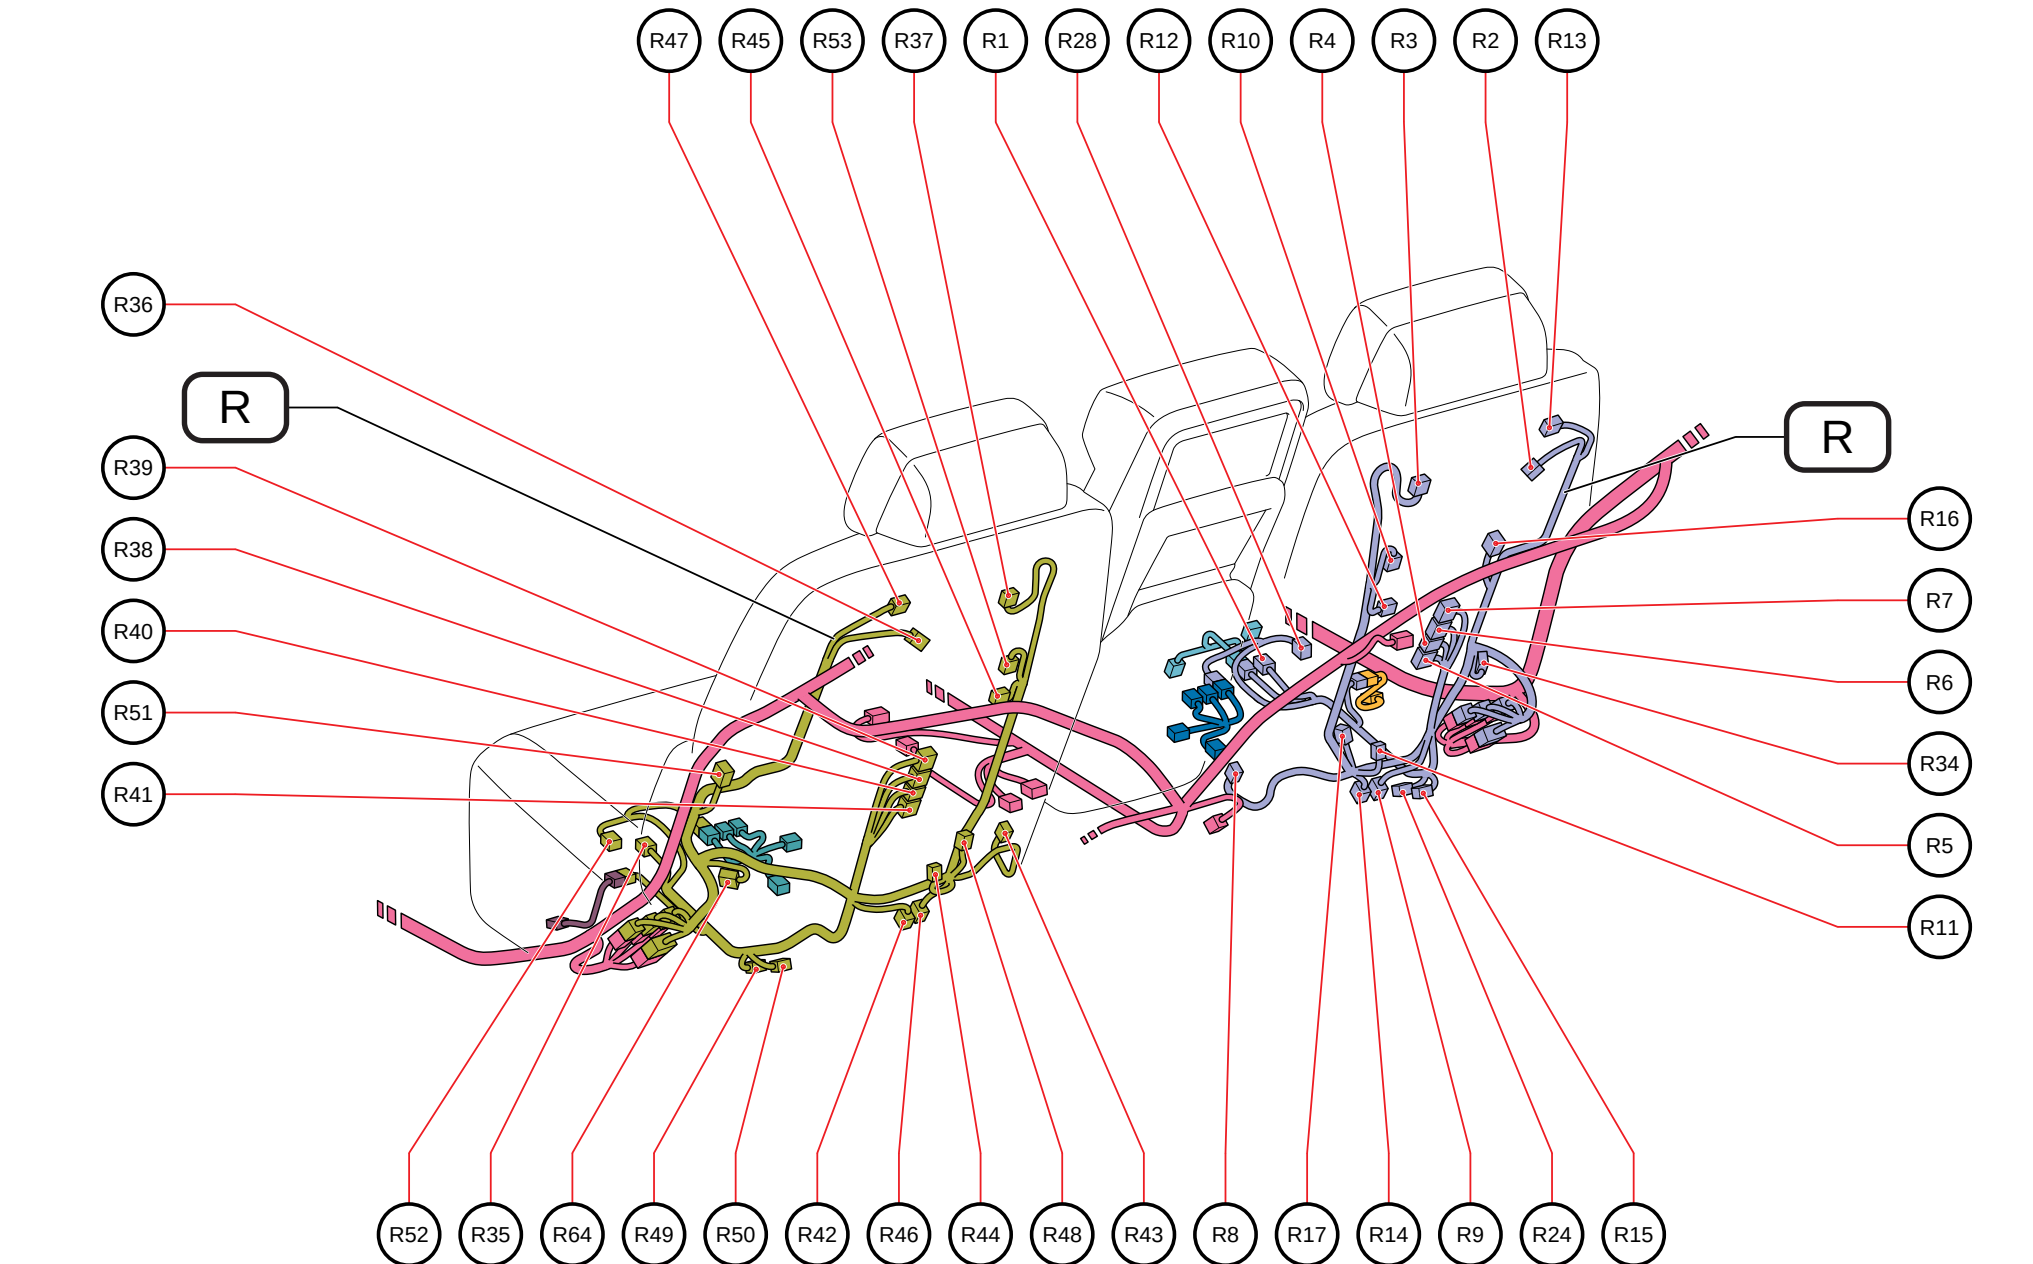
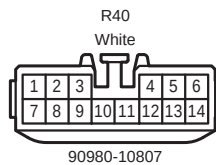
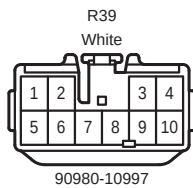
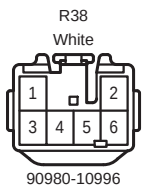
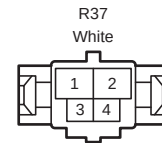
 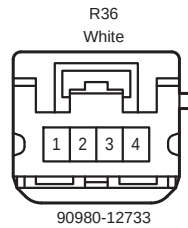
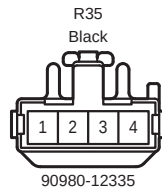

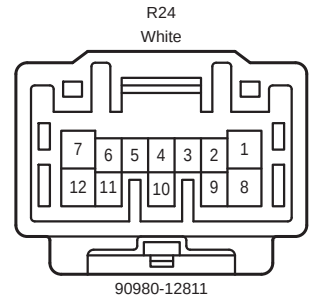
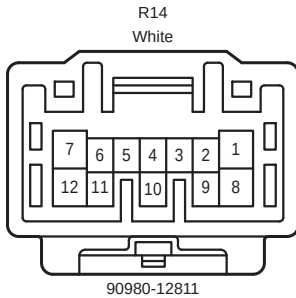
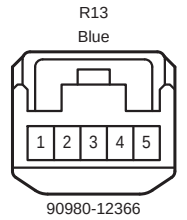
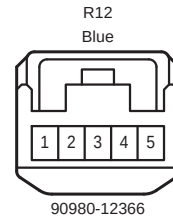
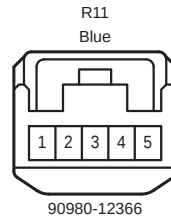
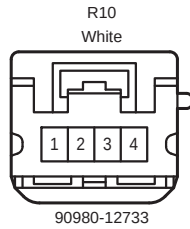
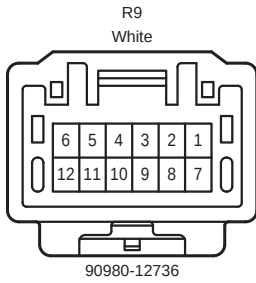
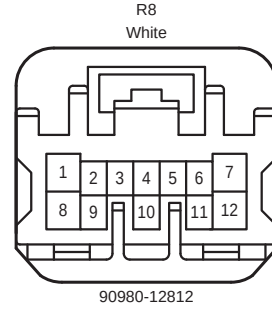
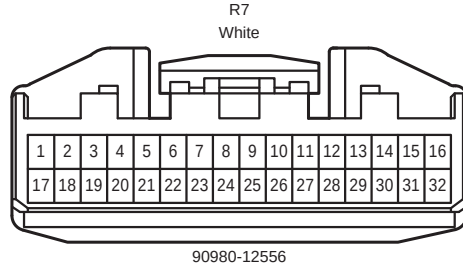
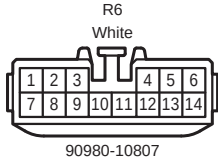
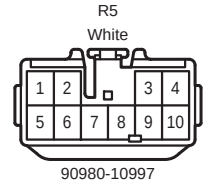
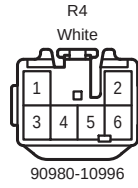
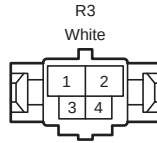


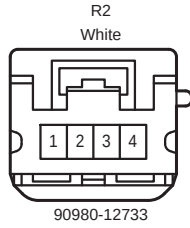

R	1	Rear Power Seat Slide Motor RH (Rear No.1 Seat Adjuster Assembly)
R	2	No.1 Rear Seat Headrest Adjuster Sub-Assembly
R	3	No.1 Rear Seat Headrest Adjuster Sub-Assembly
R	4	Rear Position Control ECU Assembly RH
R	5	Rear Position Control ECU Assembly RH
R	6	Rear Position Control ECU Assembly RH
R	7	Rear Position Control ECU Assembly RH
R	8	Rear Seat Heater Control Sub-Assembly RH
R	9	Rear Seat Back Heater Assembly RH
R	10	Rear Seat Back Climate Control Blower RH
R	11	Pneumatic Valve Control ECU (Rear Seat RH) (Support)
R	12	Pneumatic Valve Control ECU (Rear Seat RH) (Refresh)
R	13	Pneumatic Valve Control ECU (Rear Seat RH) (Refresh)
R	14	Rear Seat Back Heater Assembly RH
R	15	Rear Seat Inner Belt Assembly RH
R	16	Rear Seat Airbag Assembly RH
R	17	Rear Lumber Support Pump Sub-Assembly RH
R	24	Rear Seat Inner Belt Assembly RH
R	28	Rear Seat Cushion Airbag Assembly RH
R	34	Diode
R	35	Rear Power Seat Slide Motor LH (Rear No.2 Seat Adjuster Assembly)
R	36	No.2 Rear Seat Headrest Adjuster Sub-Assembly
R	37	No.2 Rear Seat Headrest Adjuster Sub-Assembly
R	38	Rear Position Control ECU Assembly LH
R	39	Rear Position Control ECU Assembly LH
R	40	Rear Position Control ECU Assembly LH
R	41	Rear Position Control ECU Assembly LH
R	42	Rear Seat Back Heater Assembly LH
R	43	Rear Seat Heater Control Sub-Assembly LH
R	44	Pneumatic Valve Control ECU (Rear Seat LH) (Support)
R	45	Pneumatic Valve Control ECU (Rear Seat LH) (Refresh)
R	46	Rear Seat Back Heater Assembly LH
R	47	Pneumatic Valve Control ECU (Rear Seat LH) (Refresh)
R	48	Rear Lumber Support Pump Sub-Assembly LH
R	49	Rear Seat Inner Belt Assembly LH
R	50	Rear Seat Inner Belt Assembly LH
R	51	Rear Seat Airbag Assembly LH
R	52	Rear Seat Cushion Airbag Assembly LH
R	53	Rear Seat Back Climate Control Blower LH
R	64	Diode

Position of Parts in Seat <LHD Rear w/ Power Seat>

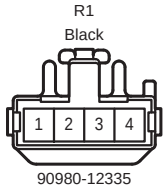

Position of Parts in Seat <LHD Rear w/ Power Seat>

