


Position of Parts in Seat <LHD Rear w/ Power Seat>

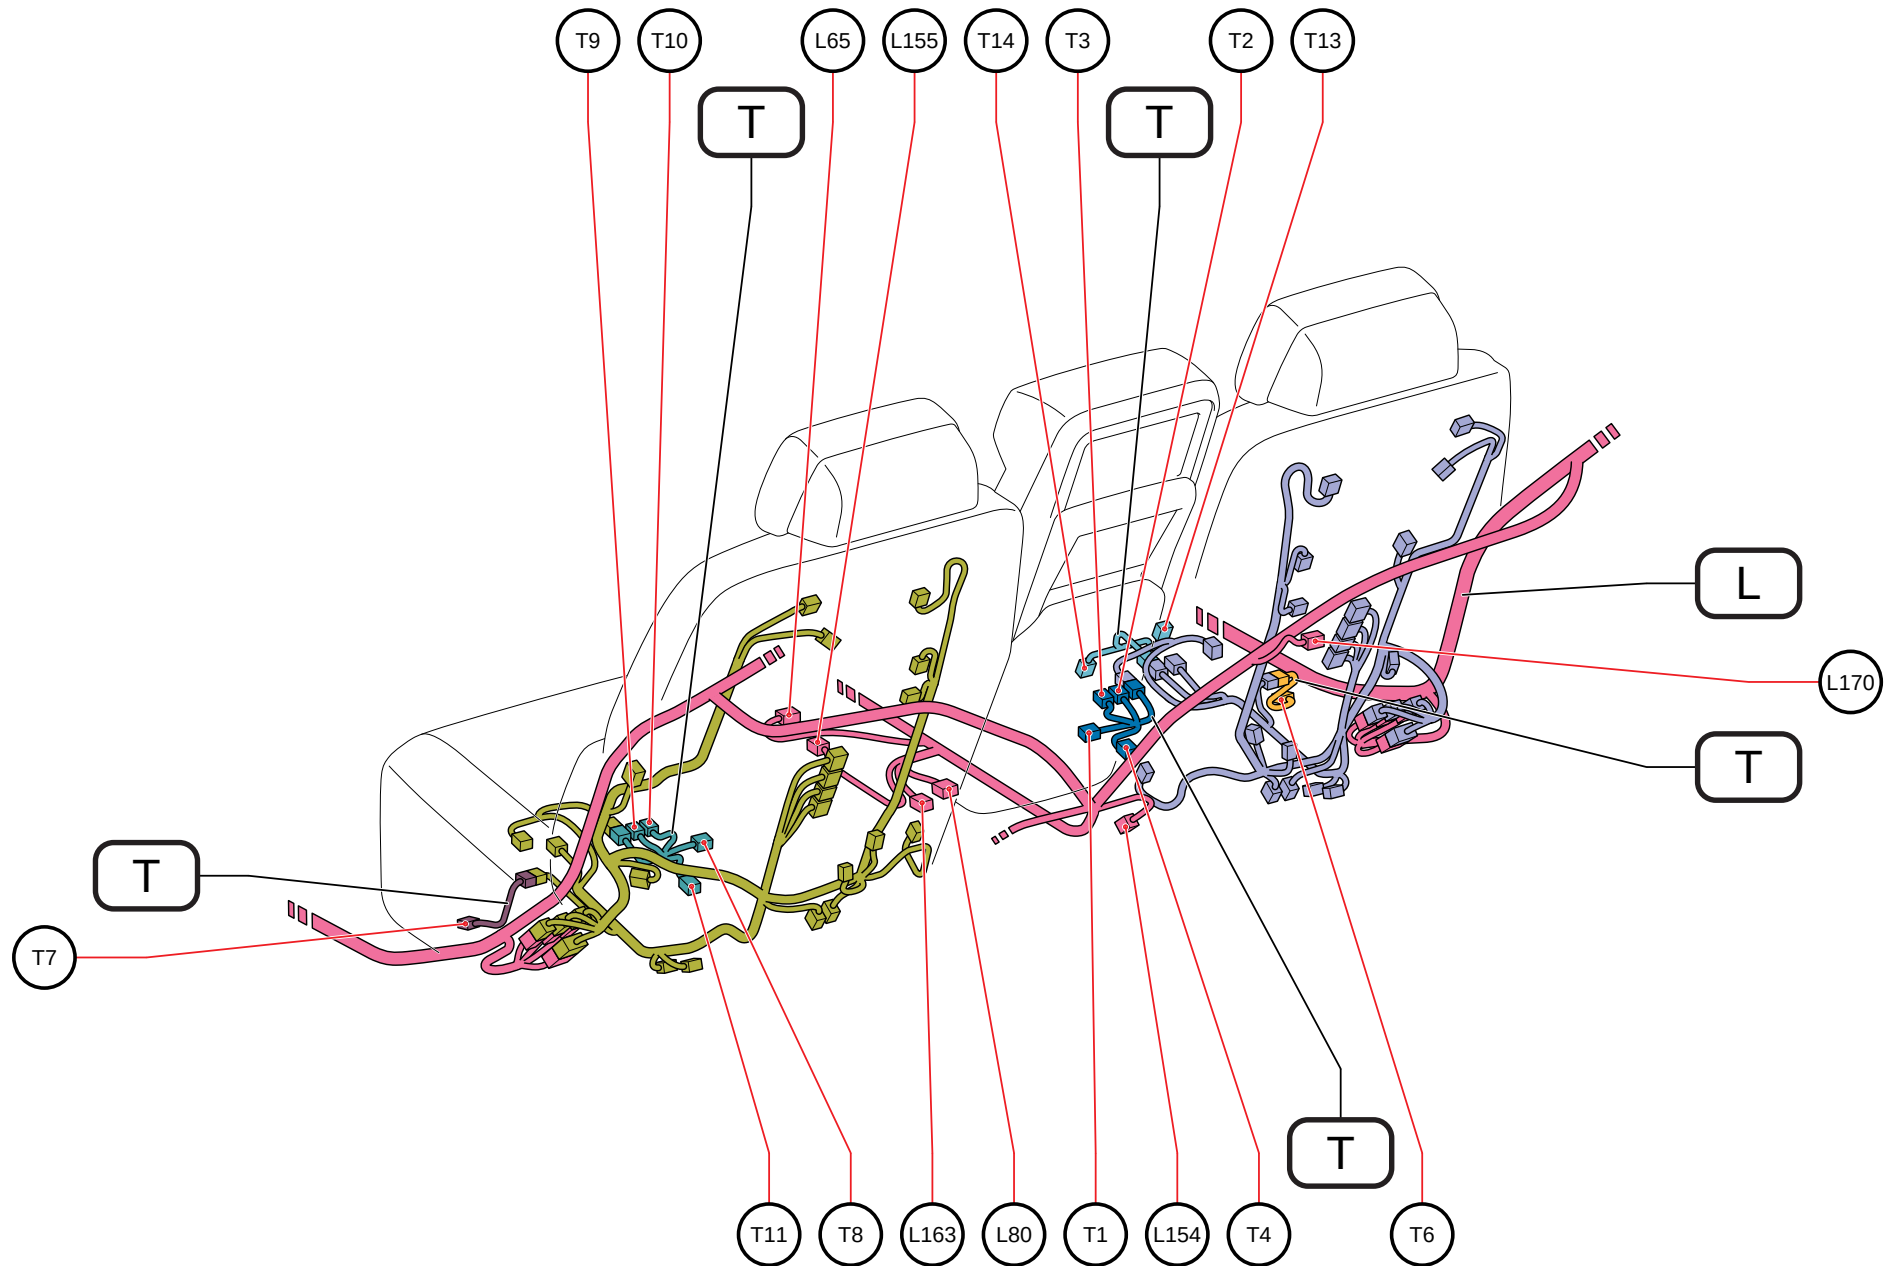

- L 65 No. 2 Indoor Electrical Key Antenna Assembly
- L 80 Rear Console Box Wire
- L 154 Rear Seat Inner Belt Assembly Center
- L 155 Rear Seat Cushion Pad Center
- L 163 HDMI Terminal (Rear Console Box Wire)
- L 170 Rear Seat Reclining Adjuster Sub-Assembly RH

- T 1 Rear Seat Cushion Climate Control Blower Assembly RH
- T 2 Rear Seat Heater Assembly RH
- T 3 Pneumatic Valve Control ECU (Rear Seat RH) (Refresh)
- T 4 Belt Warning Occupant Detection Sensor (Rear Seat RH)
- T 6 Rear Power Seat Tilt Motor RH (Rear No.1 Seat Adjuster Assembly)
- T 7 Rear Power Seat Tilt Motor LH (Rear No.2 Seat Adjuster Assembly)
- T 8 Rear Seat Cushion Climate Control Blower Assembly LH
- T 9 Rear Seat Heater Assembly LH
- T 10 Pneumatic Valve Control ECU (Rear Seat LH) (Refresh)
- T 11 Belt Warning Occupant Detection Sensor (Rear Seat LH)
- T 13 Ottoman Up-Down Motor (Rear No.1 Seat Adjuster Assembly)
- T 14 Ottoman Forward-Back Motor (Rear No.1 Seat Adjuster Assembly)

Position of Parts in Seat <LHD Rear w/ Power Seat>

