


Position of Parts in Engine Compartment <LHD>

* 1:2WD
* 2:AWD

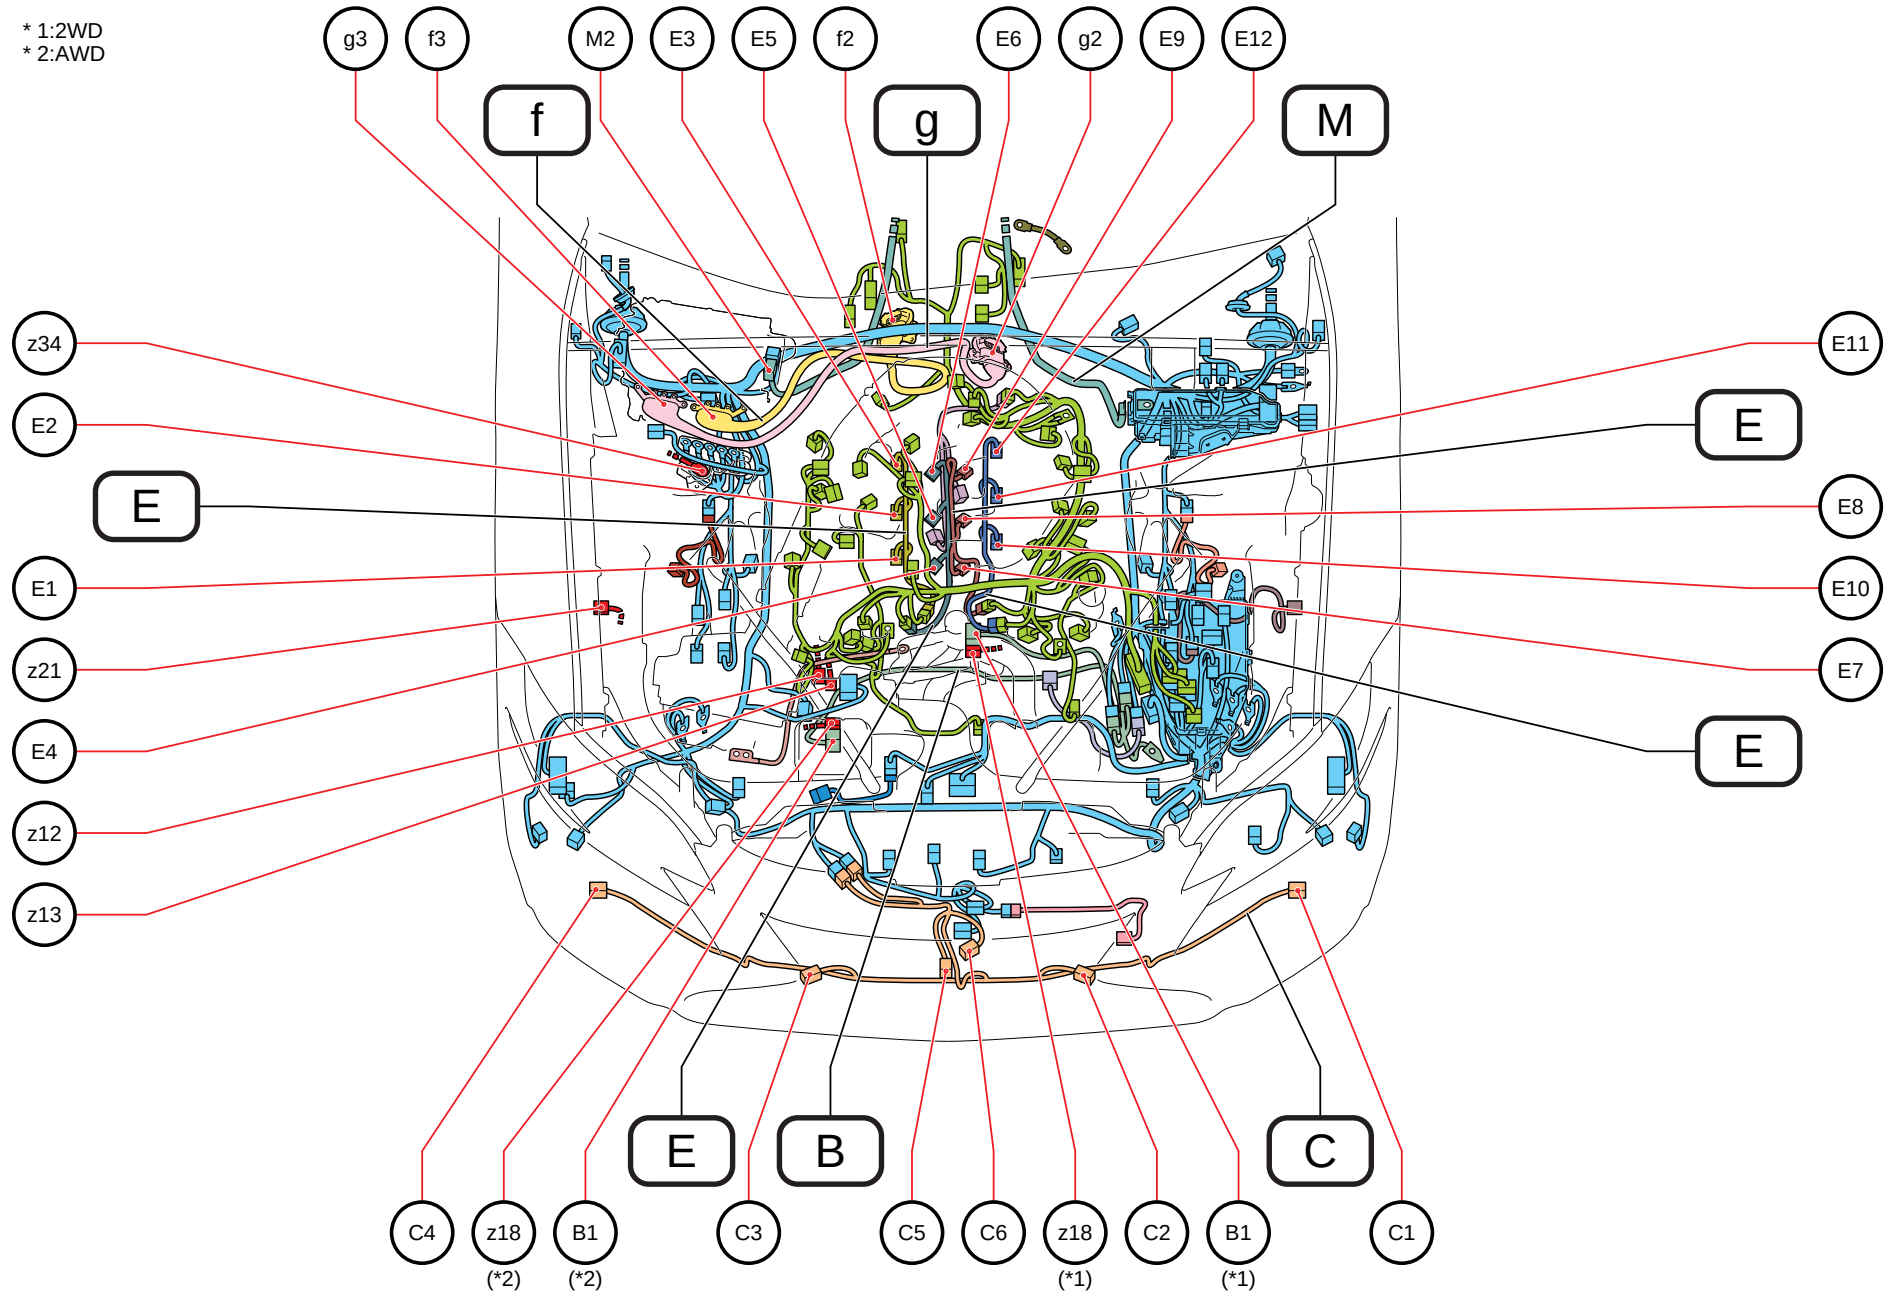

- B 1 EPS ECU (Rack & Pinion Power Steering Gear Assembly)

- C 1 Front Ultrasonic Sensor Corner LH
- C 2 Front Ultrasonic Sensor Center LH
- C 3 Front Ultrasonic Sensor Center RH
- C 4 Front Ultrasonic Sensor Corner RH
- C 5 Front Television Camera Assembly
- C 6 Millimeter Wave Radar Sensor Assembly

- E 1 Fuel Injector Assembly No. 1 (for Port Injection)
- E 2 Fuel Injector Assembly No. 3 (for Port Injection)
- E 3 Fuel Injector Assembly No. 5 (for Port Injection)
- E 4 Fuel Injector Assembly No. 1 (for Direct Injection)
- E 5 Fuel Injector Assembly No. 3 (for Direct Injection)
- E 6 Fuel Injector Assembly No. 5 (for Direct Injection)
- E 7 Fuel Injector Assembly No. 2 (for Direct Injection)
- E 8 Fuel Injector Assembly No. 4 (for Direct Injection)
- E 9 Fuel Injector Assembly No. 6 (for Direct Injection)
- E 10 Fuel Injector Assembly No. 2 (for Port Injection)
- E 11 Fuel Injector Assembly No. 4 (for Port Injection)
- E 12 Fuel Injector Assembly No. 6 (for Port Injection)


















- 2 Inverter with Converter Assembly

- f 2 Hybrid Vehicle Transmission Assembly
- f 3 Inverter with Converter Assembly

- g 2 Hybrid Vehicle Transmission Assembly
- g 3 Inverter with Converter Assembly

- z 12 Oil Pump with Motor Assembly , Oil Pump Motor Controller
- z 13 Oil Pump with Motor Assembly , Oil Pump Motor Controller
- z 18 Steering Torque Sensor Board Sub-Assembly , Rack & Pinion Power Steering Gear Assembly
- z 21 Front Speed Sensor RH , Front Skid Control Sensor Wire RH
- z 34 Inverter Bus-Bar Plate Sub-Assembly , Fusible Link Block Assembly

Position of Parts in Engine Compartment <LHD>

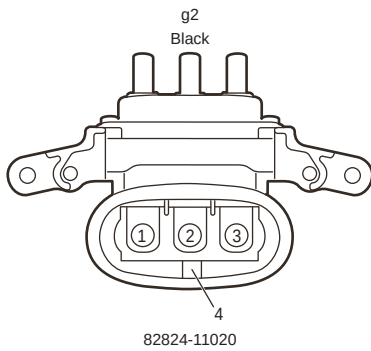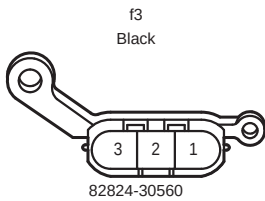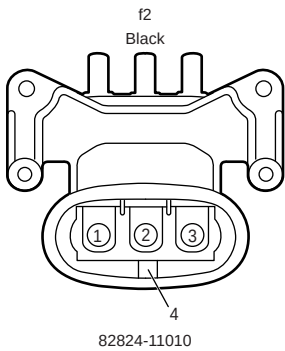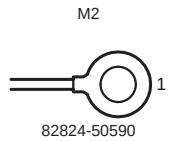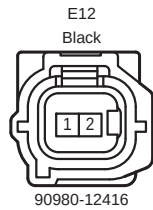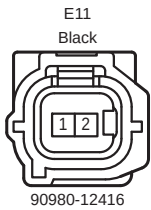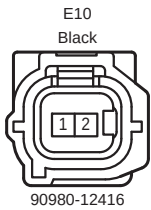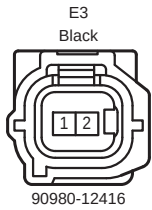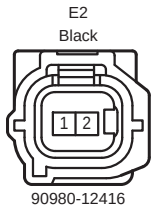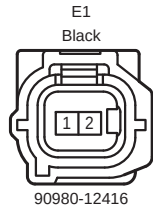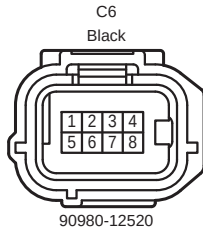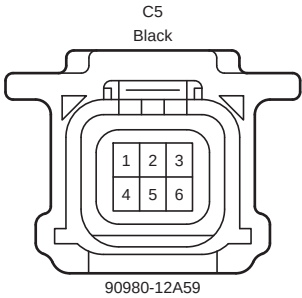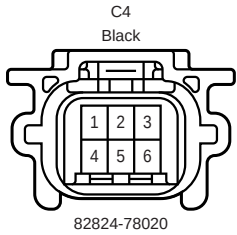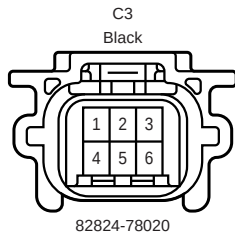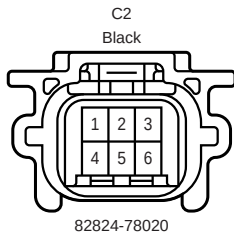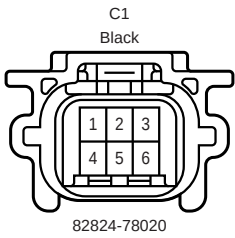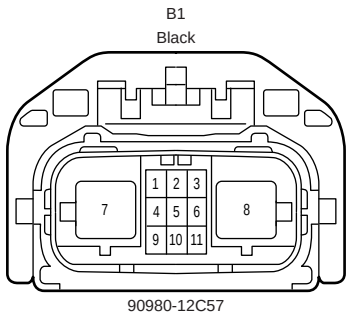

Position of Parts in Engine Compartment <LHD>

