



Position of Parts in Engine Compartment <RHD>

- * 1:2WD
- * 2:AWD
- * 7:Prior September 2018
- * 8:September 2018 or later












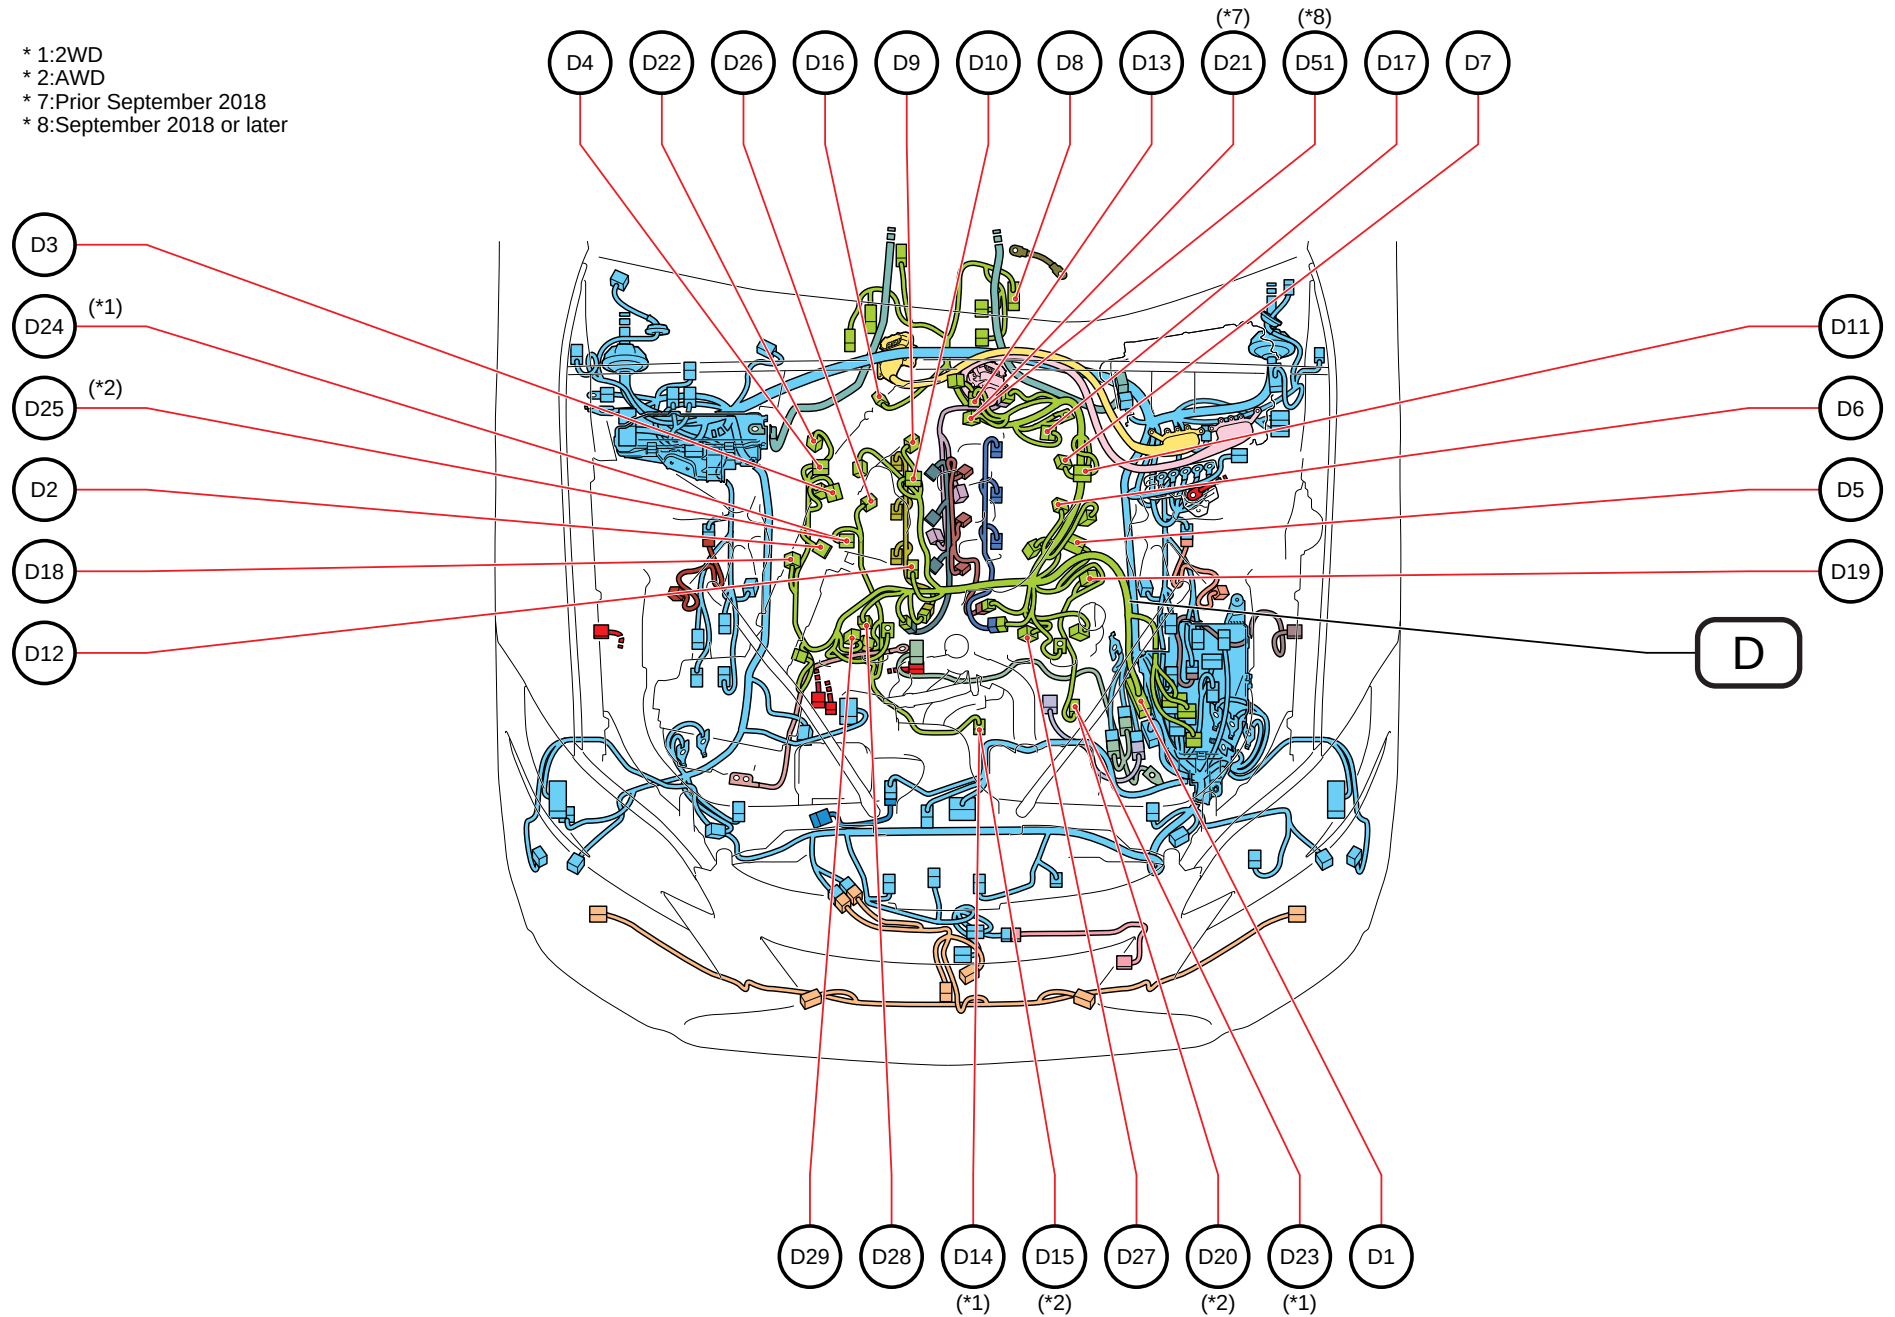


- D 1 ECM
- D 2 Ignition Coil Assembly No. 1
- D 3 Ignition Coil Assembly No. 3
- D 4 Ignition Coil Assembly No. 5
- D 5 Ignition Coil Assembly No. 2
- D 6 Ignition Coil Assembly No. 4
- D 7 Ignition Coil Assembly No. 6
- D 8 Hybrid Vehicle Transmission Assembly (Transmission Wire)
- D 9 Throttle Body with Motor Assembly
- D 10 Purge VSV
- D 11 E.F.I. Vacuum Sensor Assembly
- D 12 Fuel Pressure Sensor (Low Pressure Side)
- D 13 Fuel Pressure Sensor (High Pressure Side)
- D 14 Engine Oil Pressure Switch Assembly
- D 15 Engine Oil Pressure Switch Assembly
- D 16 Air Fuel Ratio Sensor (Bank 1 Sensor 2)
- D 17 Air Fuel Ratio Sensor (Bank 2 Sensor 2)
- D 18 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- D 19 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- D 20 Compressor with Motor Assembly
- D 21 E.F.I. Engine Coolant Temperature Sensor
- D 22 Fuel Pump Assembly
- D 23 Compressor with Motor Assembly
- D 24 Engine Oil Level Sensor
- D 25 Engine Oil Level Sensor
- D 26 Crank Position Sensor
- D 27 Cam Timing Oil Control Solenoid Assembly (Bank 2 Intake Side)
- D 28 Cam Timing Oil Control Solenoid Assembly (Bank 1 Intake Side)
- D 29 Cam Timing Oil Control Solenoid Assembly (Bank 1 Exhaust Side)
- D 51 E.F.I. Engine Coolant Temperature Sensor

Position of Parts in Engine Compartment <RHD>

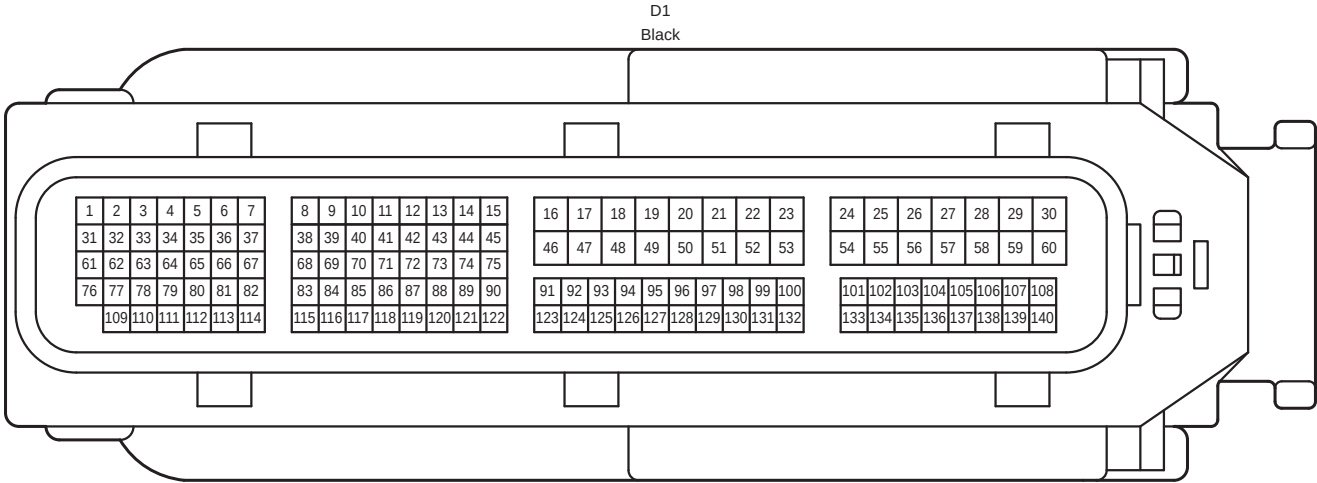

90980-12966

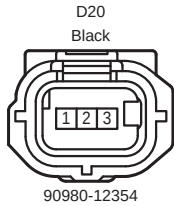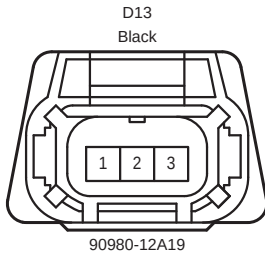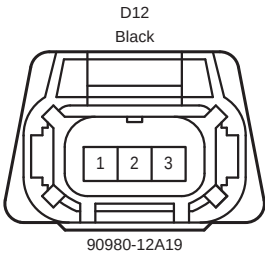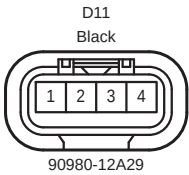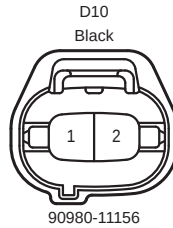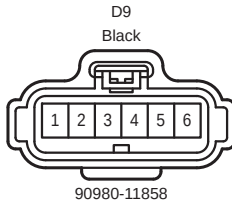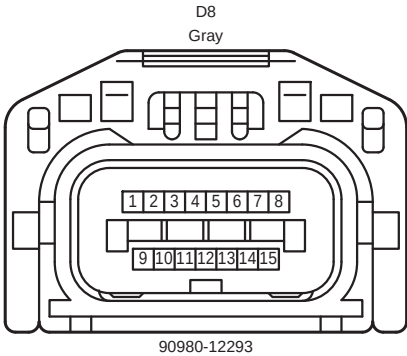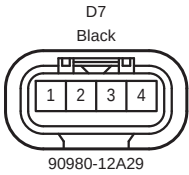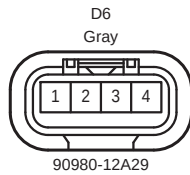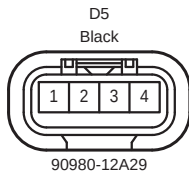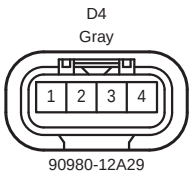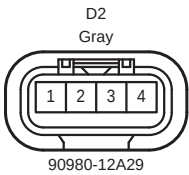

Position of Parts in Engine Compartment <RHD>

