


Position of Parts in Engine Compartment <RHD>

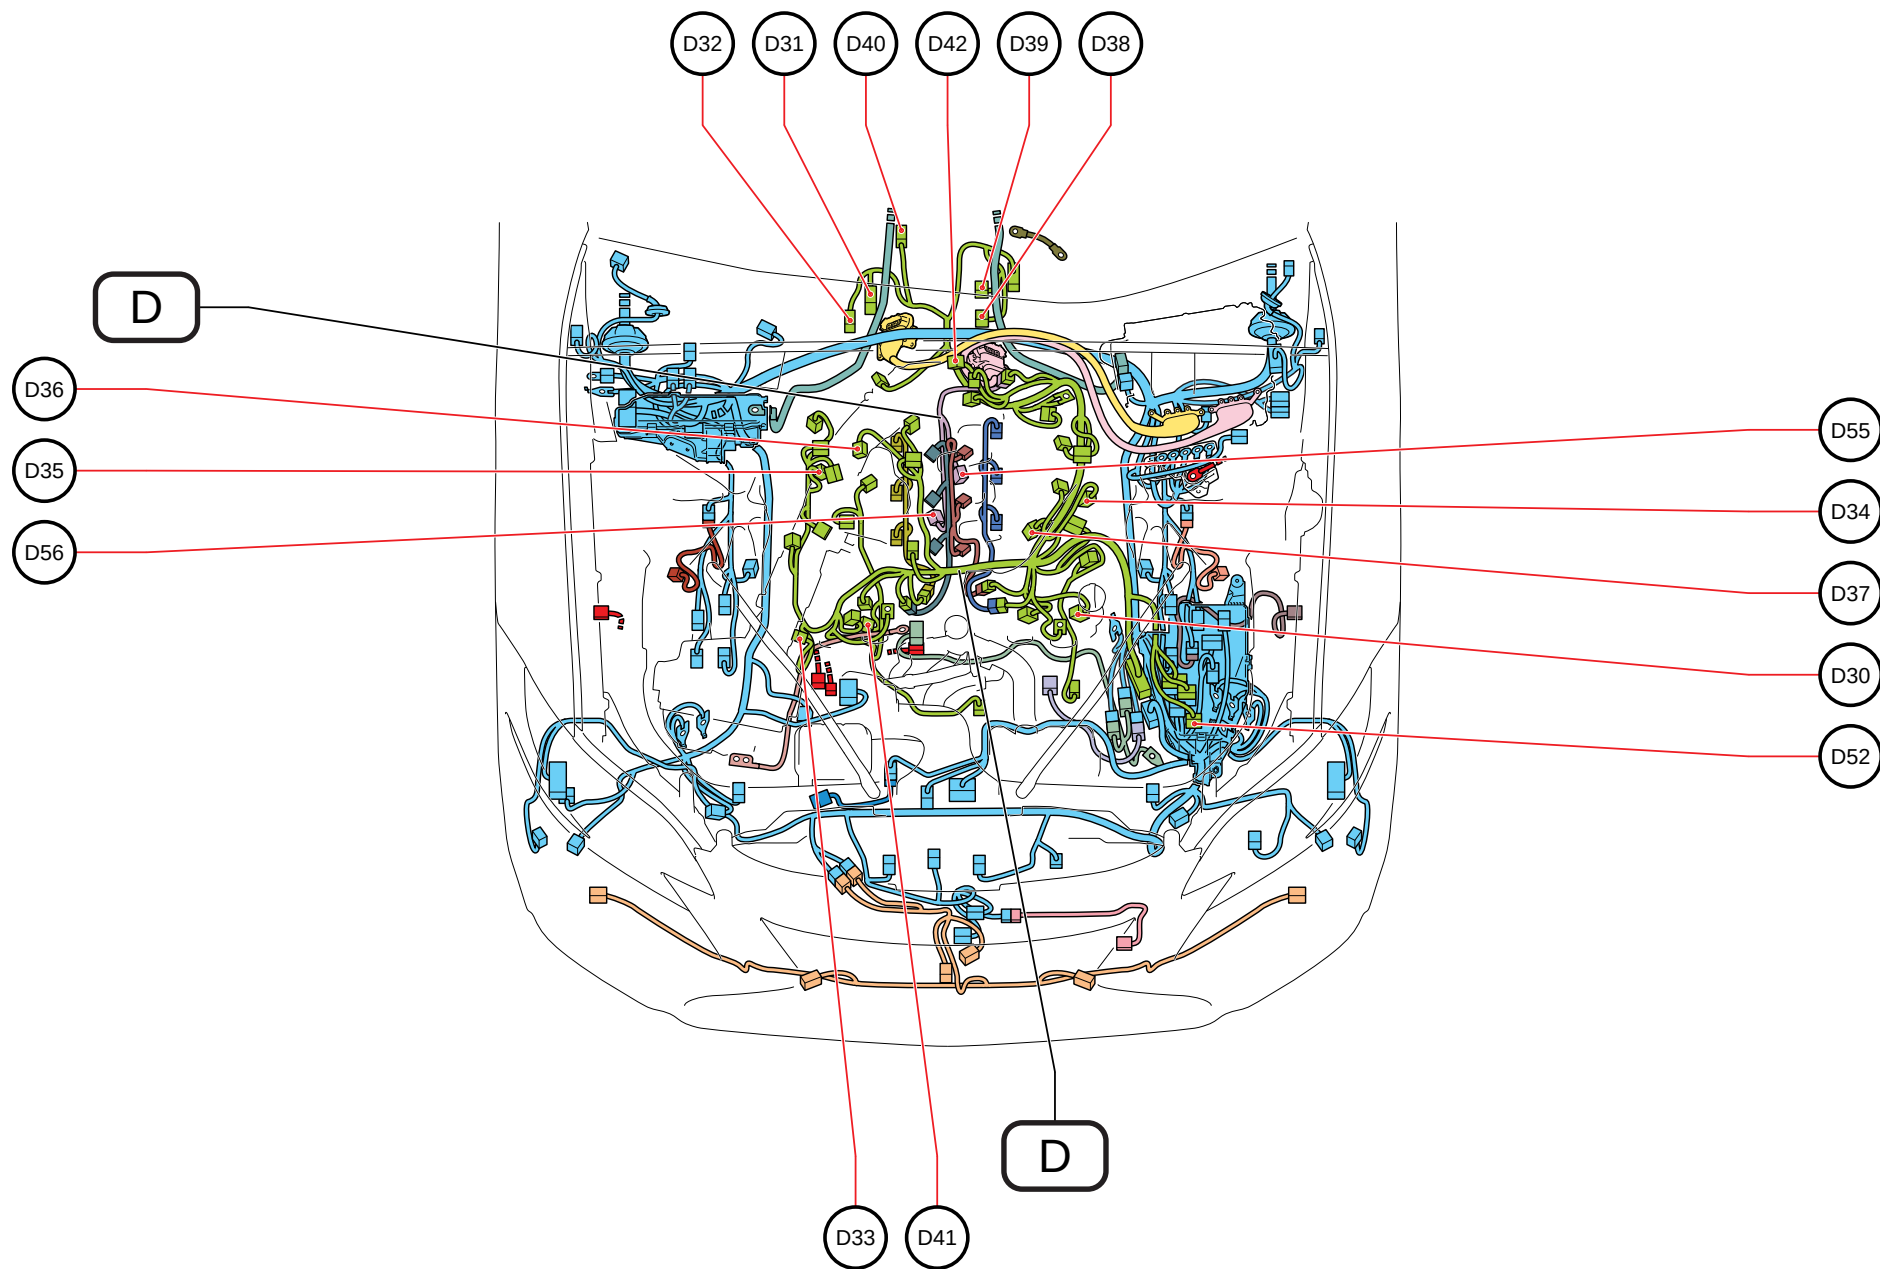

- D 30 Cam Timing Oil Control Solenoid Assembly (Bank 2 Exhaust Side)
- D 31 Shift Control Actuator Assembly
- D 32 Shift Control Actuator Assembly
- D 33 Intake Mass Air Flow Meter Sub-Assembly
- D 34 VVT Sensor (Bank 2 Exhaust Side)
- D 35 VVT Sensor (Bank 1 Exhaust Side)
- D 36 VVT Sensor (Bank 1 Intake Side)
- D 37 VVT Sensor (Bank 2 Intake Side)
- D 38 Hybrid Vehicle Transmission Assembly
- D 39 Hybrid Vehicle Transmission Assembly
- D 40 Transmission Revolution Sensor
- D 41 Oil Pump with Motor Assembly
- D 42 EGR Valve Assembly
- D 52 No. 3 Junction Connector
- D 55 Knock Control Sensor (Bank 2)
- D 56 Knock Control Sensor (Bank 1)

Position of Parts in Engine Compartment <RHD>

