

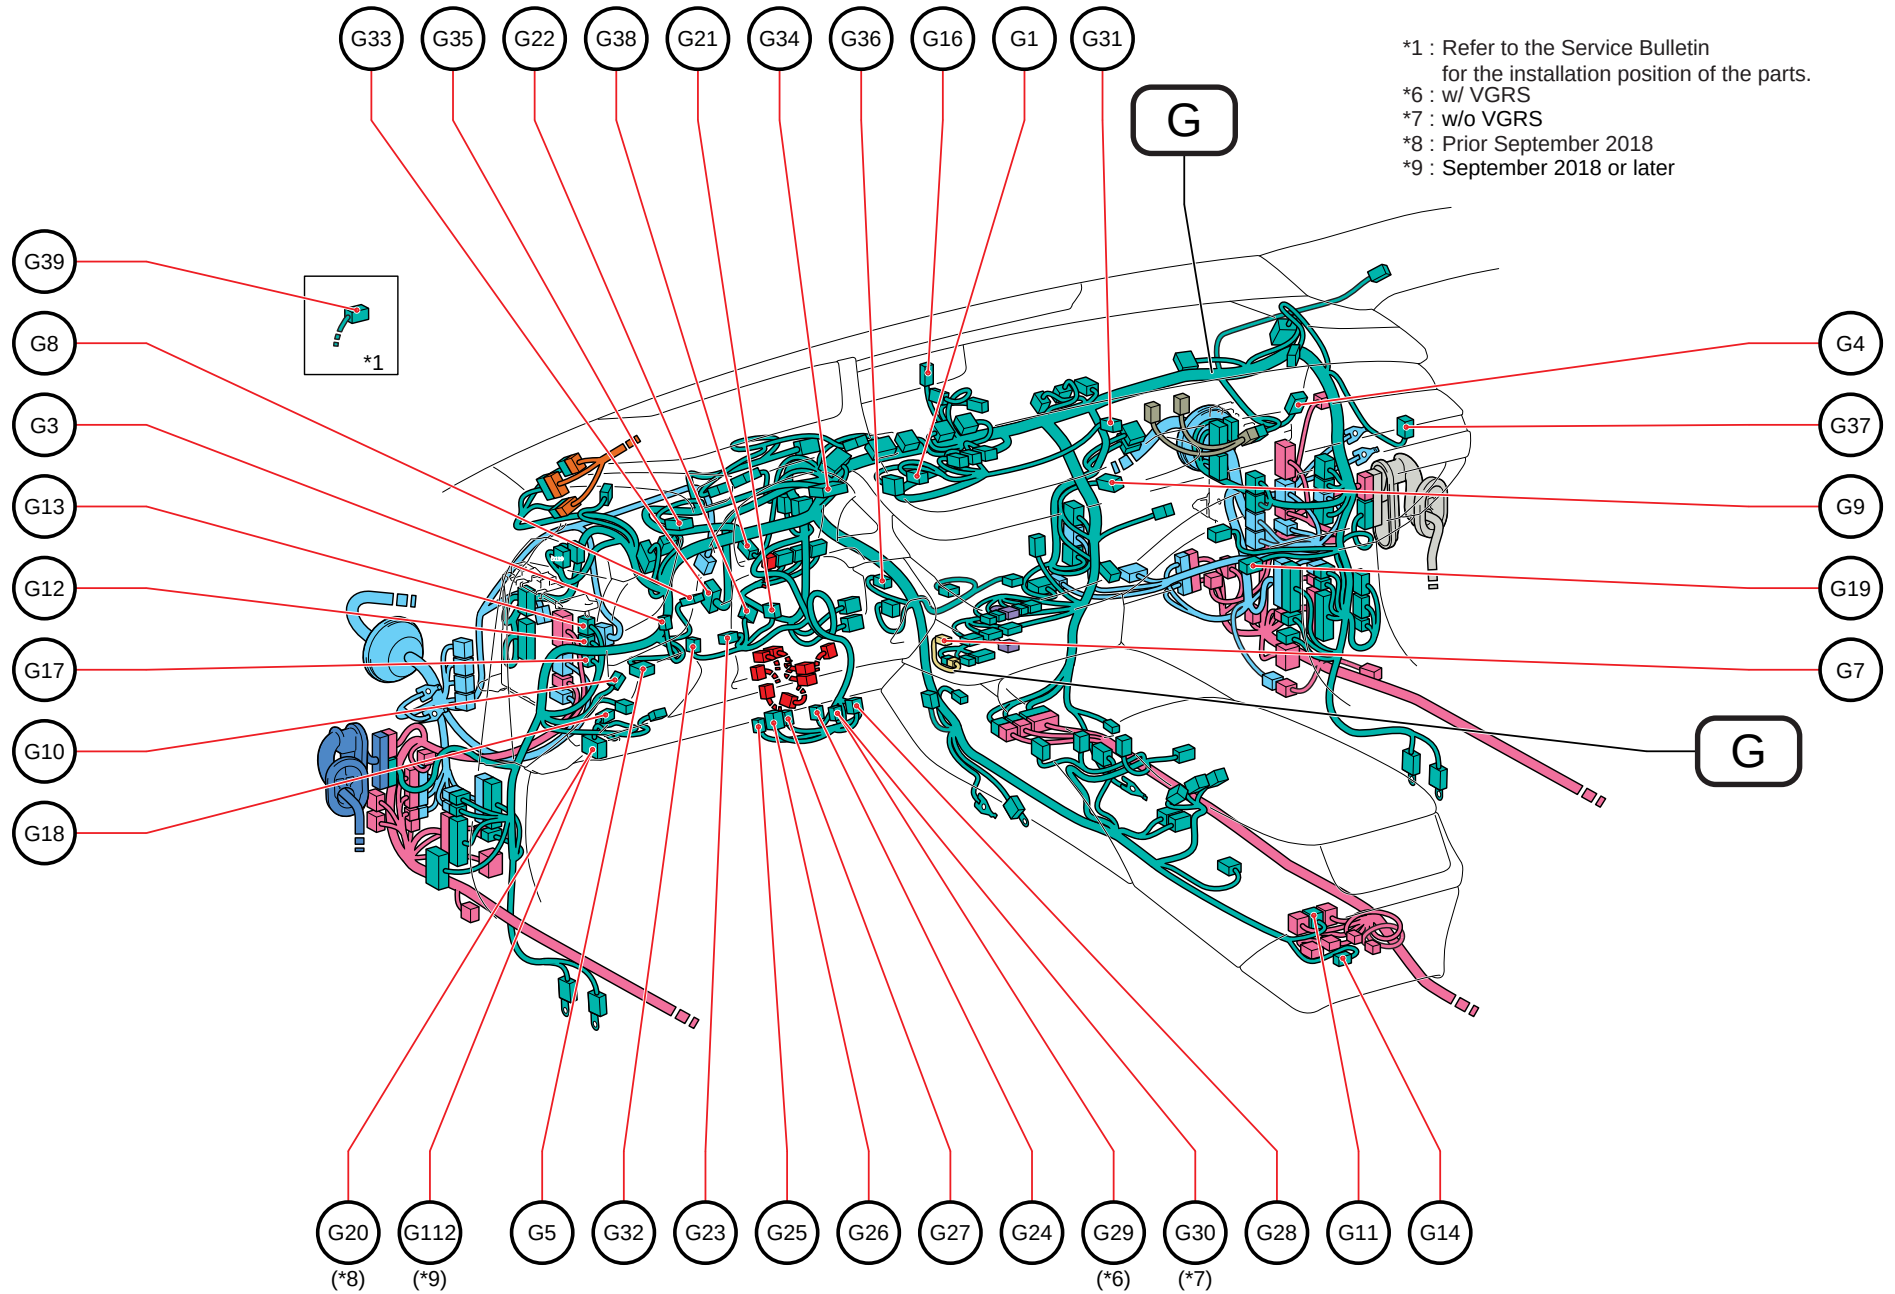
 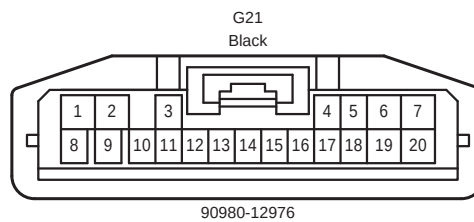
 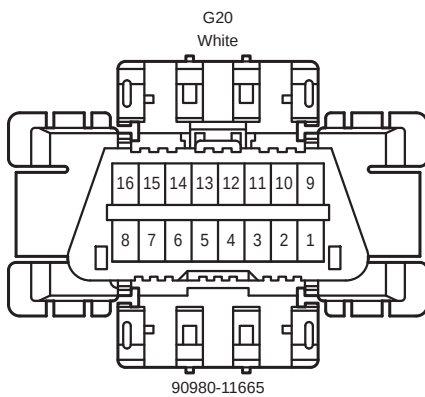


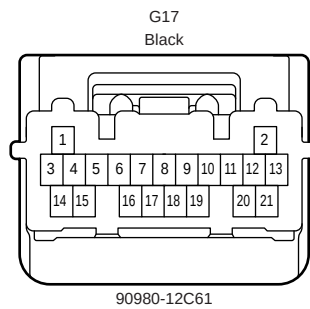
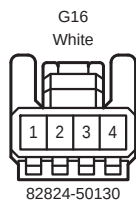
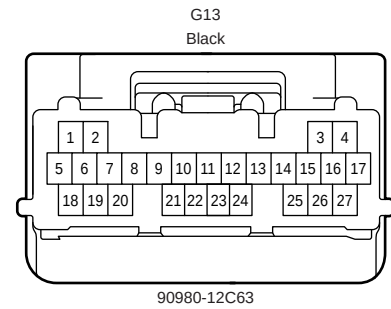
 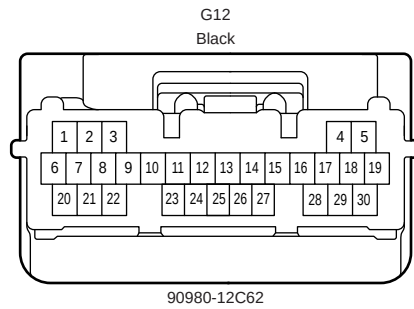
 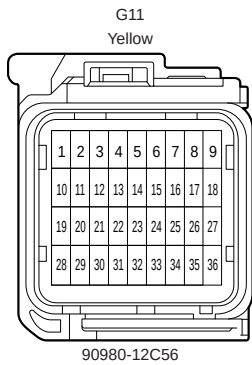


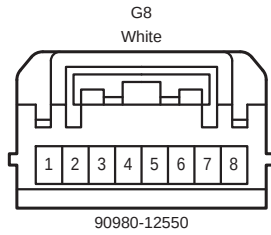
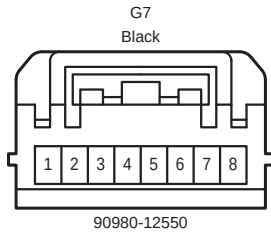
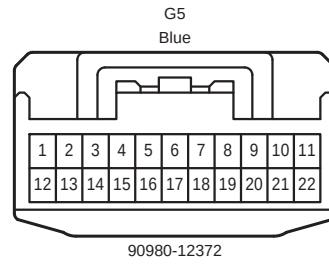
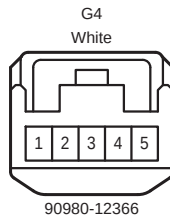


Position of Parts in Instrument Panel <LHD>

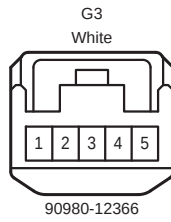

- 1 Multi-Display
- 3 No. 1 Instrument Panel Register Assembly (Driver Side)
- 4 No. 1 Instrument Panel Register Assembly (Passenger Side)
- 5 Integration Control & Panel Assembly
- 7 Brake Hold Switch
- 8 Trip Switch
- 9 Glove Box Light Assembly
- 10 Coin Box Light Assembly
- 11 Airbag ECU Assembly
- 12 Main Body ECU
- 13 Main Body ECU
- 14 Console Box Illumination Light Assembly (Console Box Wire)
- 16 Automatic Light Control Sensor
- 17 Main Body ECU
- 18 Foot Light (No. 1 Interior Illumination Light Assembly) (Driver Side)
- 19 Foot Light (No. 2 Interior Illumination Light Assembly) (Passenger Side)
- 20 Data Link Connector 3
- 21 Multiplex Tilt & Telescopic ECU
- 22 Steering Lock Actuator or Upper Bracket Assembly
- 23 Steering Column Assembly
- 24 Steering Column Assembly
- 25 Tilt & Telescopic Switch
- 26 Spiral Cable with Sensor Sub-Assembly
- 27 Spiral Cable with Sensor Sub-Assembly
- 28 Spiral Cable with Sensor Sub-Assembly
- 29 Steering Sensor
- 30 Steering Sensor
- 31 Telltale Light Assembly
- 32 Steering Column Assembly
- 33 Steering Actuator Assembly
- 34 Combination Meter Assembly
- 35 Combination Meter Assembly
- 36 Cooler (Room Temp. Sensor) Thermistor
- 37 Airbag Cut Off Switch Cylinder Sub-Assembly
- 38 No. 1 Clearance Warning Buzzer
- 39 Option Connector (DCM for Brazil)
- 112 Data Link Connector 3

Position of Parts in Instrument Panel <LHD>

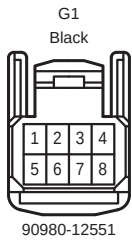

Position of Parts in Instrument Panel <LHD>

