

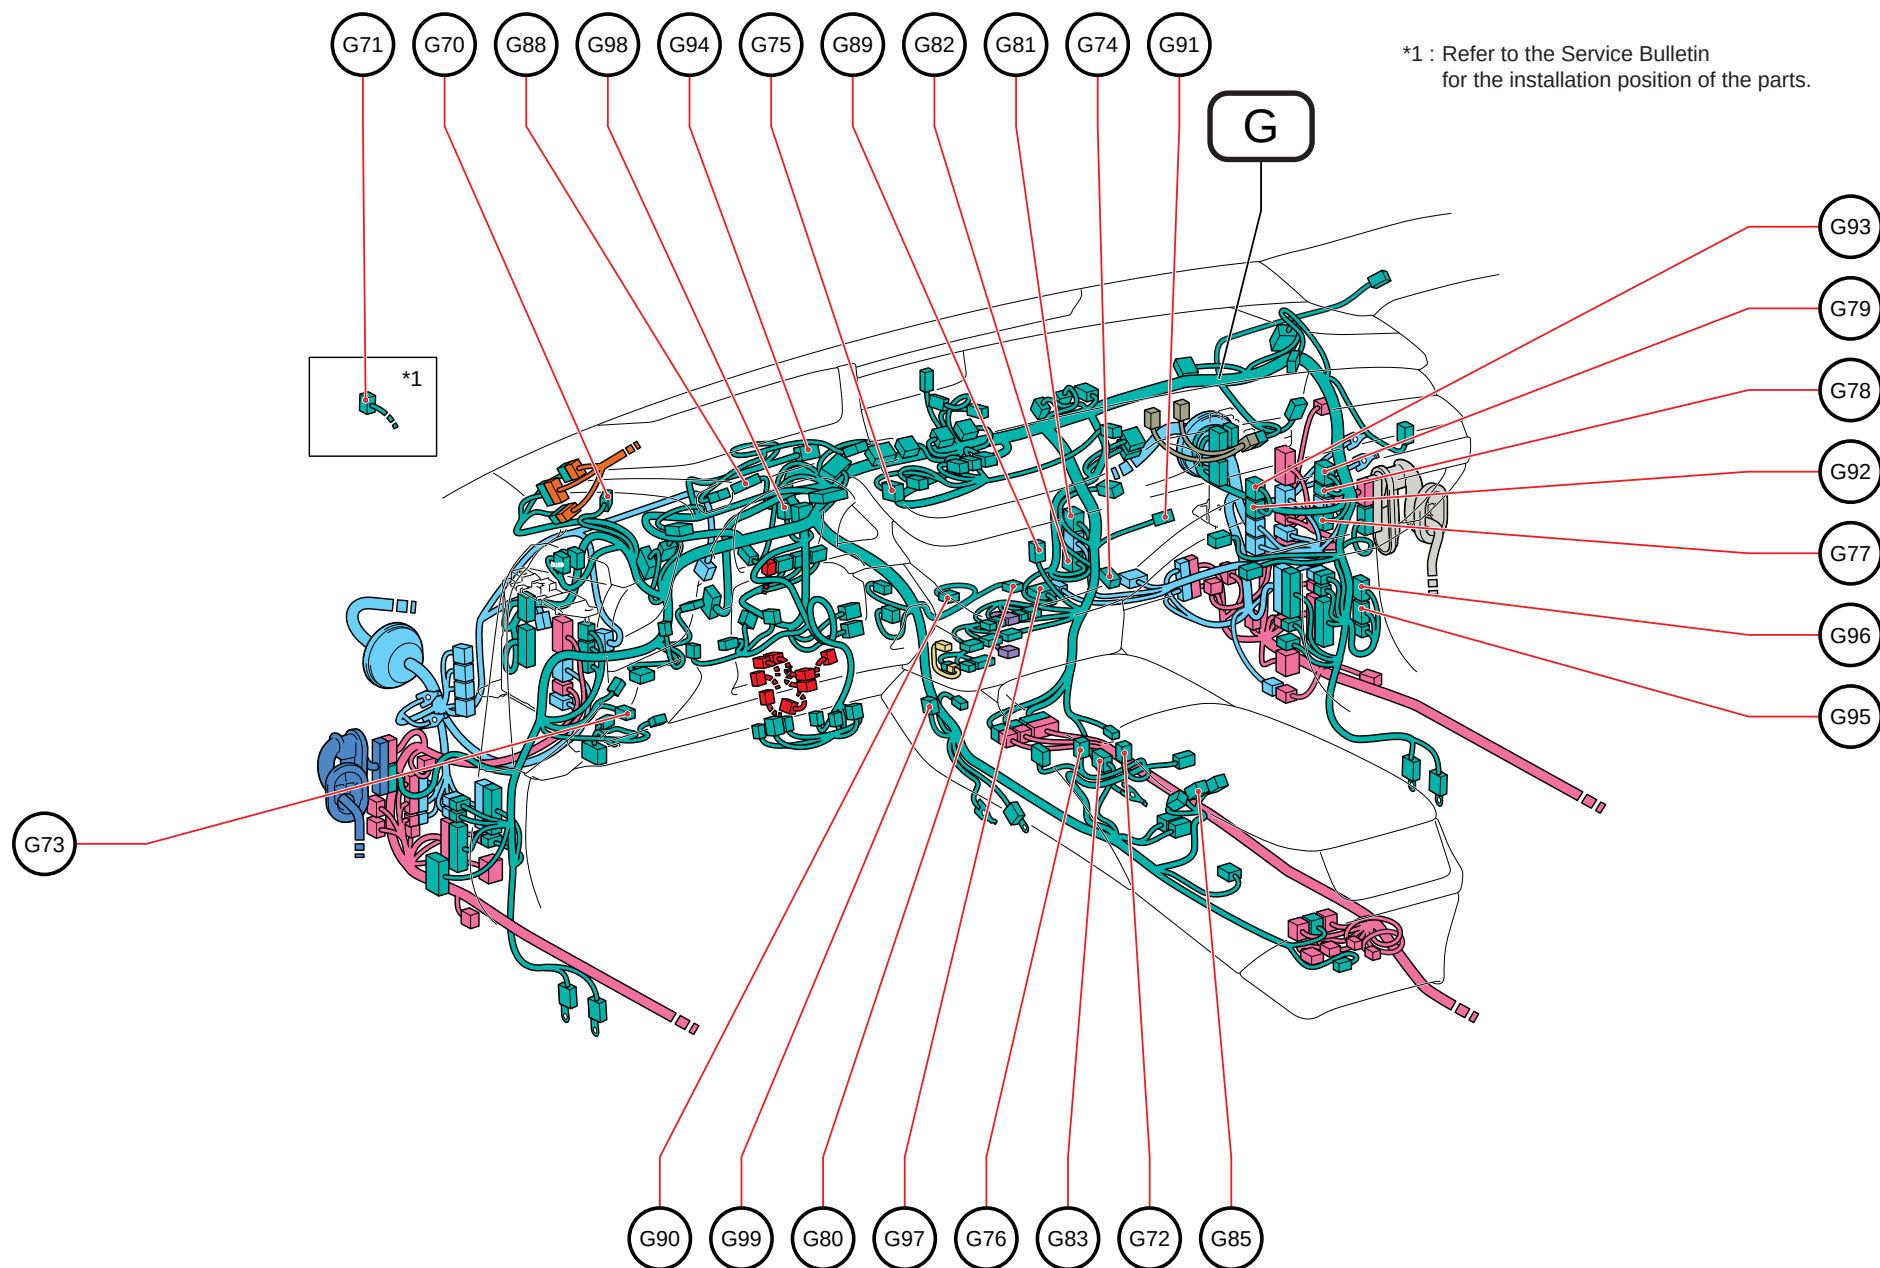
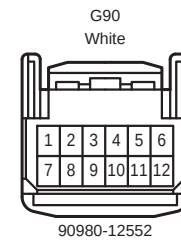
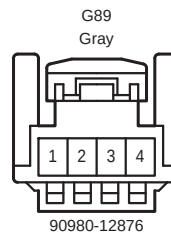
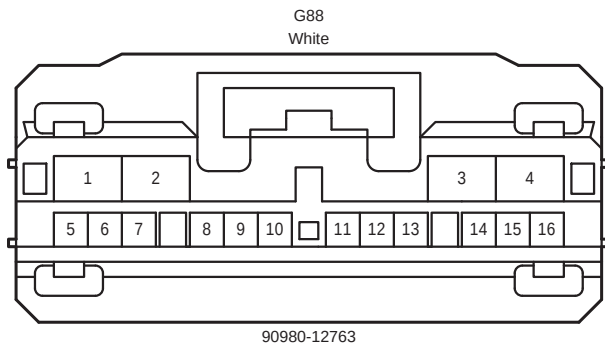
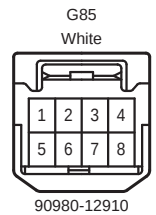
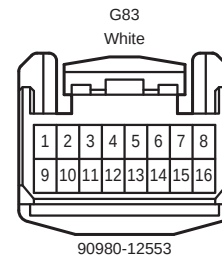
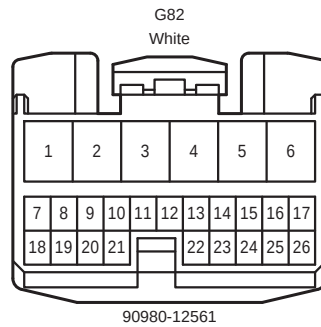
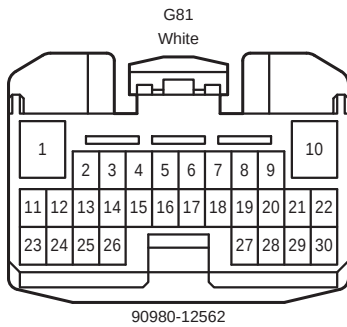
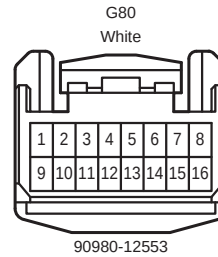
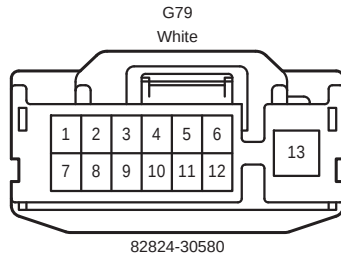
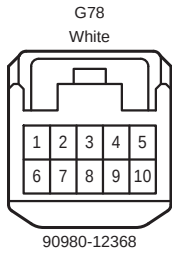
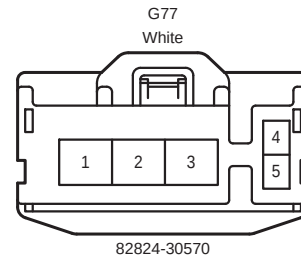
 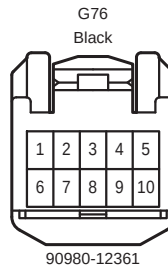
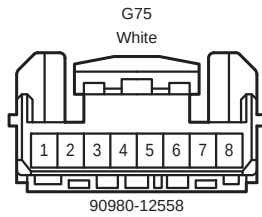

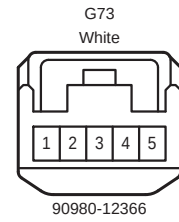
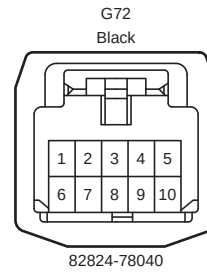


Position of Parts in Instrument Panel <LHD>

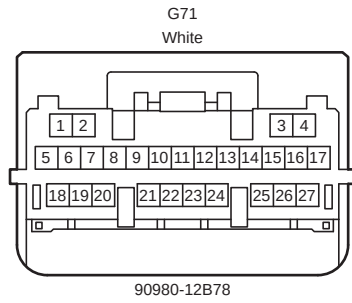

- 70 Front No. 2 Speaker Assembly LH
- 71 Certification ECU Assembly
- 72 Integration Control & Panel Assembly
- 73 Trunk & Fuel Switch Assembly
- 74 Luggage Door Opening Cancel Switch Assembly
- 75 Clock Assembly
- 76 Remote Operation Controller Assembly
- 77 Front Steering Control ECU
- 78 Front Steering Control ECU
- 79 Front Steering Control ECU
- 80 Air Conditioning Control Assembly
- 81 Shift Control ECU
- 82 Shift Control ECU
- 83 Shift Sensor (Transmission Floor Shift Assembly)
- 85 No. 1 Stereo Jack Adapter Assembly
- 88 Meter Mirror Sub-Assembly
- 89 Ion Generator Sub-Assembly
- 90 Vehicle Approaching Speaker Controller
- 91 Instrument Cluster Finish Panel Garnish Assembly(No.3 Instrument Panel Wire & Center Instrument Panel Register Assembly &
- 92 Hybrid Vehicle Control ECU Assembly
- 93 Hybrid Vehicle Control ECU Assembly
- 94 Meter Hood Illumination Light Assembly
- 95 Parking Assist ECU
- 96 Parking Assist ECU
- 97 No. 2 Semiconductor Power Integration ECU
- 98 No. 4 Junction Connector
- 99 No. 5 Junction Connector

Position of Parts in Instrument Panel <LHD>

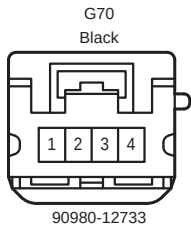

Position of Parts in Instrument Panel <LHD>

