


Position of Parts in Engine Compartment

[LHD]

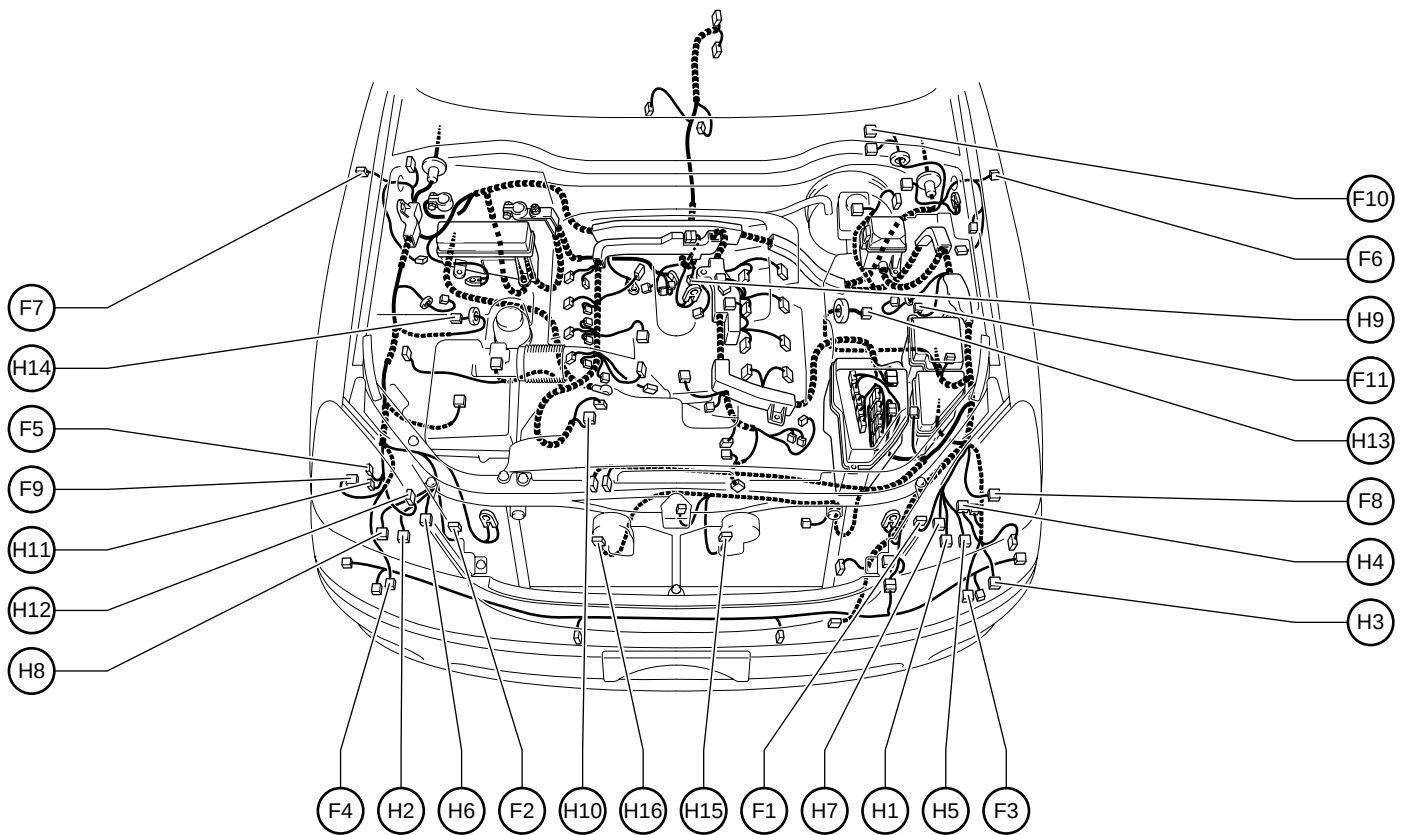

- F 1 Front Clearance Light LH
- F 2 Front Clearance Light RH
- F 3 Front Fog Light LH
- F 4 Front Fog Light RH
- F 5 Front Height Control Valve
- F 6 Front Side Turn Signal Light LH
- F 7 Front Side Turn Signal Light RH
- F 8 Front Turn Signal Light LH
- F 9 Front Turn Signal Light RH
- F10 Front Wiper Motor
- F11 Fuel Pump Resistor

- H 1 Headlight Beam Level Control Actuator LH
- H 2 Headlight Beam Level Control Actuator RH
- H 3 Headlight Cleaner Control Relay
- H 4 Headlight Cleaner Motor
- H 5 Headlight Control ECU LH
- H 6 Headlight Control ECU RH
- H 7 Headlight LH (High)
- H 8 Headlight RH (High)
- H 9 Heated Oxygen Sensor (Bank 1 Sensor 1)
- H10 Heated Oxygen Sensor (Bank 2 Sensor 1)
- H11 Height Control Compressor
- H12 Height Control Exhaust Valve
- H13 Height Control Sensor Front LH
- H14 Height Control Sensor Front RH
- H15 Horn (High)
- H16 Horn (Low)