


Position of Parts in Body

[LHD]

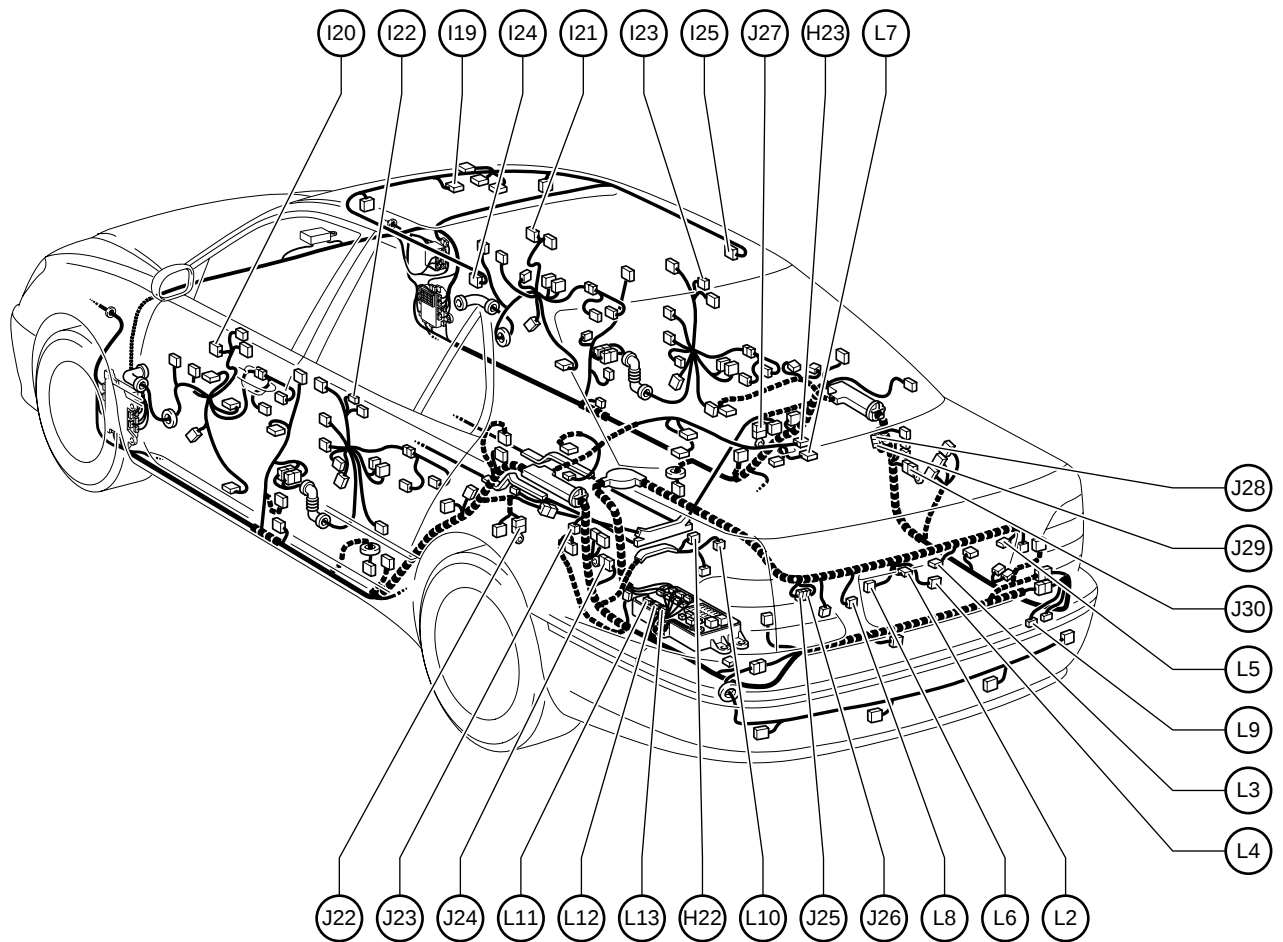

H22 Height Control Sensor Rear

H23 High Mounted Stop Light

I 19 Inner Mirror

I 20 Inside Handle Illumination Front LH

I 21 Inside Handle Illumination Front RH

I 22 Inside Handle Illumination Rear LH

I 23 Inside Handle Illumination Rear RH

I 24 Interior Light Rear LH

I 25 Interior Light Rear RH

J 22 Junction Connector

J 23 Junction Connector

J 24 Junction Connector

J 25 Junction Connector

J 26 Junction Connector

J 27 Junction Connector

J 28 Junction Connector

J 29 Junction Connector

J 30 Junction Connector

L 2 License Plate Light LH

L 3 License Plate Light RH

L 4 Luggage Compartment Door Closer Motor

L 5 Luggage Compartment Door Courtesy SW

L 6 Luggage Compartment Door Key Unlock SW

L 7 Luggage Compartment Light No.1

L 8 Luggage Compartment Light No.2

L 9 Luggage Oscillator (Inner)

L 10 Luggage Oscillator (Outer)

L 11 Luggage Room J/B ECU

L 12 Luggage Room J/B ECU

L 13 Luggage Room J/B ECU