


Position of Parts in Instrument Panel

[RHD]

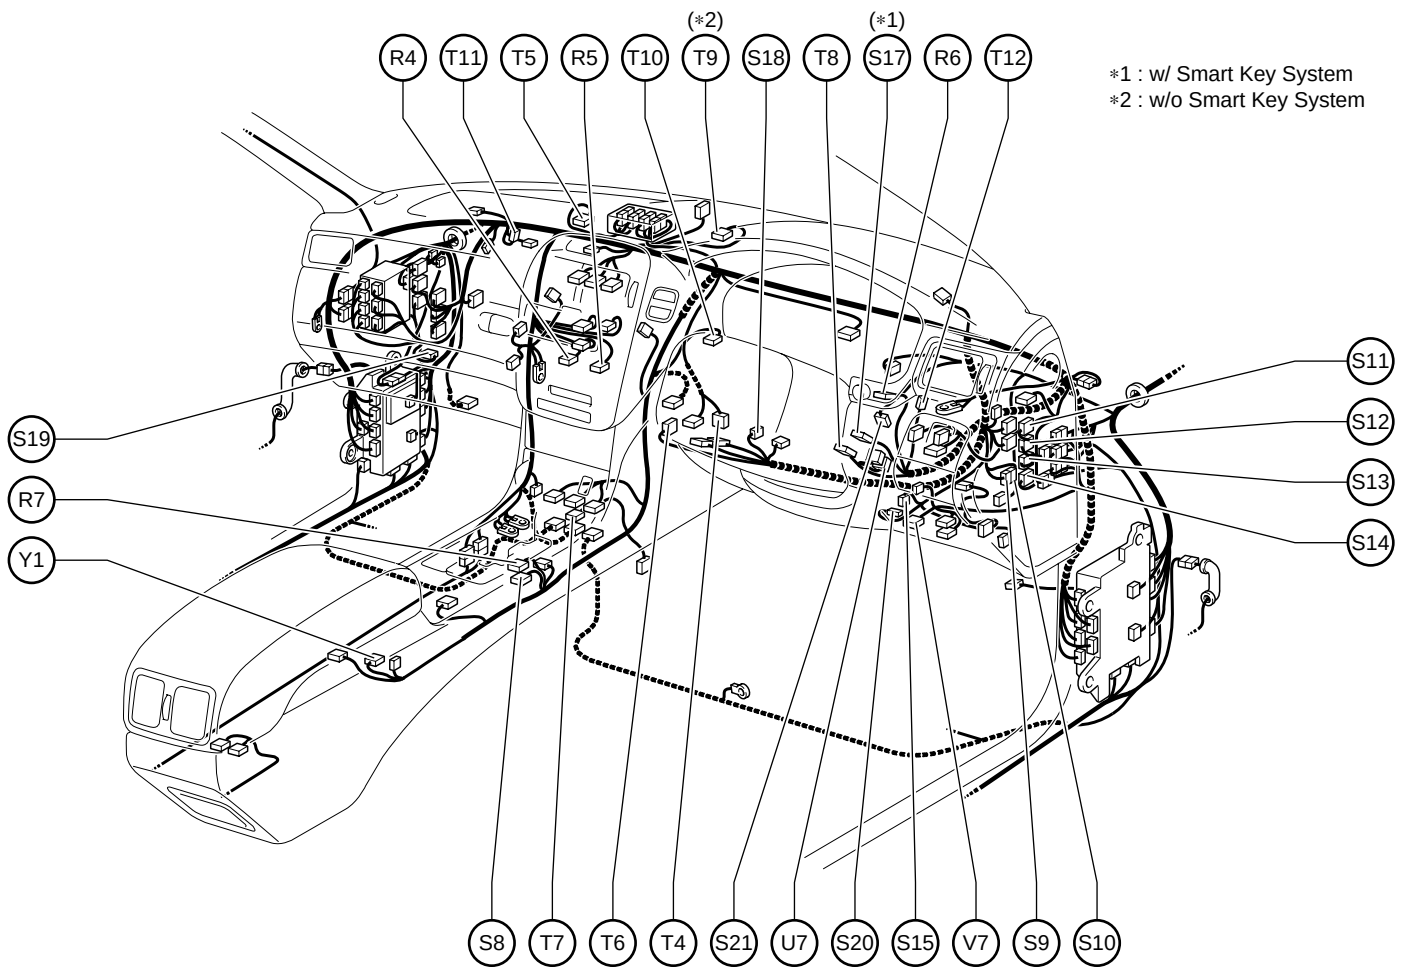

*1 : w/ Smart Key System
*2 : w/o Smart Key System

R 4 Radio and Player
R 5 Radio and Player
R 6 Rheostat
R 7 Room Oscillator (Front)

S 8 Shift Lock Control ECU
S 9 Short Connector (Height Control)
S10 Short Connector (Height Control)
S11 Skid Control ECU
S12 Skid Control ECU
S13 Skid Control ECU
S14 Skid Control ECU
S15 Smart Key System Cancel SW
S17 Steering Lock ECU
S18 Steering Sensor
S19 Step Light LH
S20 Step Light RH
S21 Stop Light SW

T 4 Telescopic Motor and Position Sensor
T 5 Theft Deterrent ECU
T 6 Tilt Motor and Position Sensor
T 7 Traction Control SW, Seat Heater SW LH,
Seat Heater SW RH, Climate Control Seat SW LH,
Climate Control Seat SW RH, Headlight Cleaner SW,
Rear Sunshade SW, Rear Seat Reset SW
T 8 Transponder Key Amplifier
T 9 Transponder Key Computer
T10 Trip SW
T11 Tweeter Front LH
T12 Tweeter Front RH
U 7 Unlock Warning SW
V 7 VSC Warning Buzzer
Y 1 Yaw Rate Sensor