




MULTIPLEX COMMUNICATION SYSTEM (J/B ECU) [RHD]

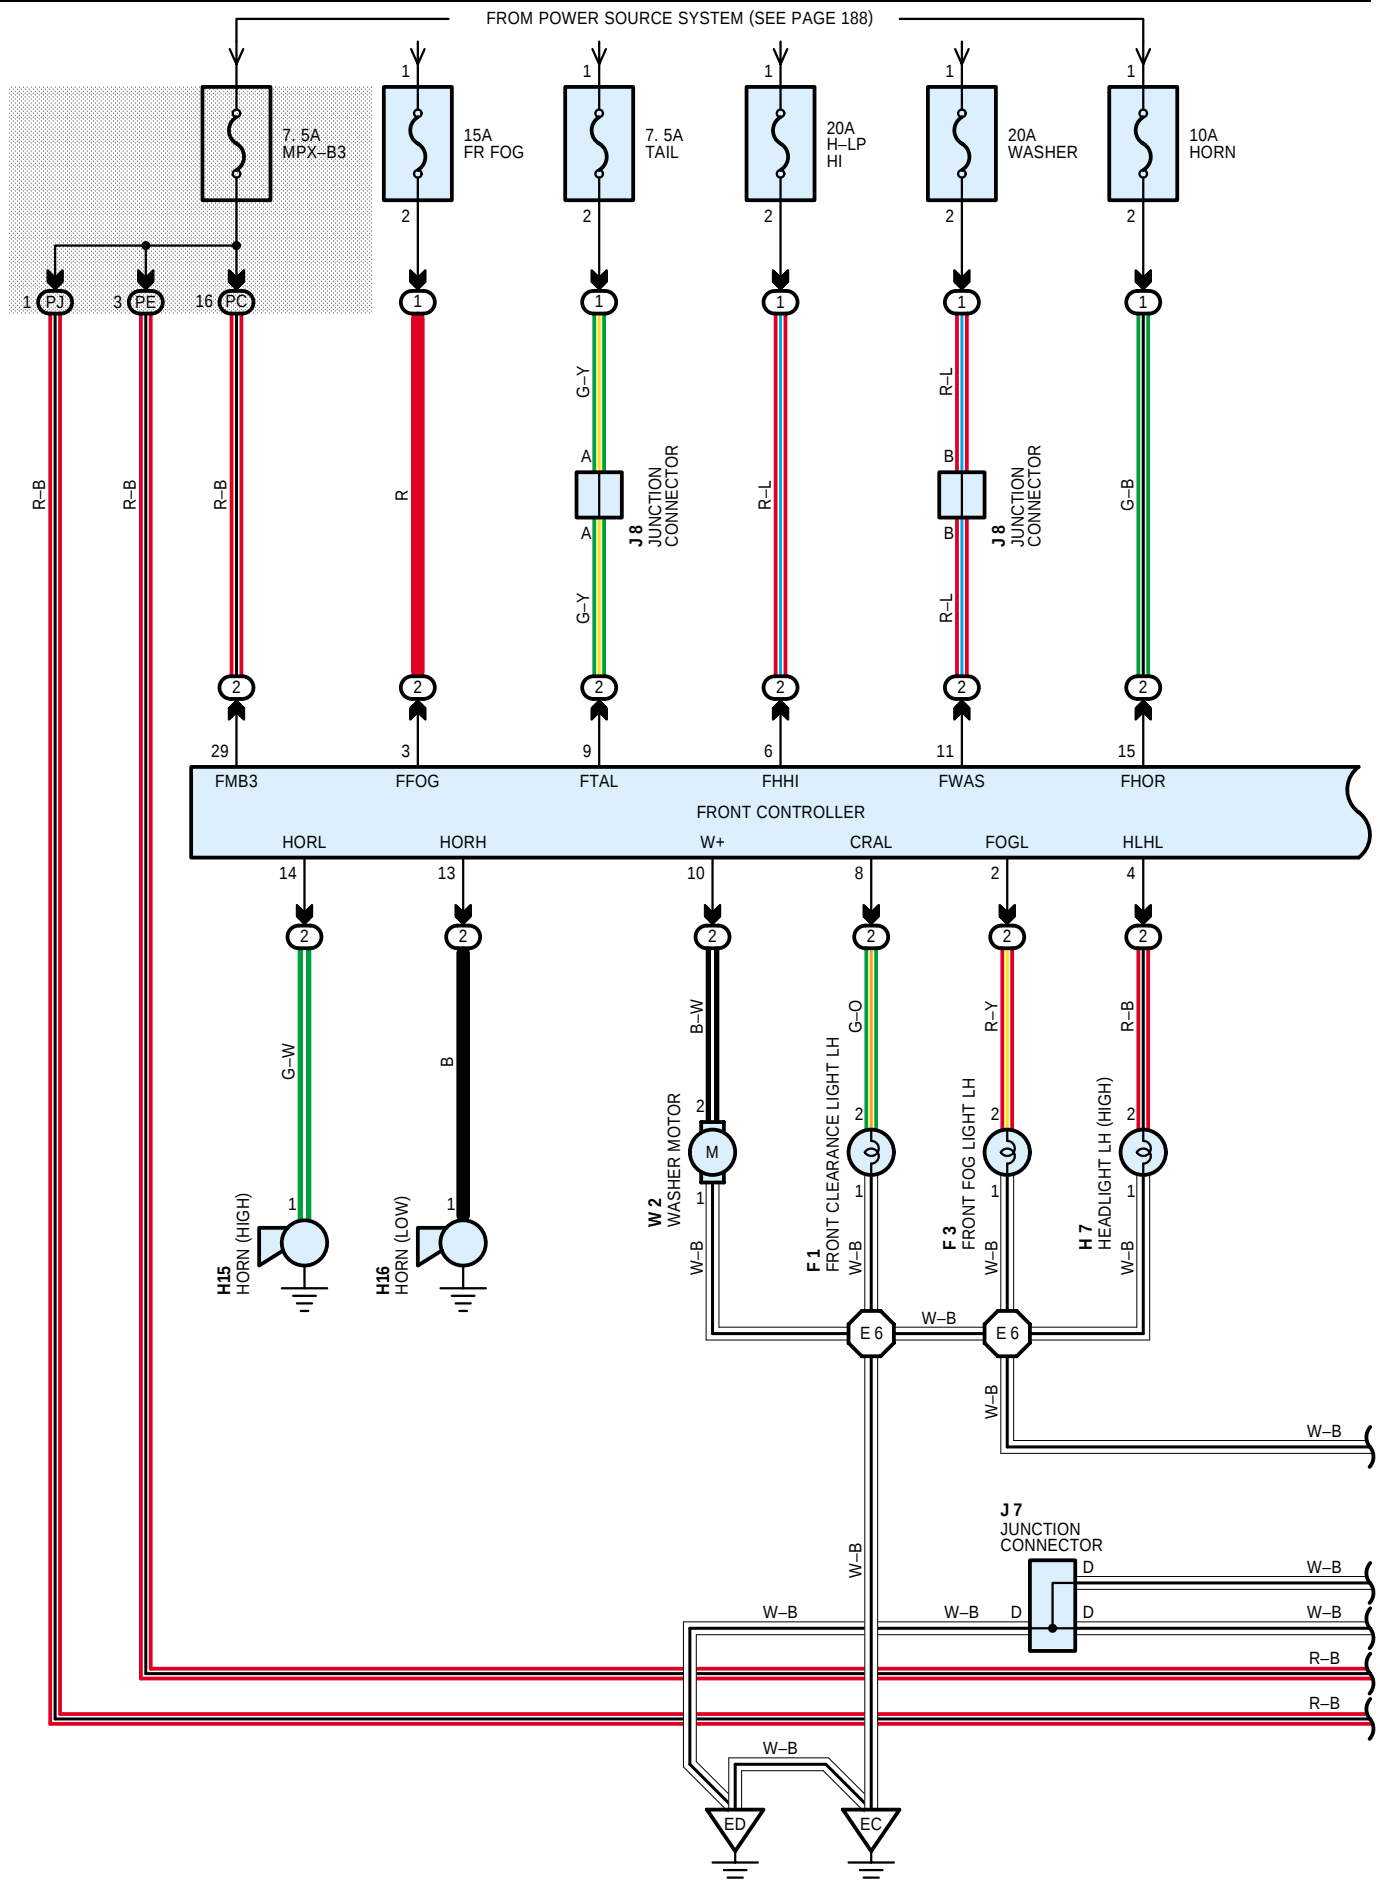

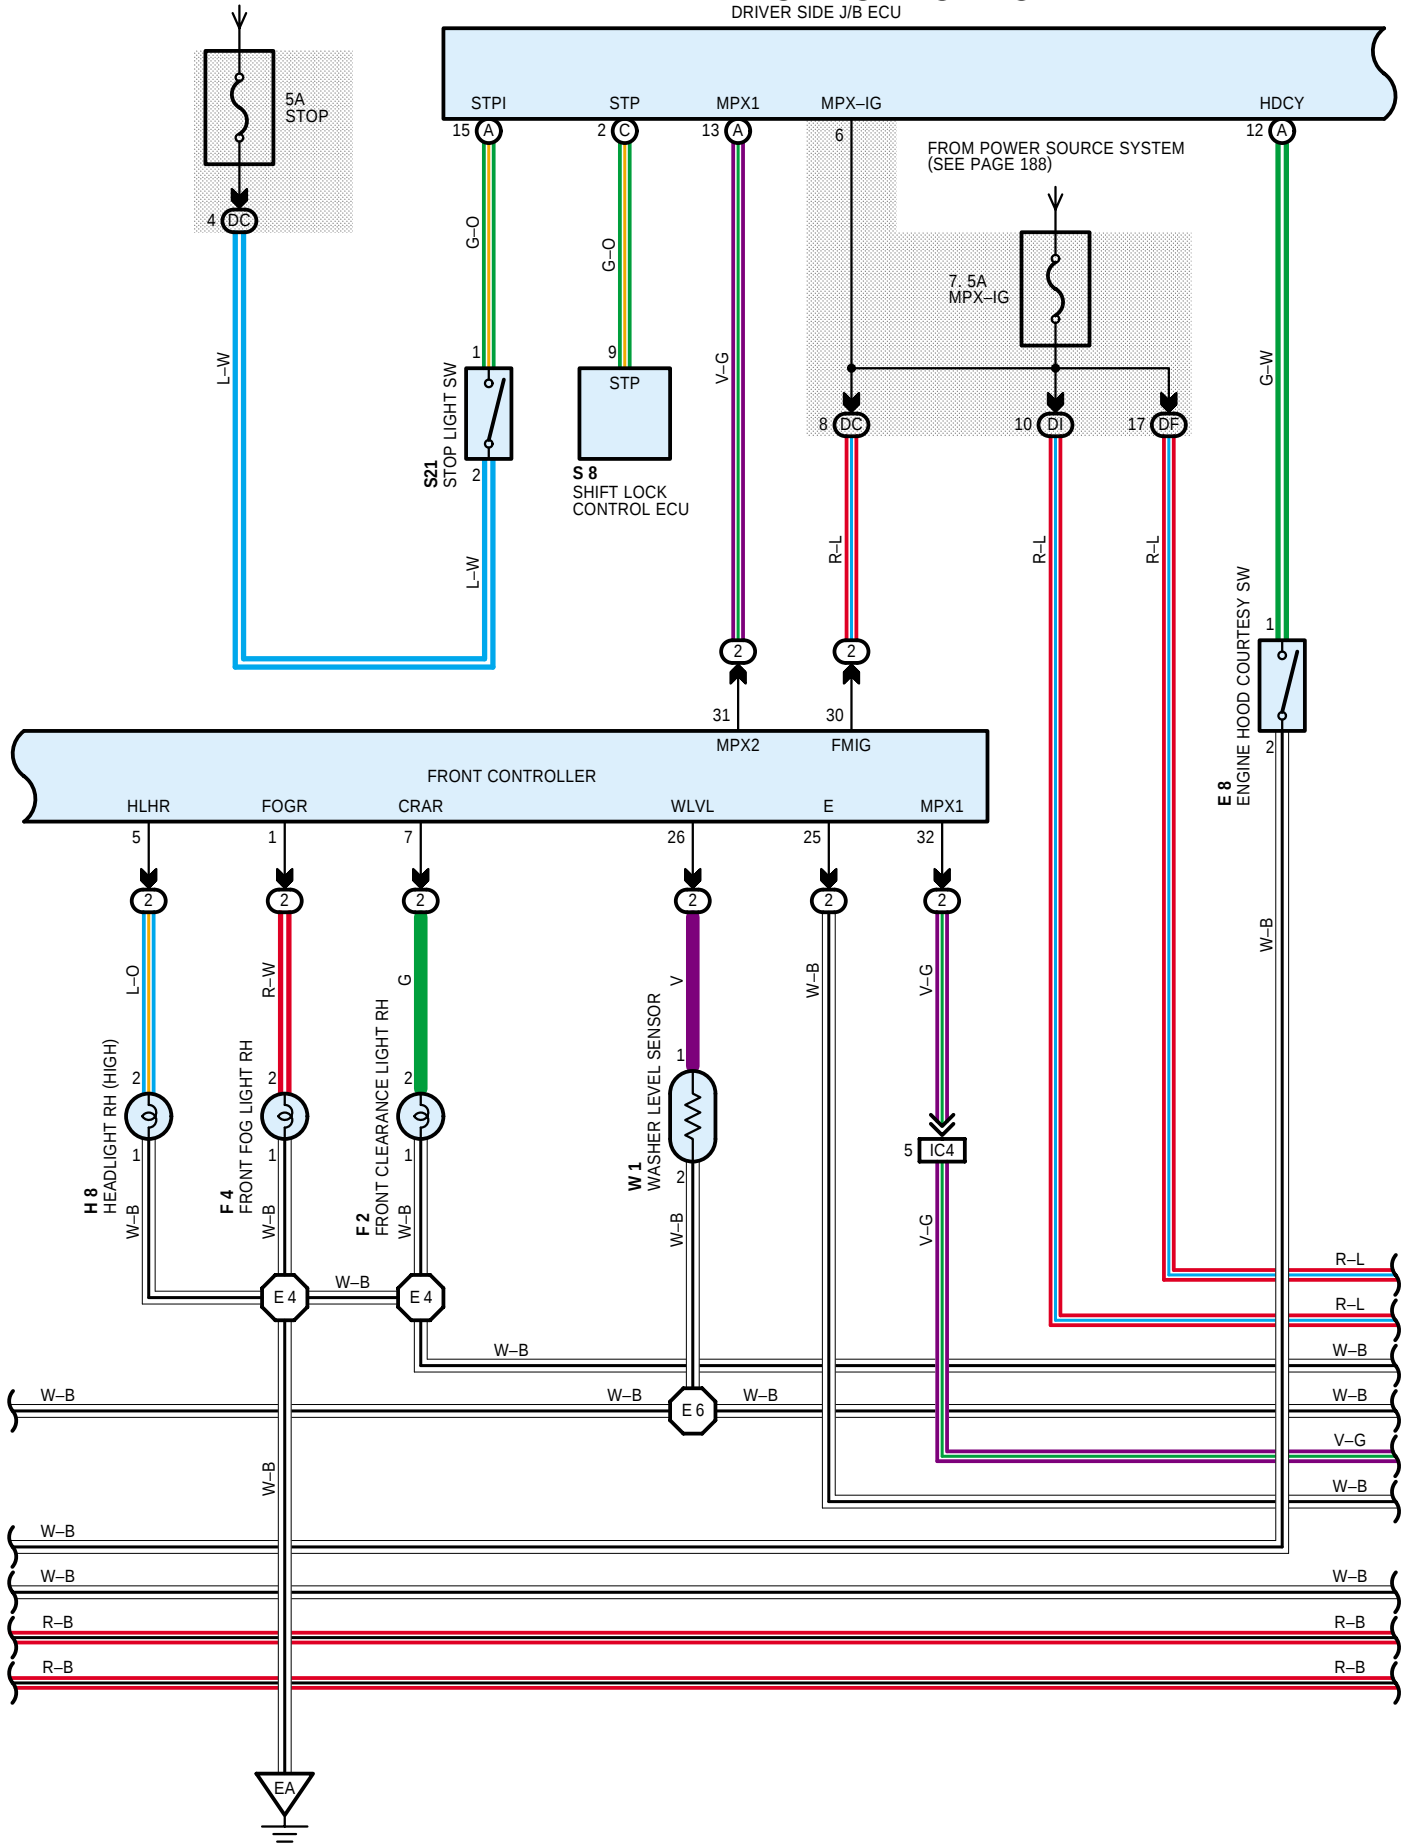


MULTIPLEX COMMUNICATION SYSTEM (J/B ECU) [RHD]

D2 (A), D3 (B), D4 (C), D5 (D)
DRIVER SIDE J/B ECU

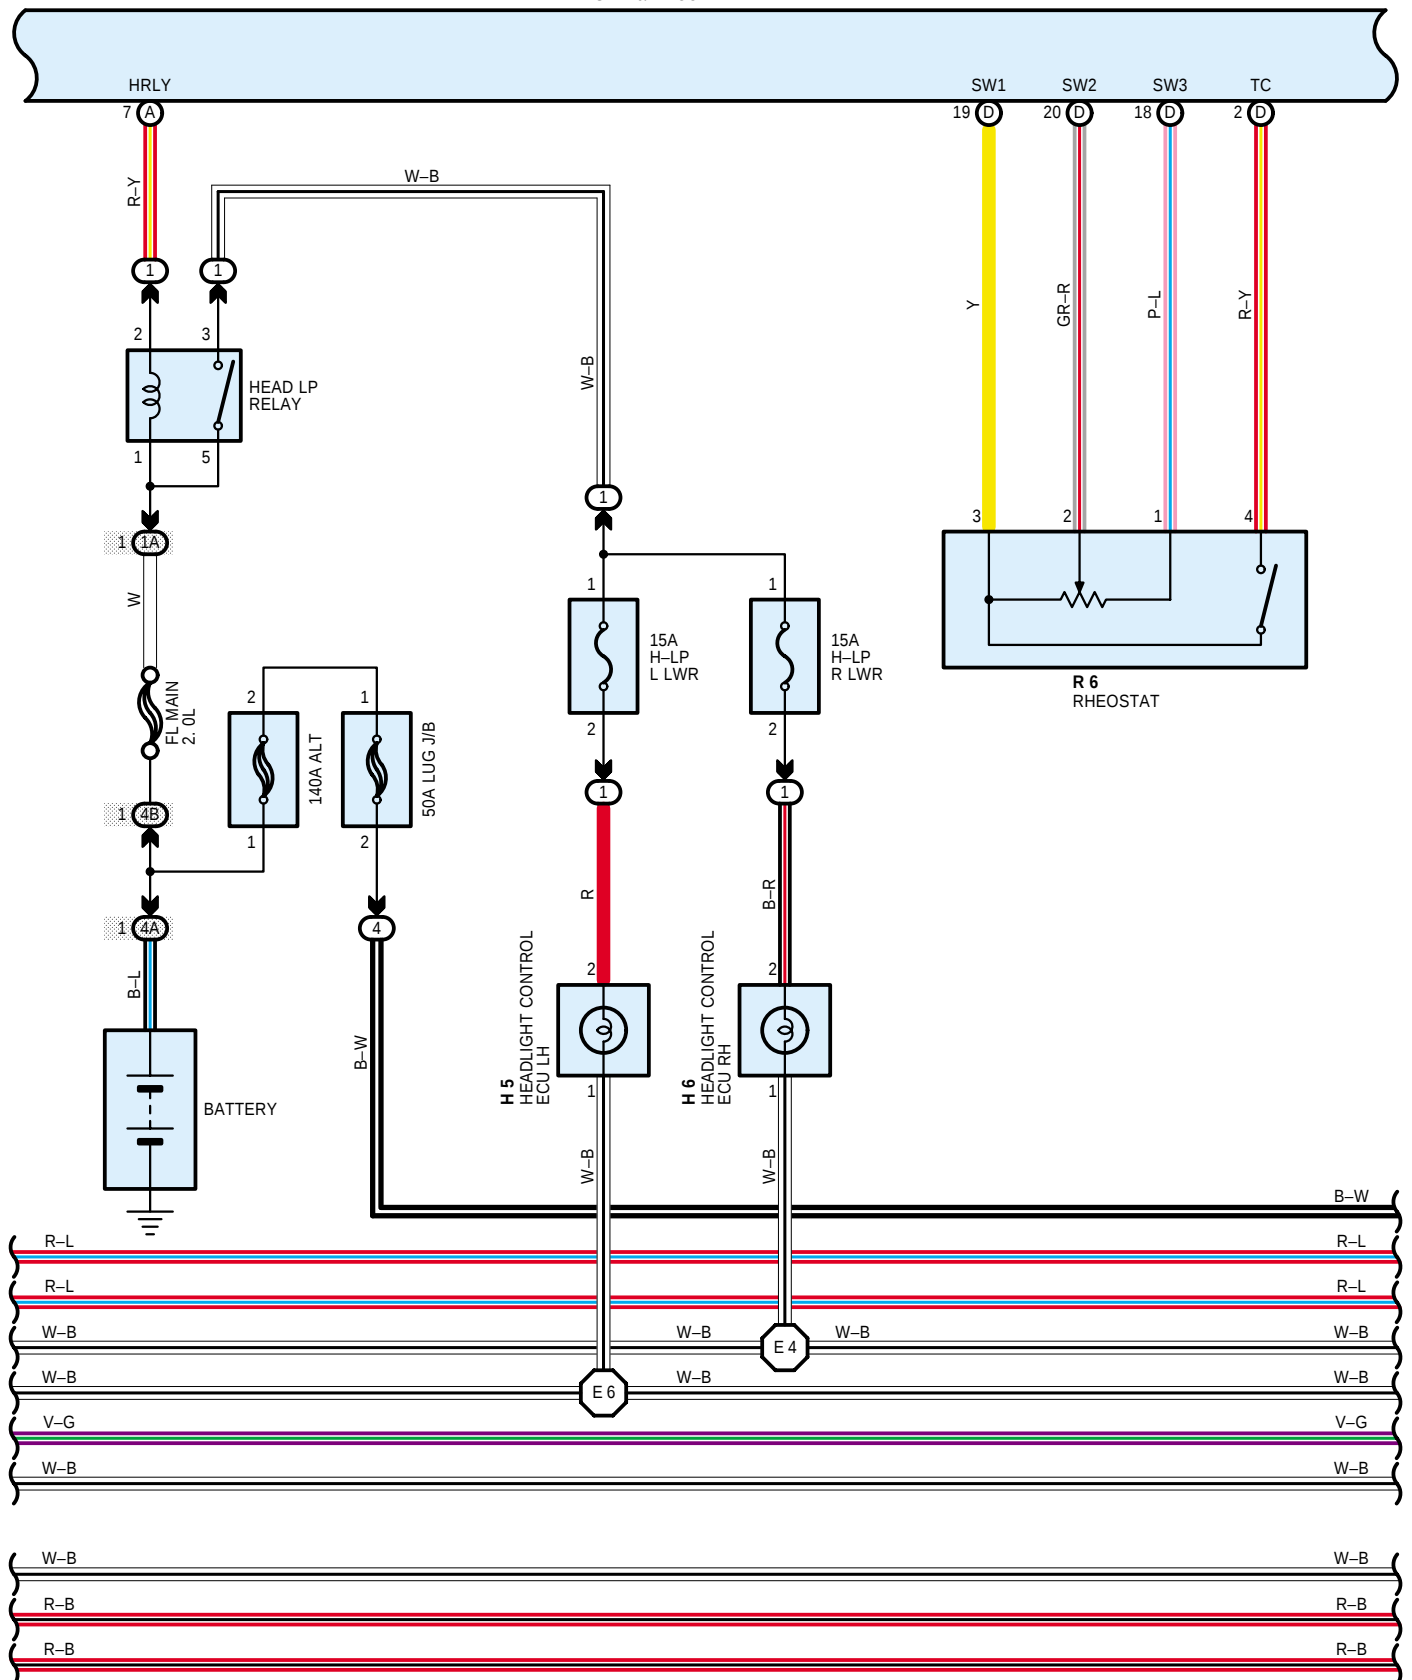



D2 (A), D3 (B), D4 (C), D5 (D)
DRIVER SIDE J/B ECU

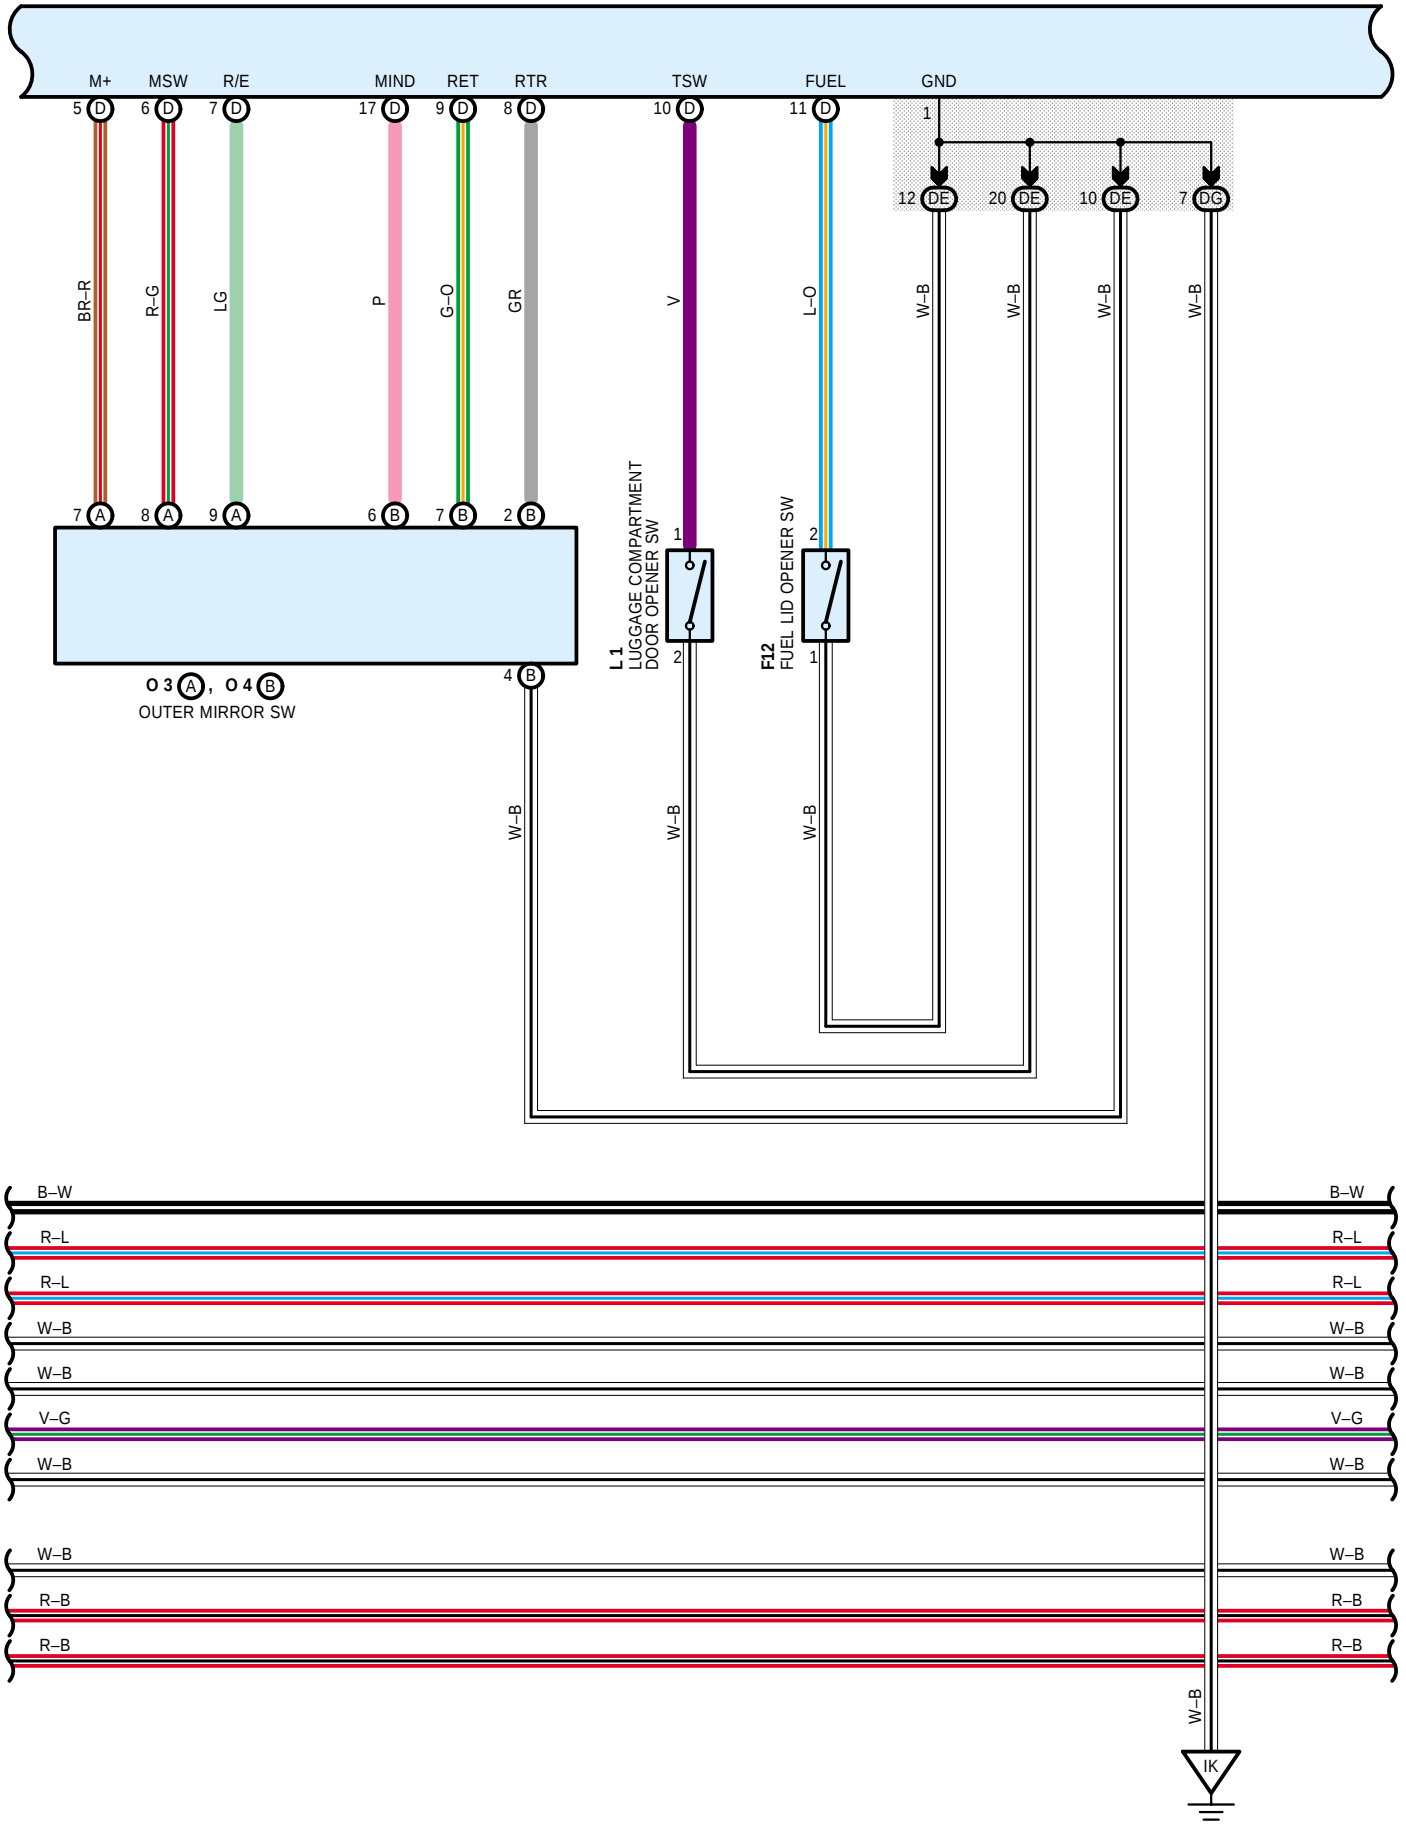

MULTIPLEX COMMUNICATION SYSTEM (J/B ECU) [RHD]


D2 (A), D3 (B), D4 (C), D5 (D)
DRIVER SIDE J/B ECU

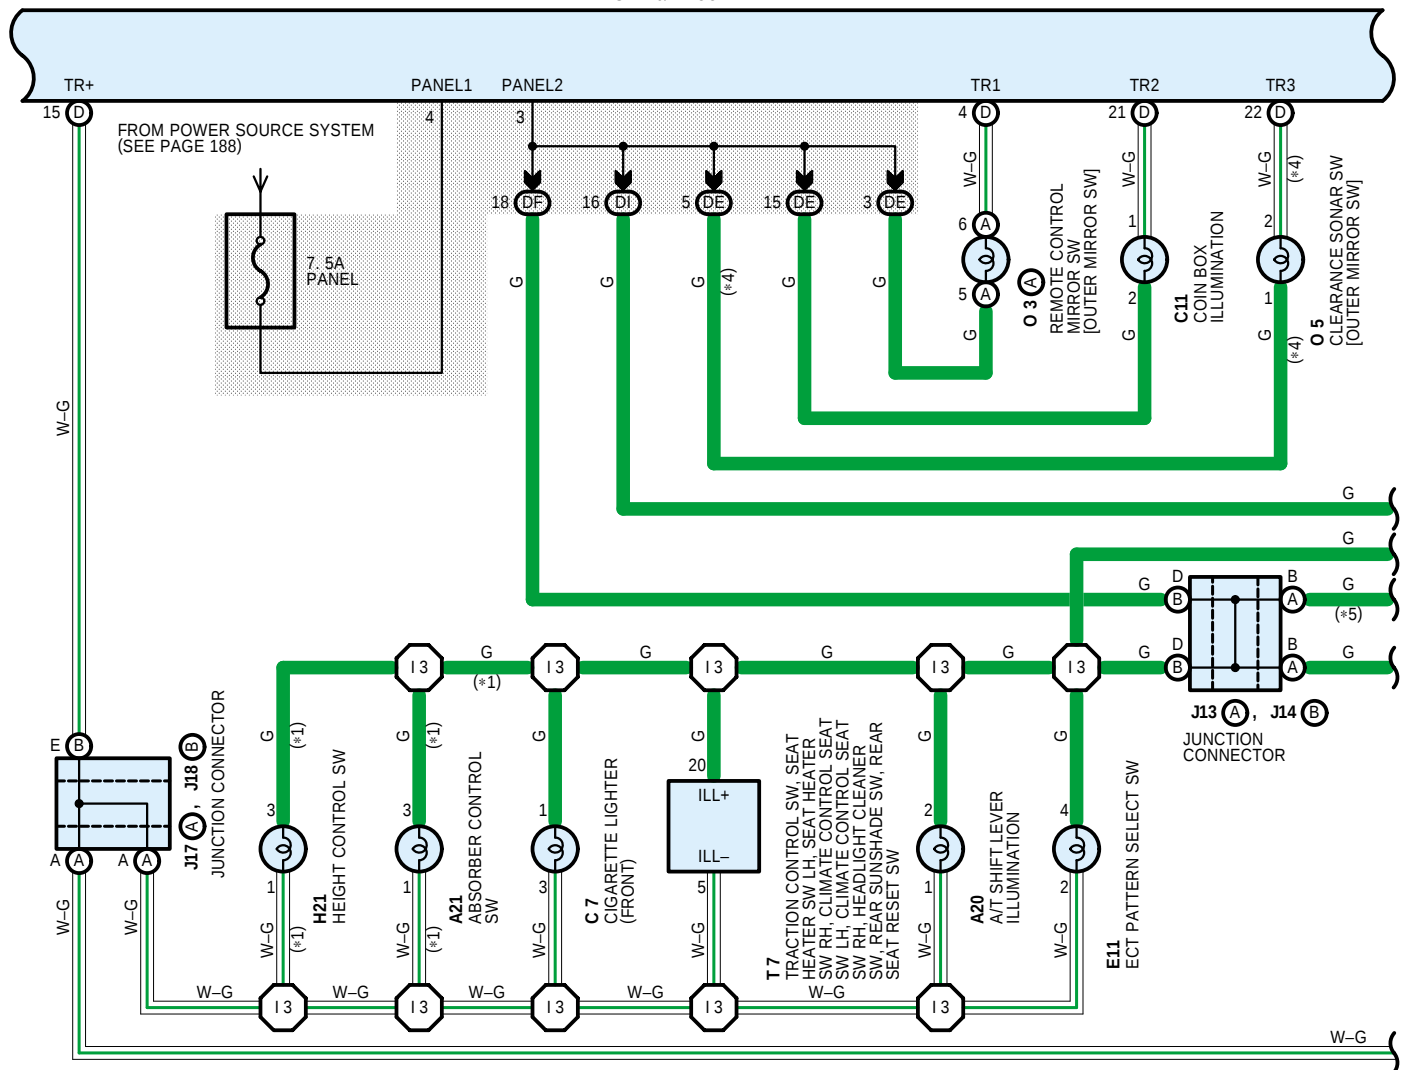

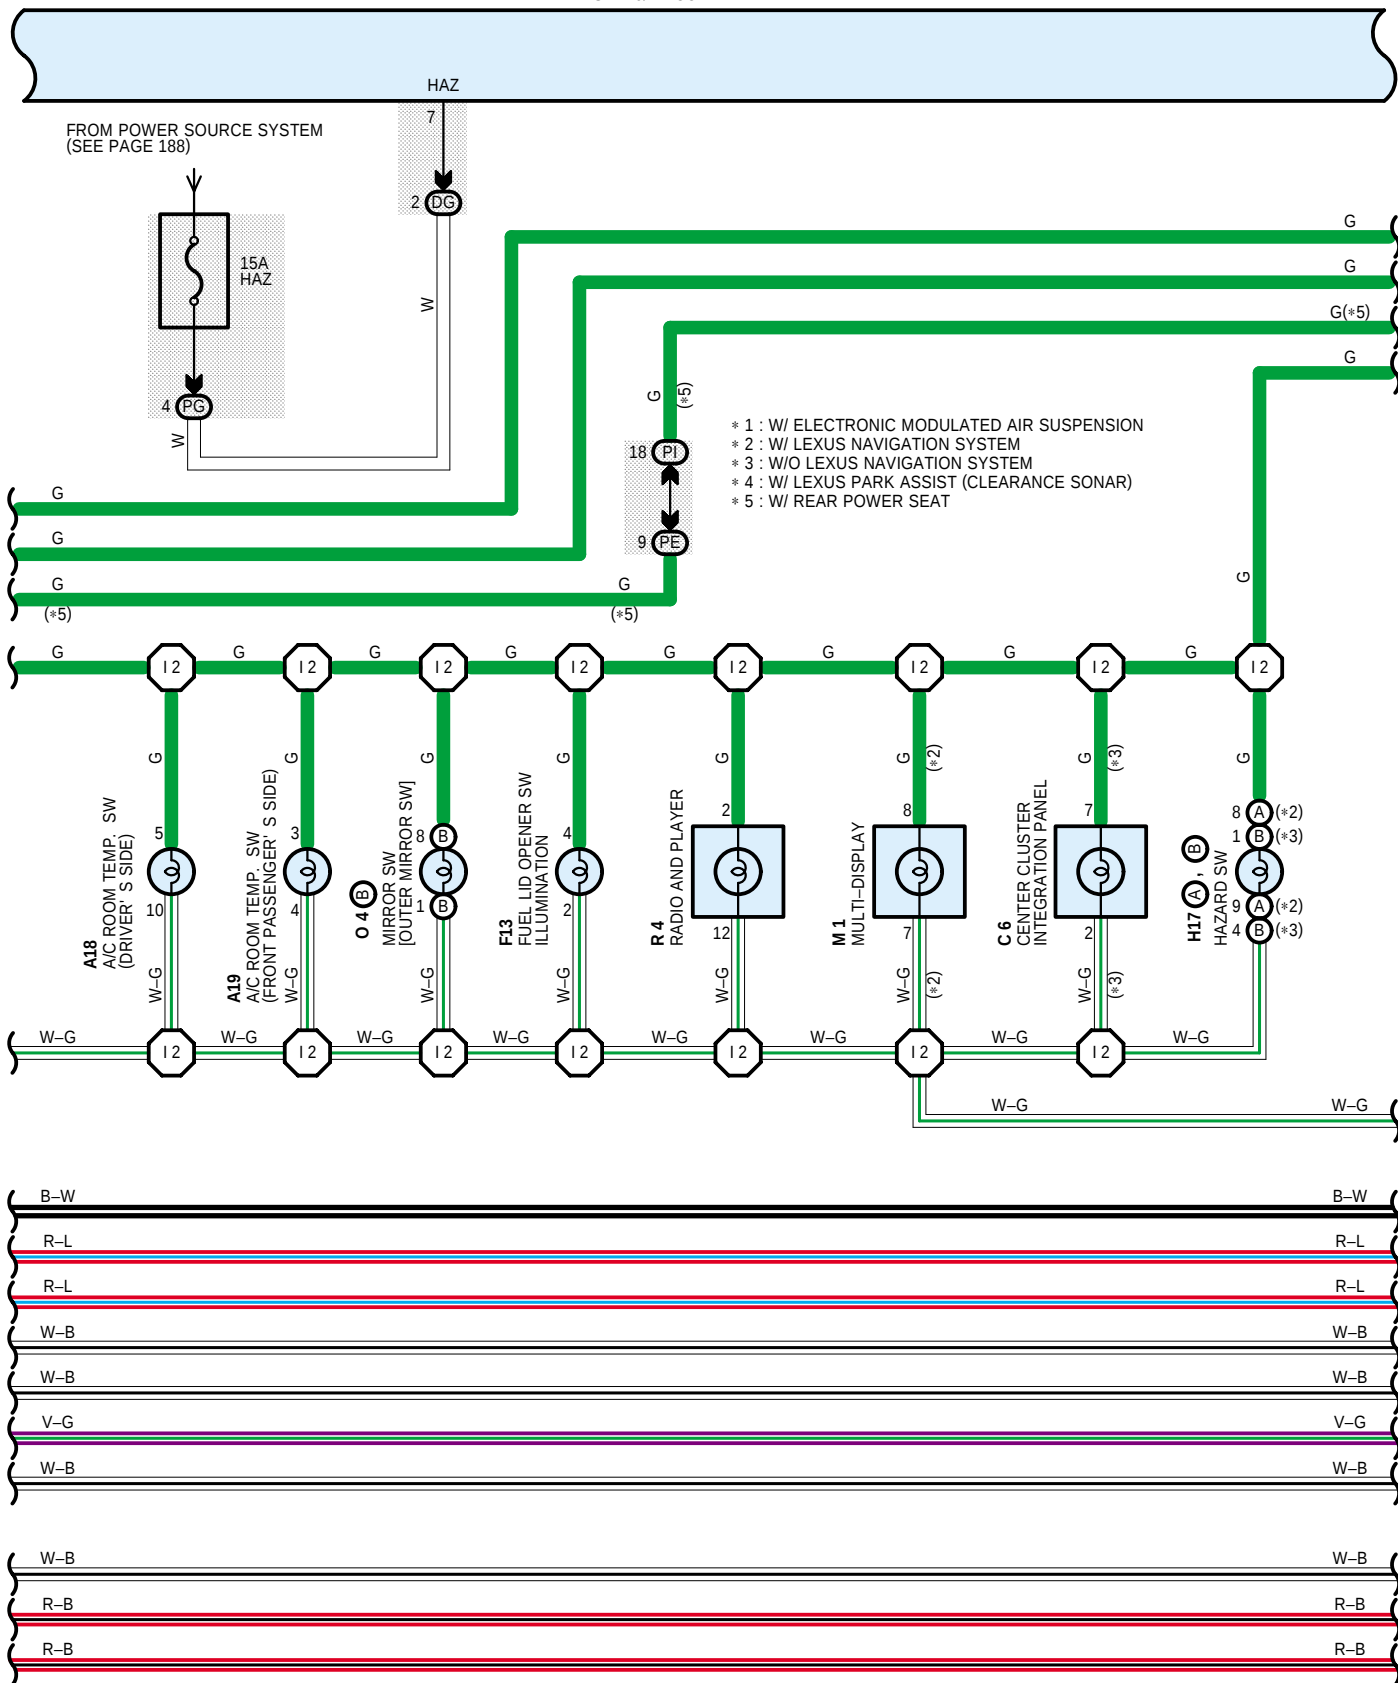


MULTIPLEX COMMUNICATION SYSTEM (J/B ECU) [RHD]

D2 (A), D3 (B), D4 (C), D5 (D)
DRIVER SIDE J/B ECU

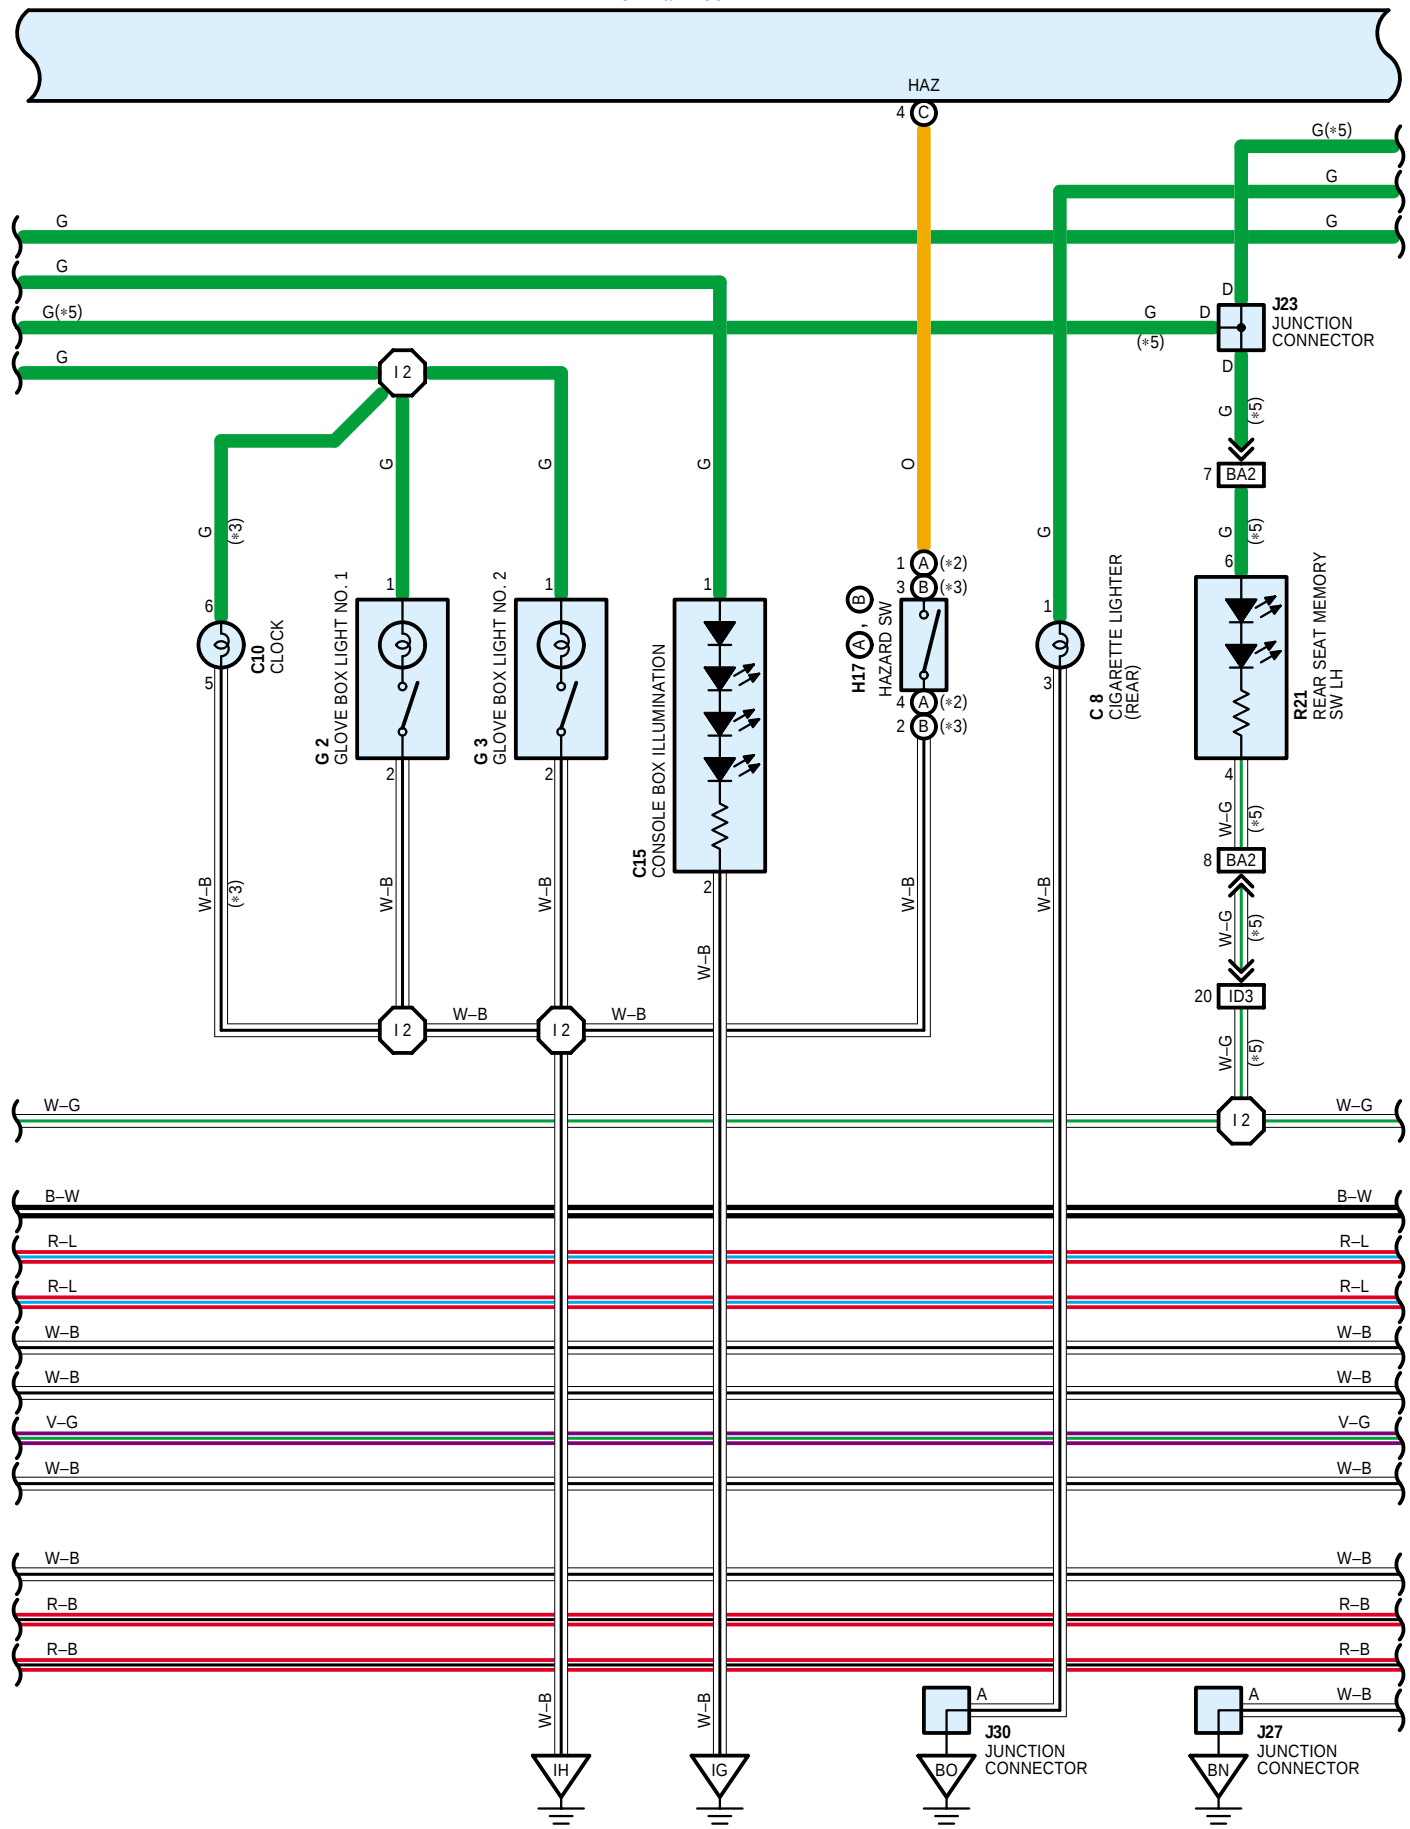


- * 6 : W/O REAR POWER SEAT
- * 7 : W/ REAR COOLER

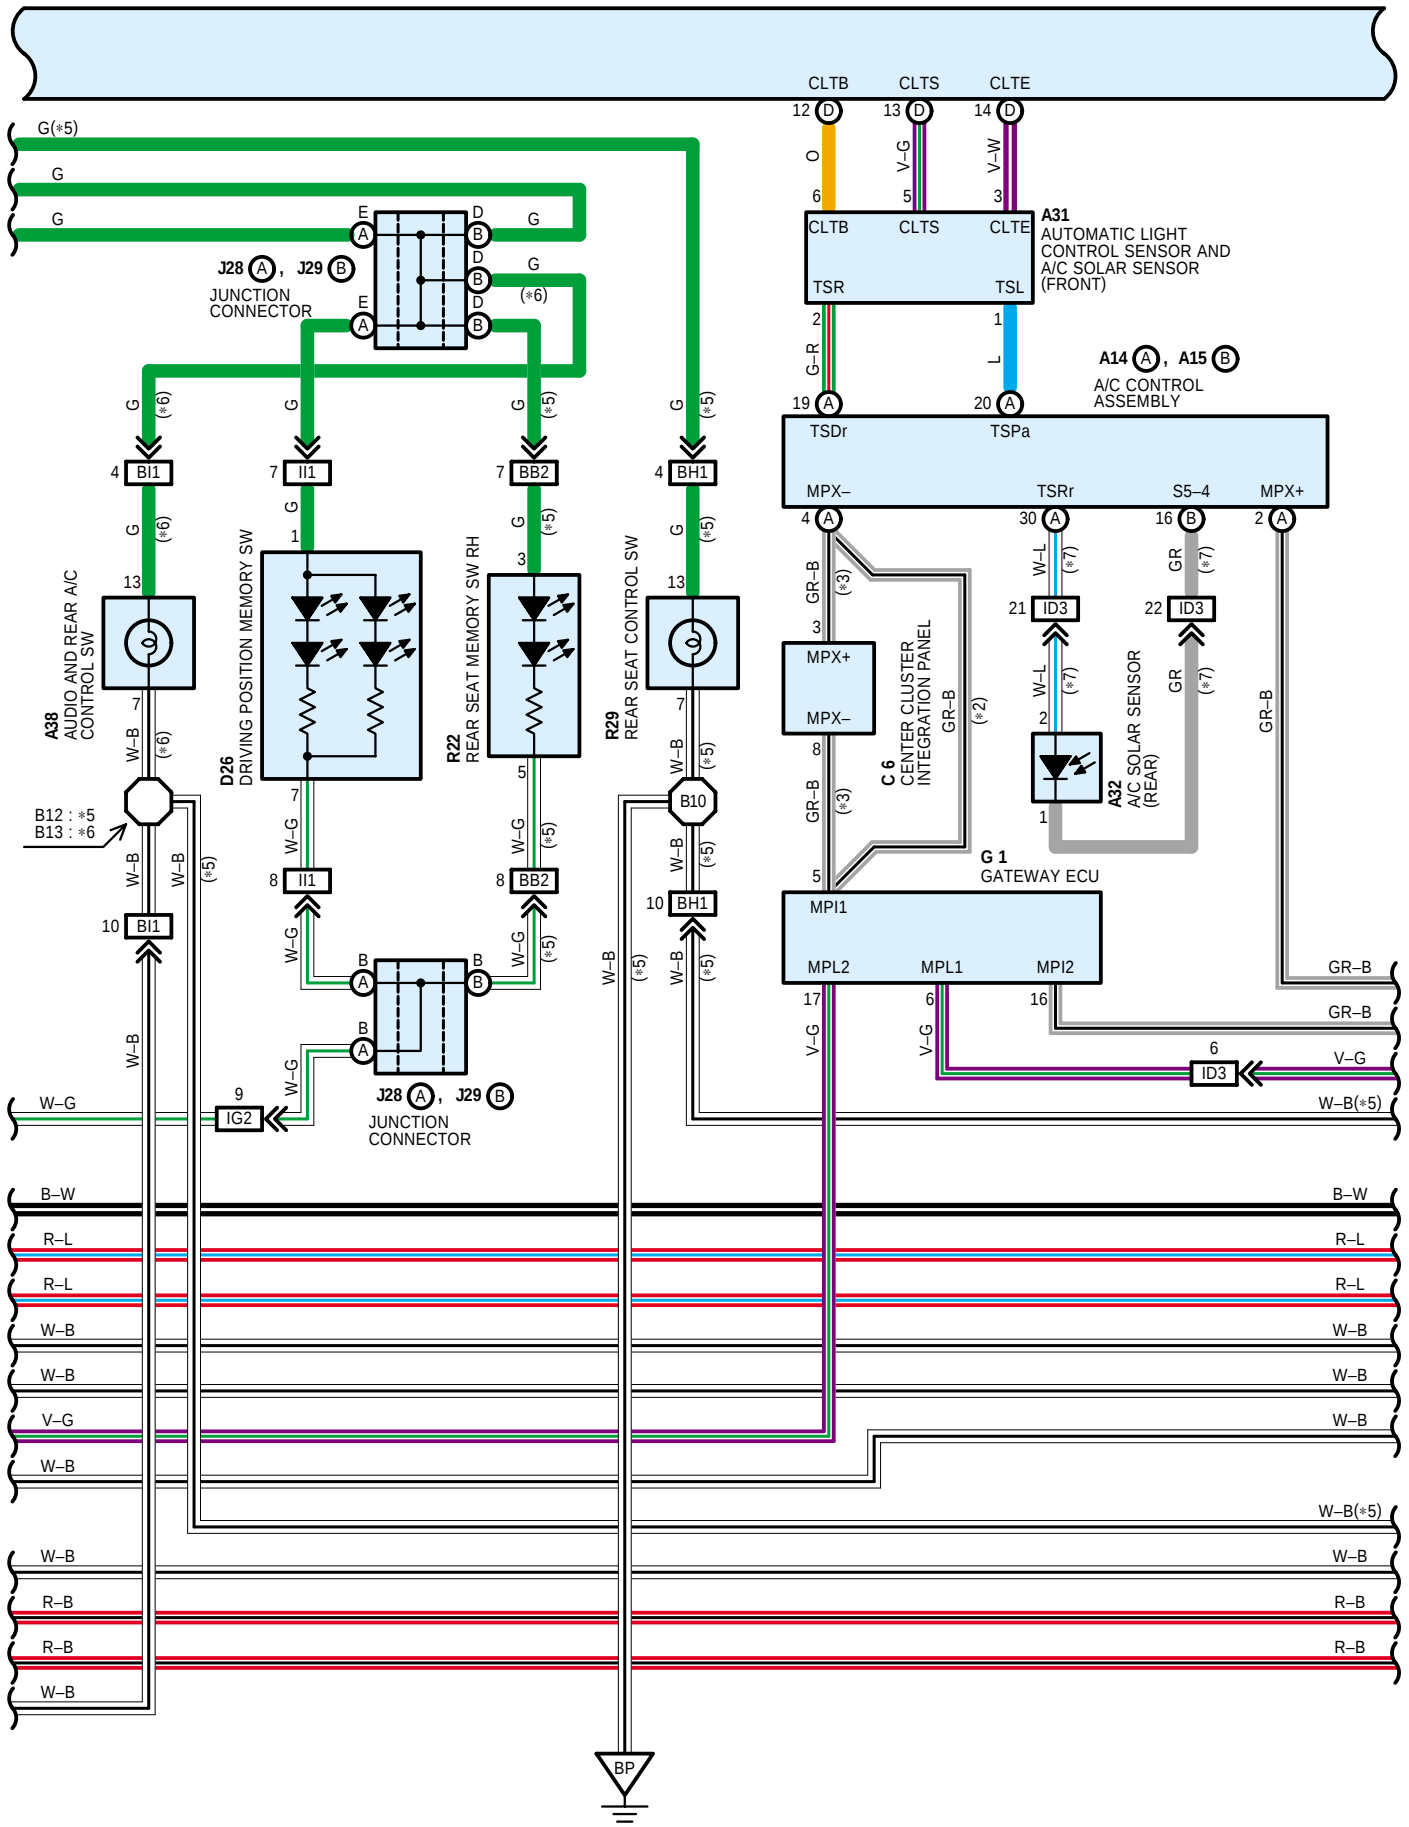


MULTIPLEX COMMUNICATION SYSTEM (J/B ECU) [RHD]

D 2 (A), D 3 (B), D 4 (C), D 5 (D)
DRIVER SIDE J/B ECU

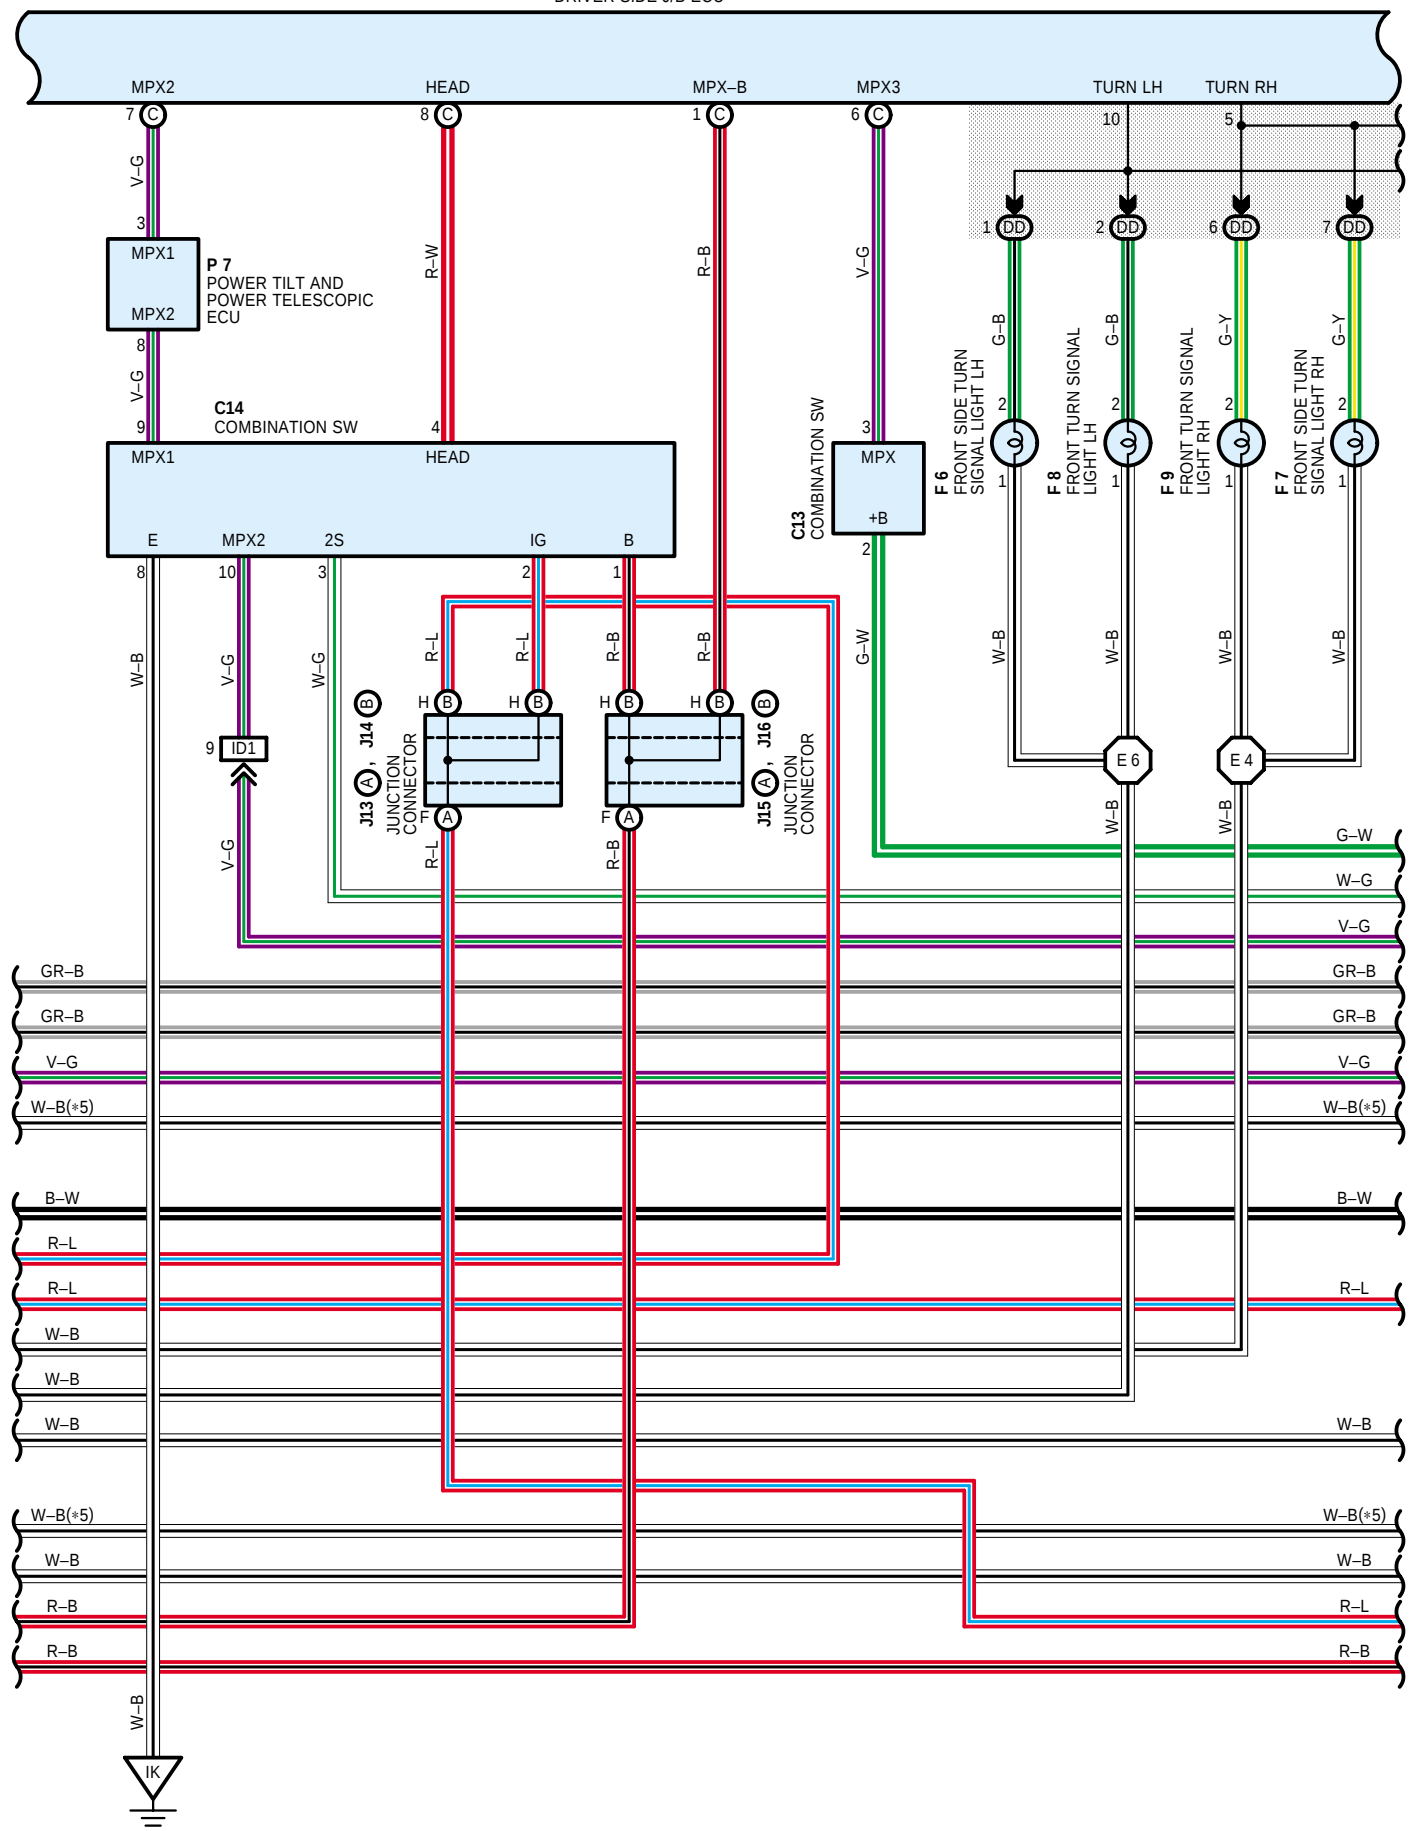


D2 (A), D3 (B), D4 (C), D5 (D)
DRIVER SIDE J/B ECU

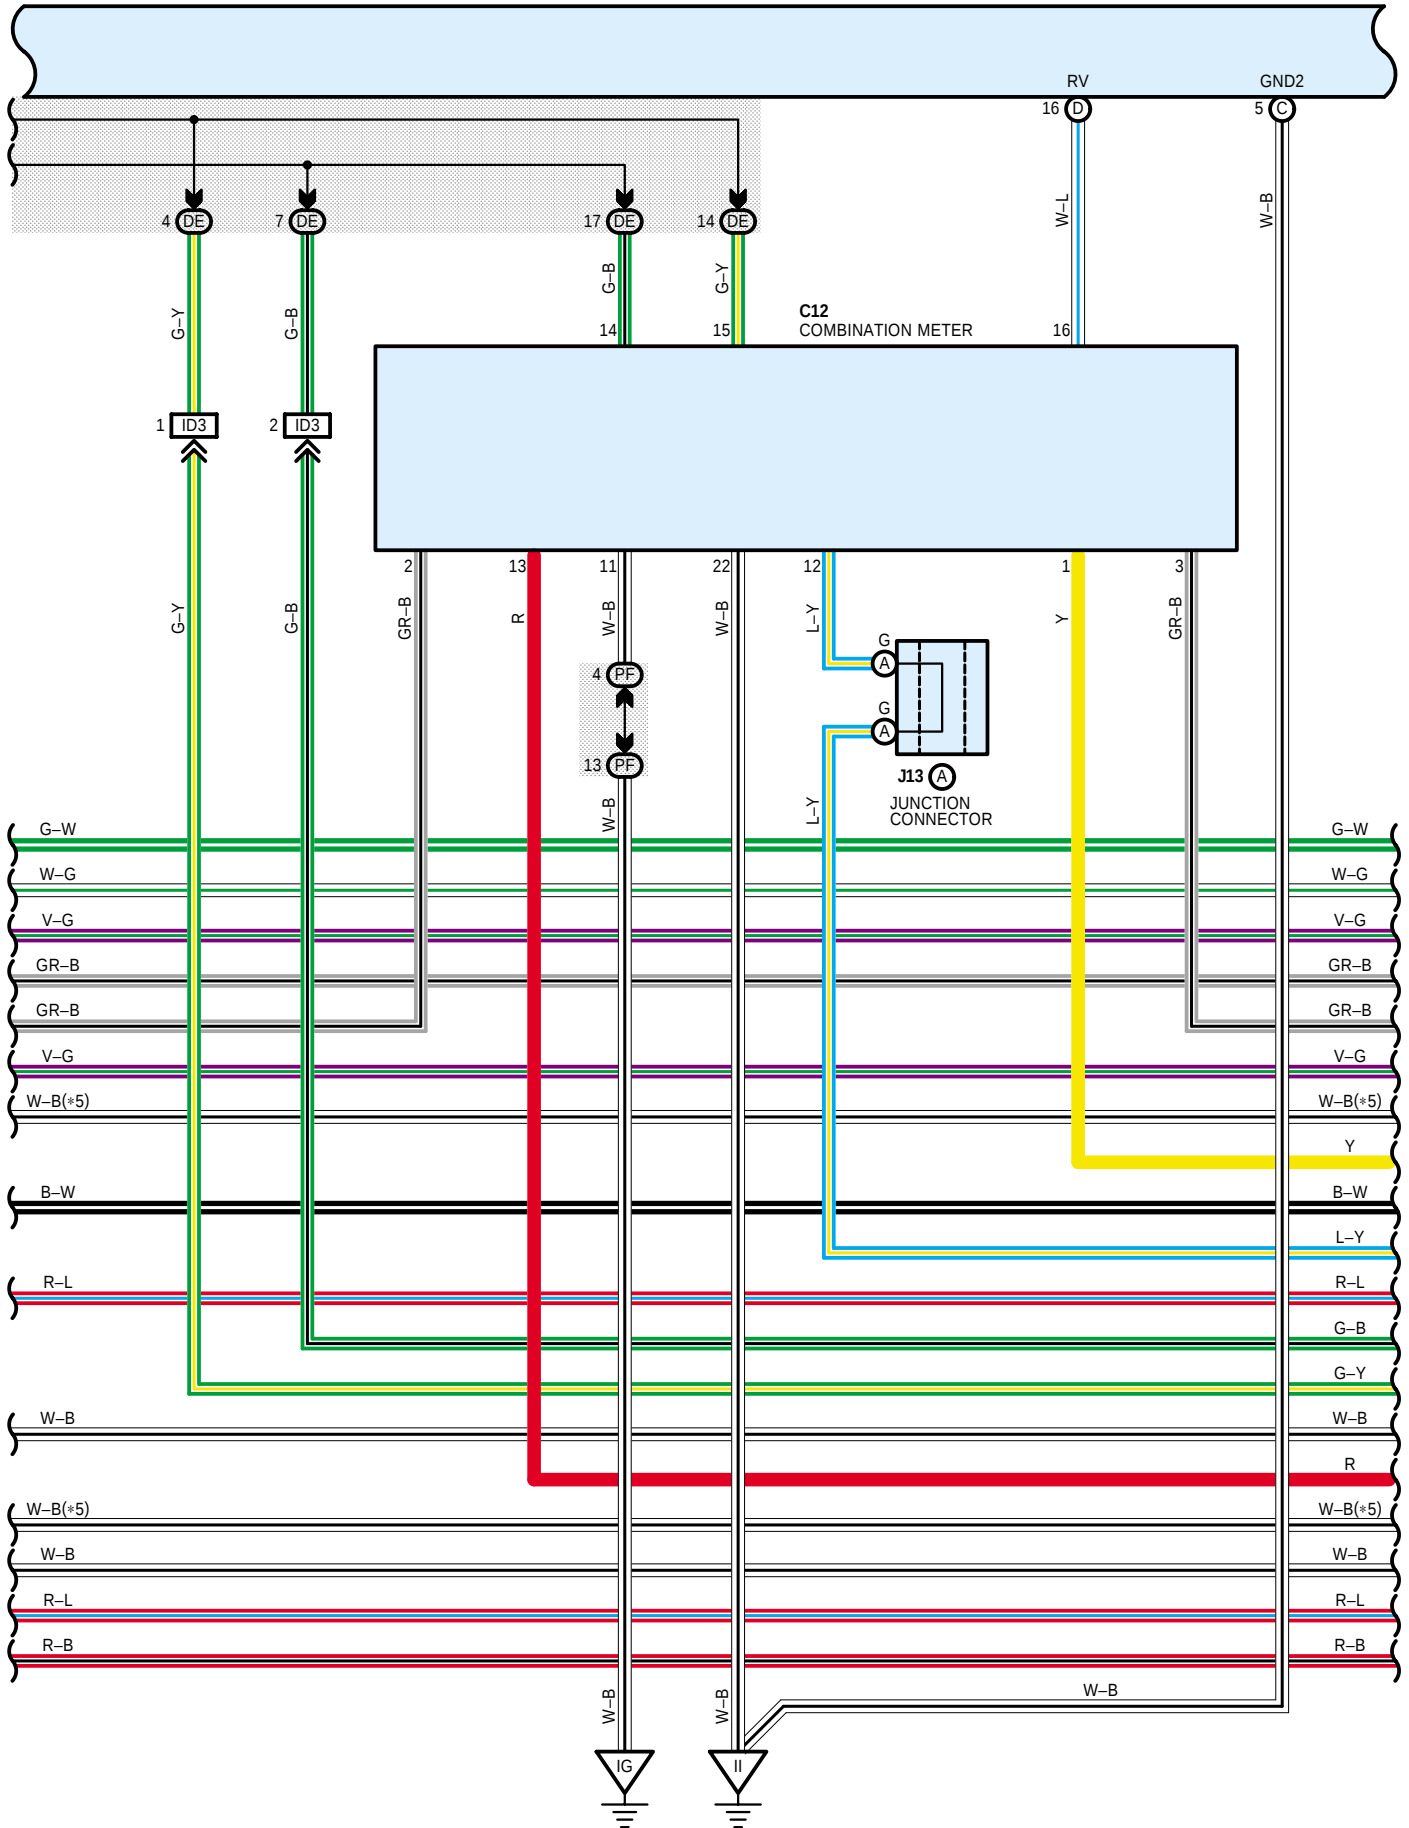


MULTIPLEX COMMUNICATION SYSTEM (J/B ECU) [RHD]


D2 (A), D3 (B), D4 (C), D5 (D)
DRIVER SIDE J/B ECU

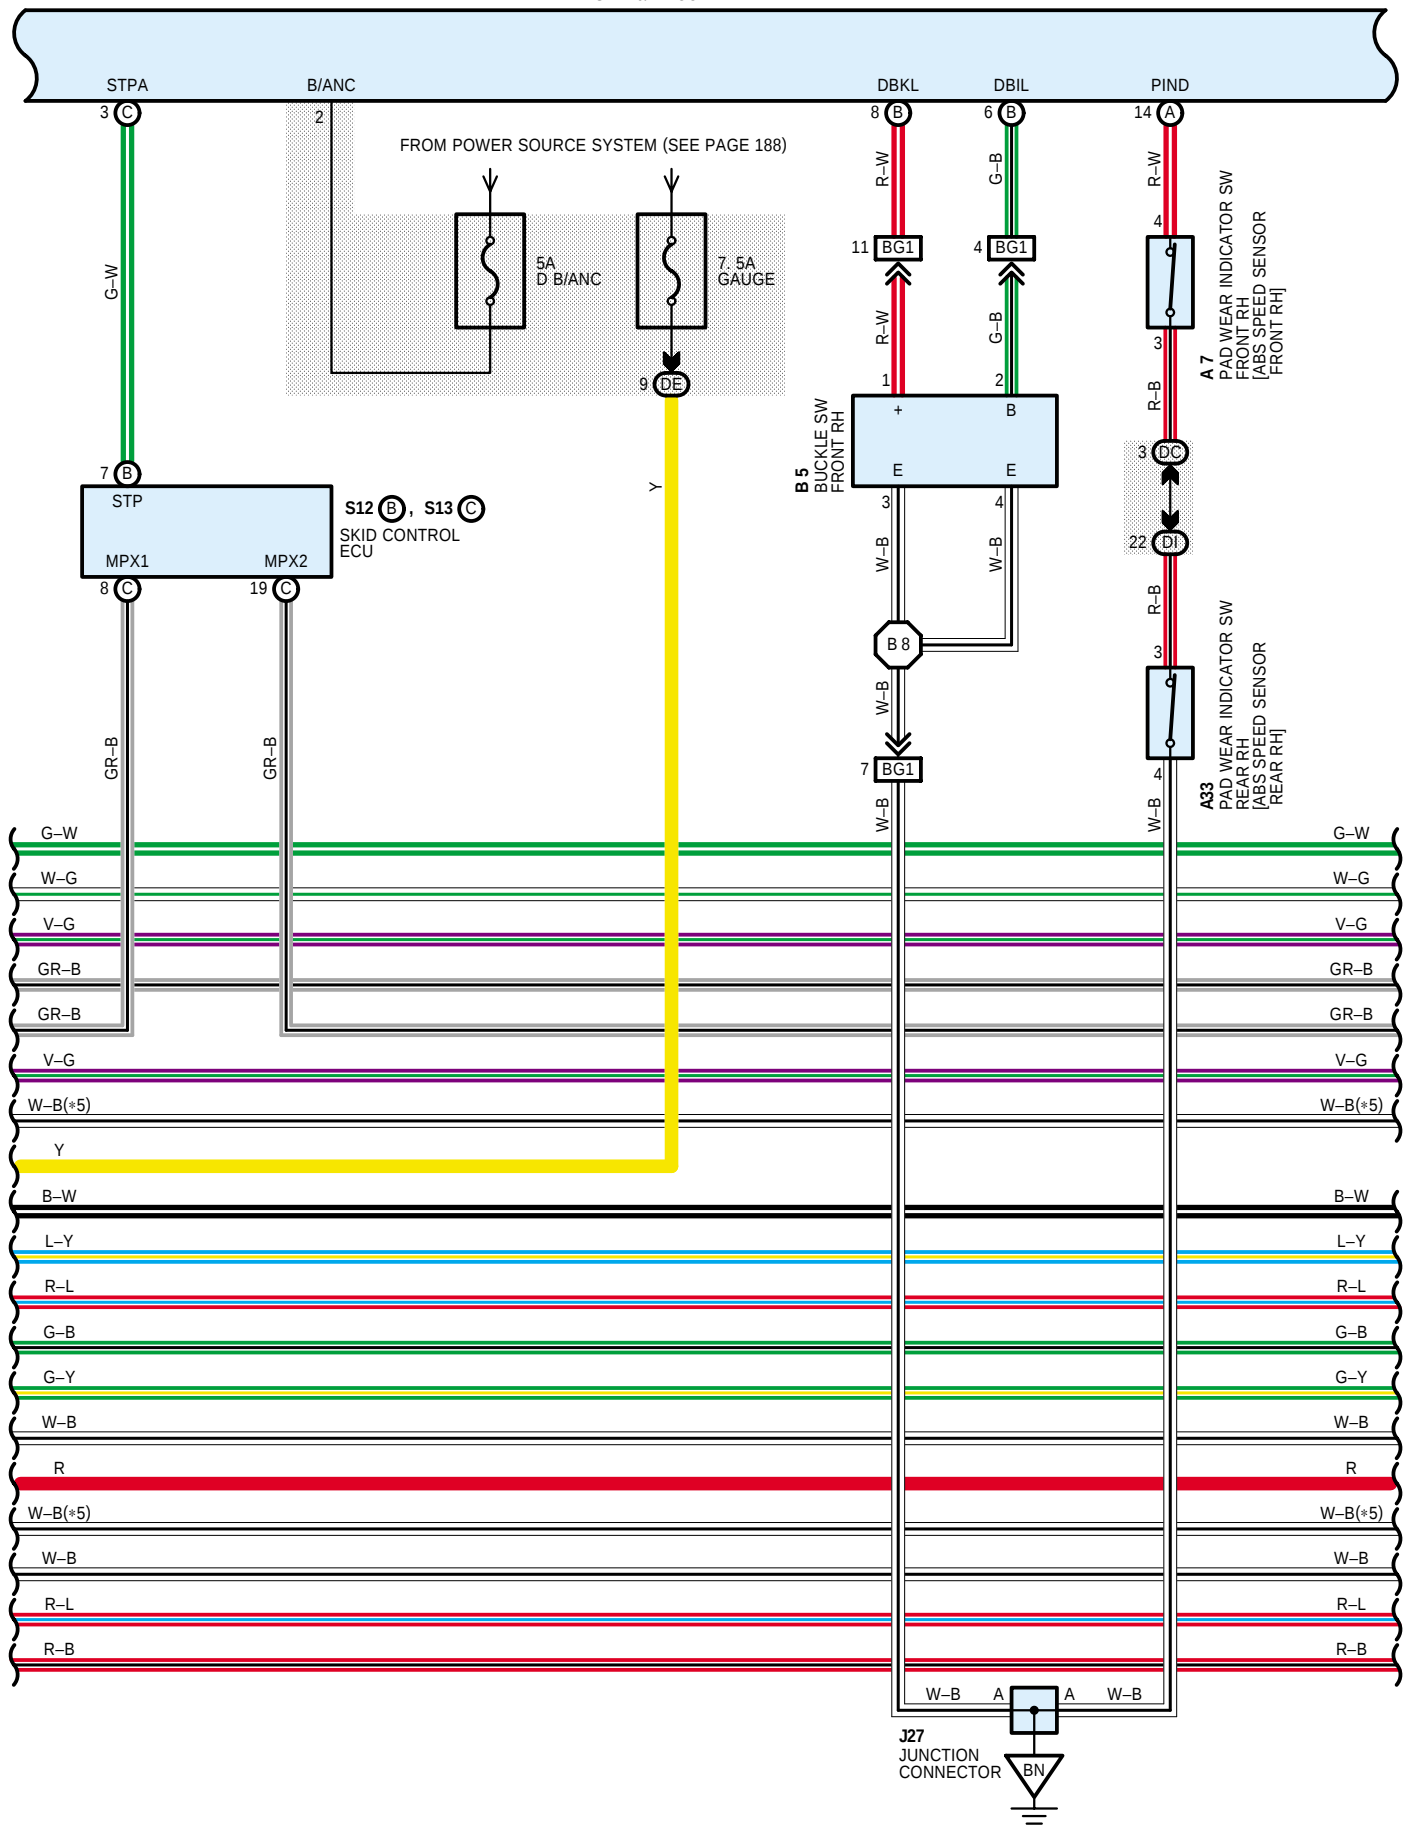


D2 (A), D3 (B), D4 (C), D5 (D)
DRIVER SIDE J/B ECU

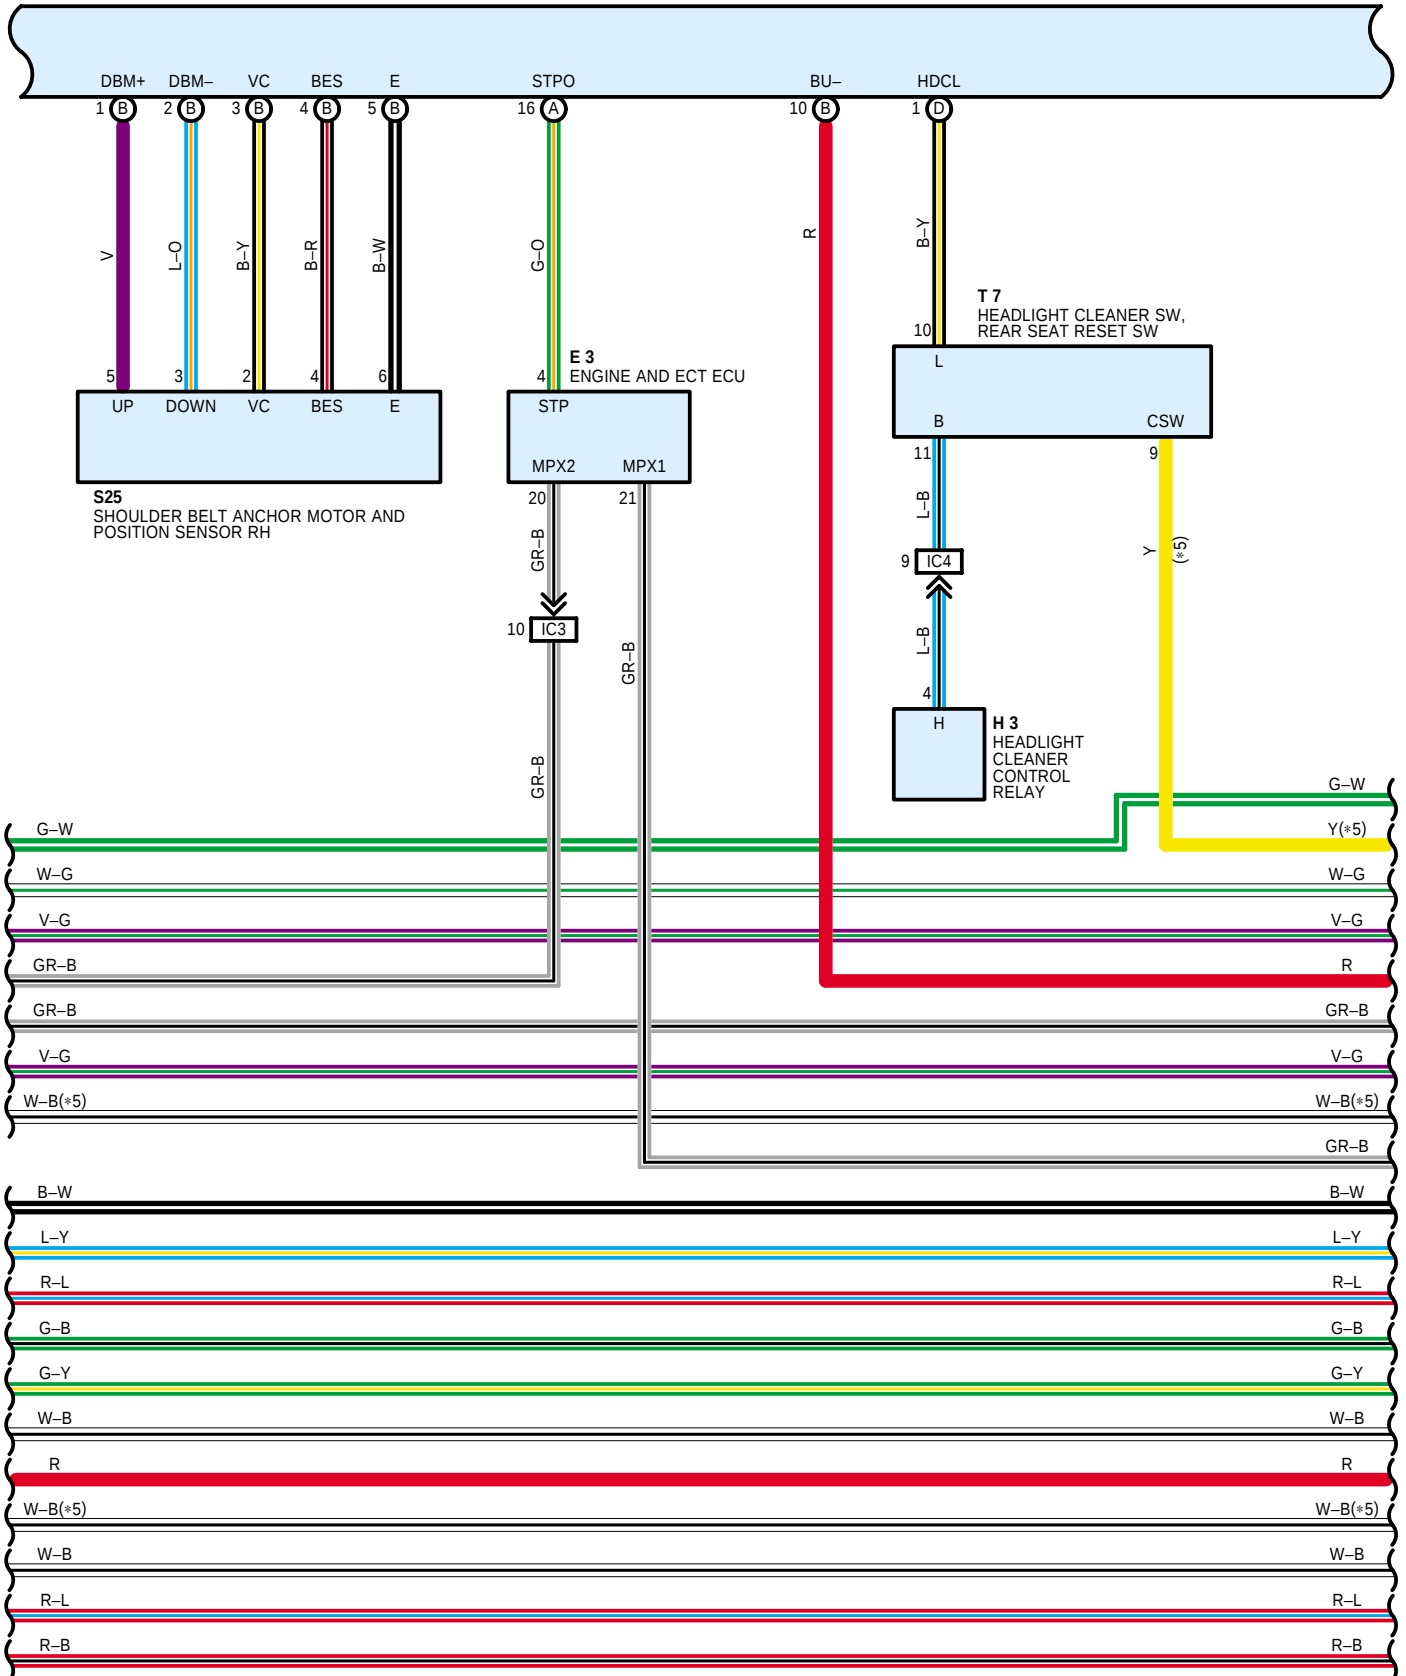

MULTIPLEX COMMUNICATION SYSTEM (J/B ECU) [RHD]

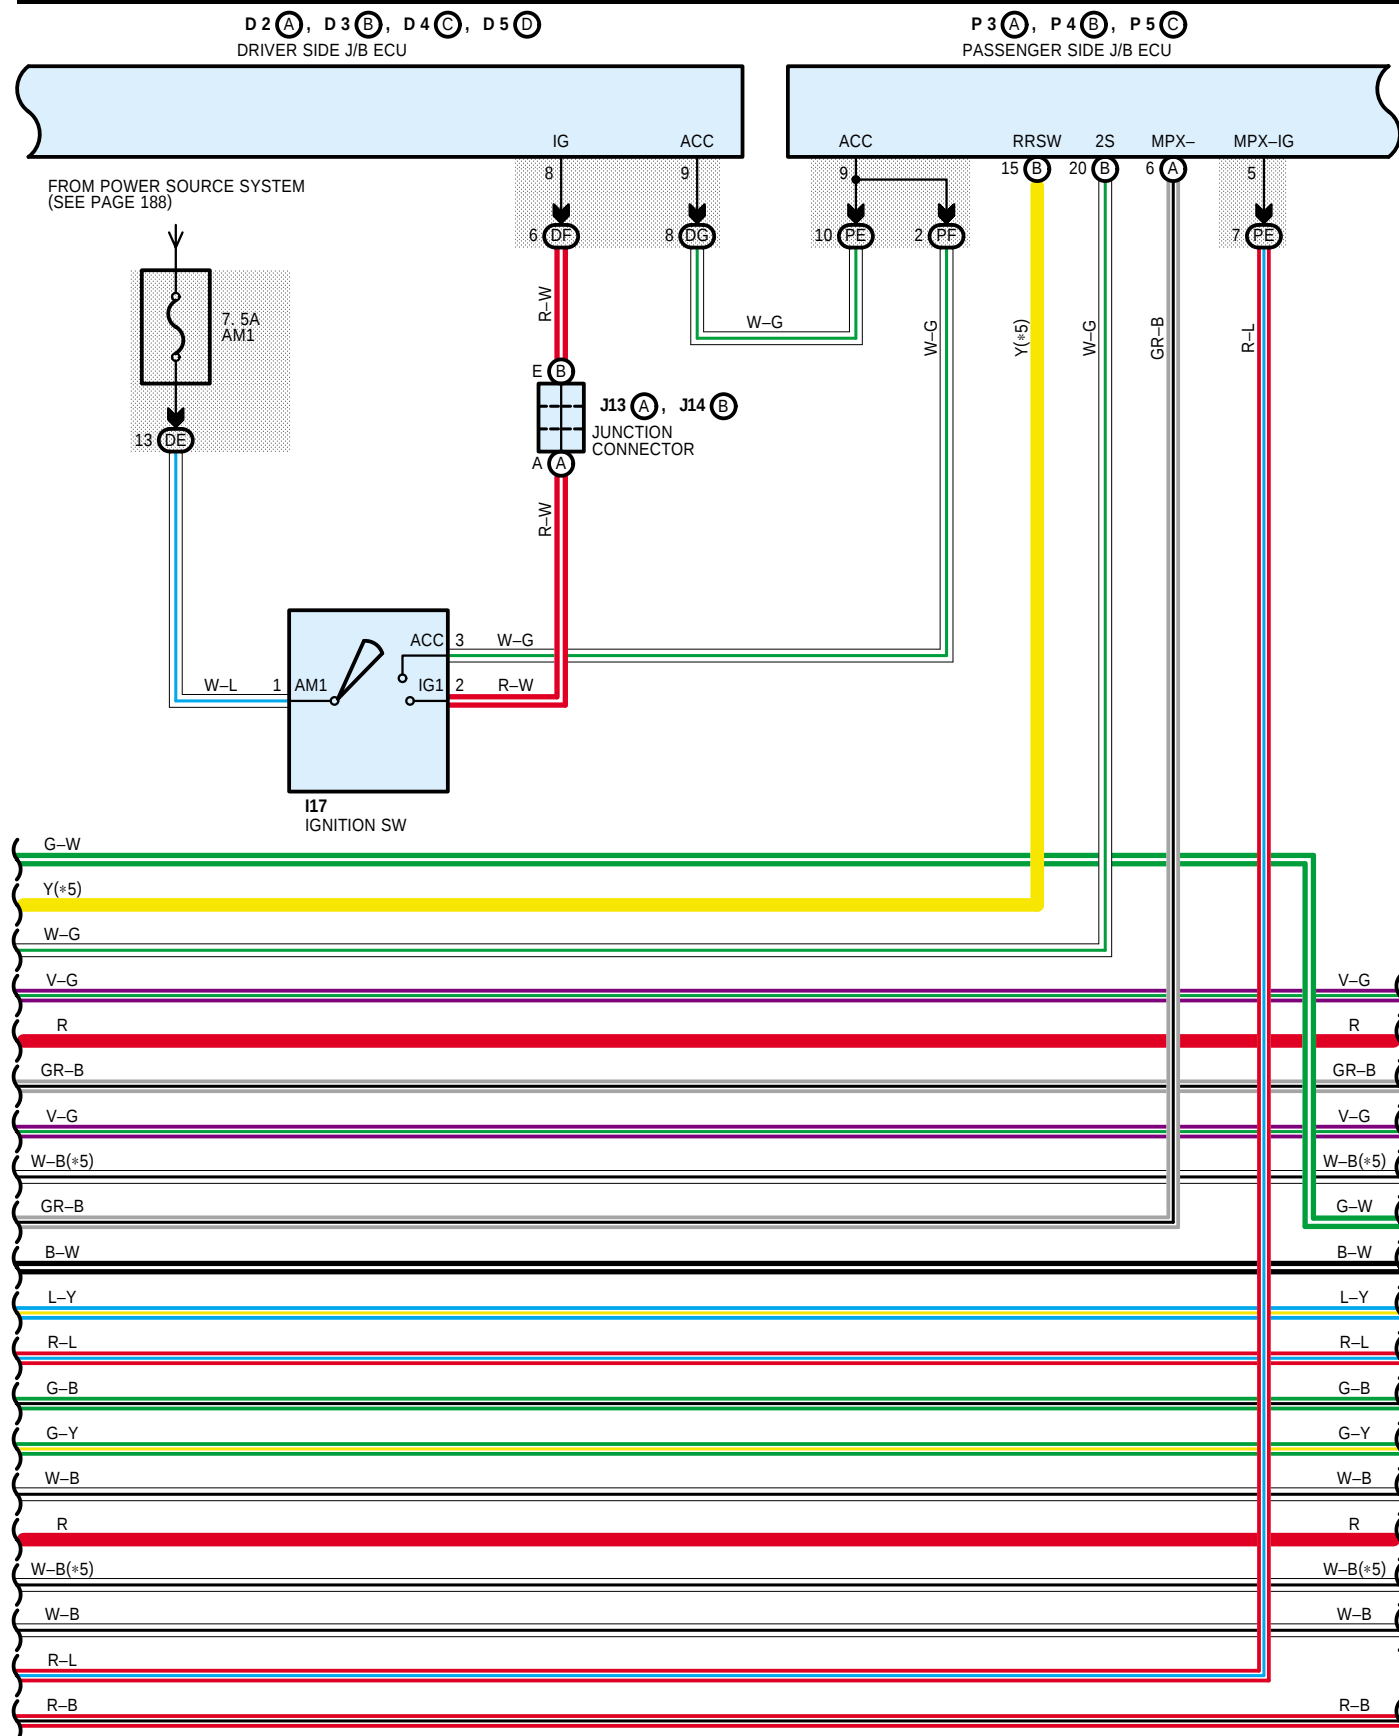


P3 (A), P4 (B), P5 (C)
PASSENGER SIDE J/B ECU

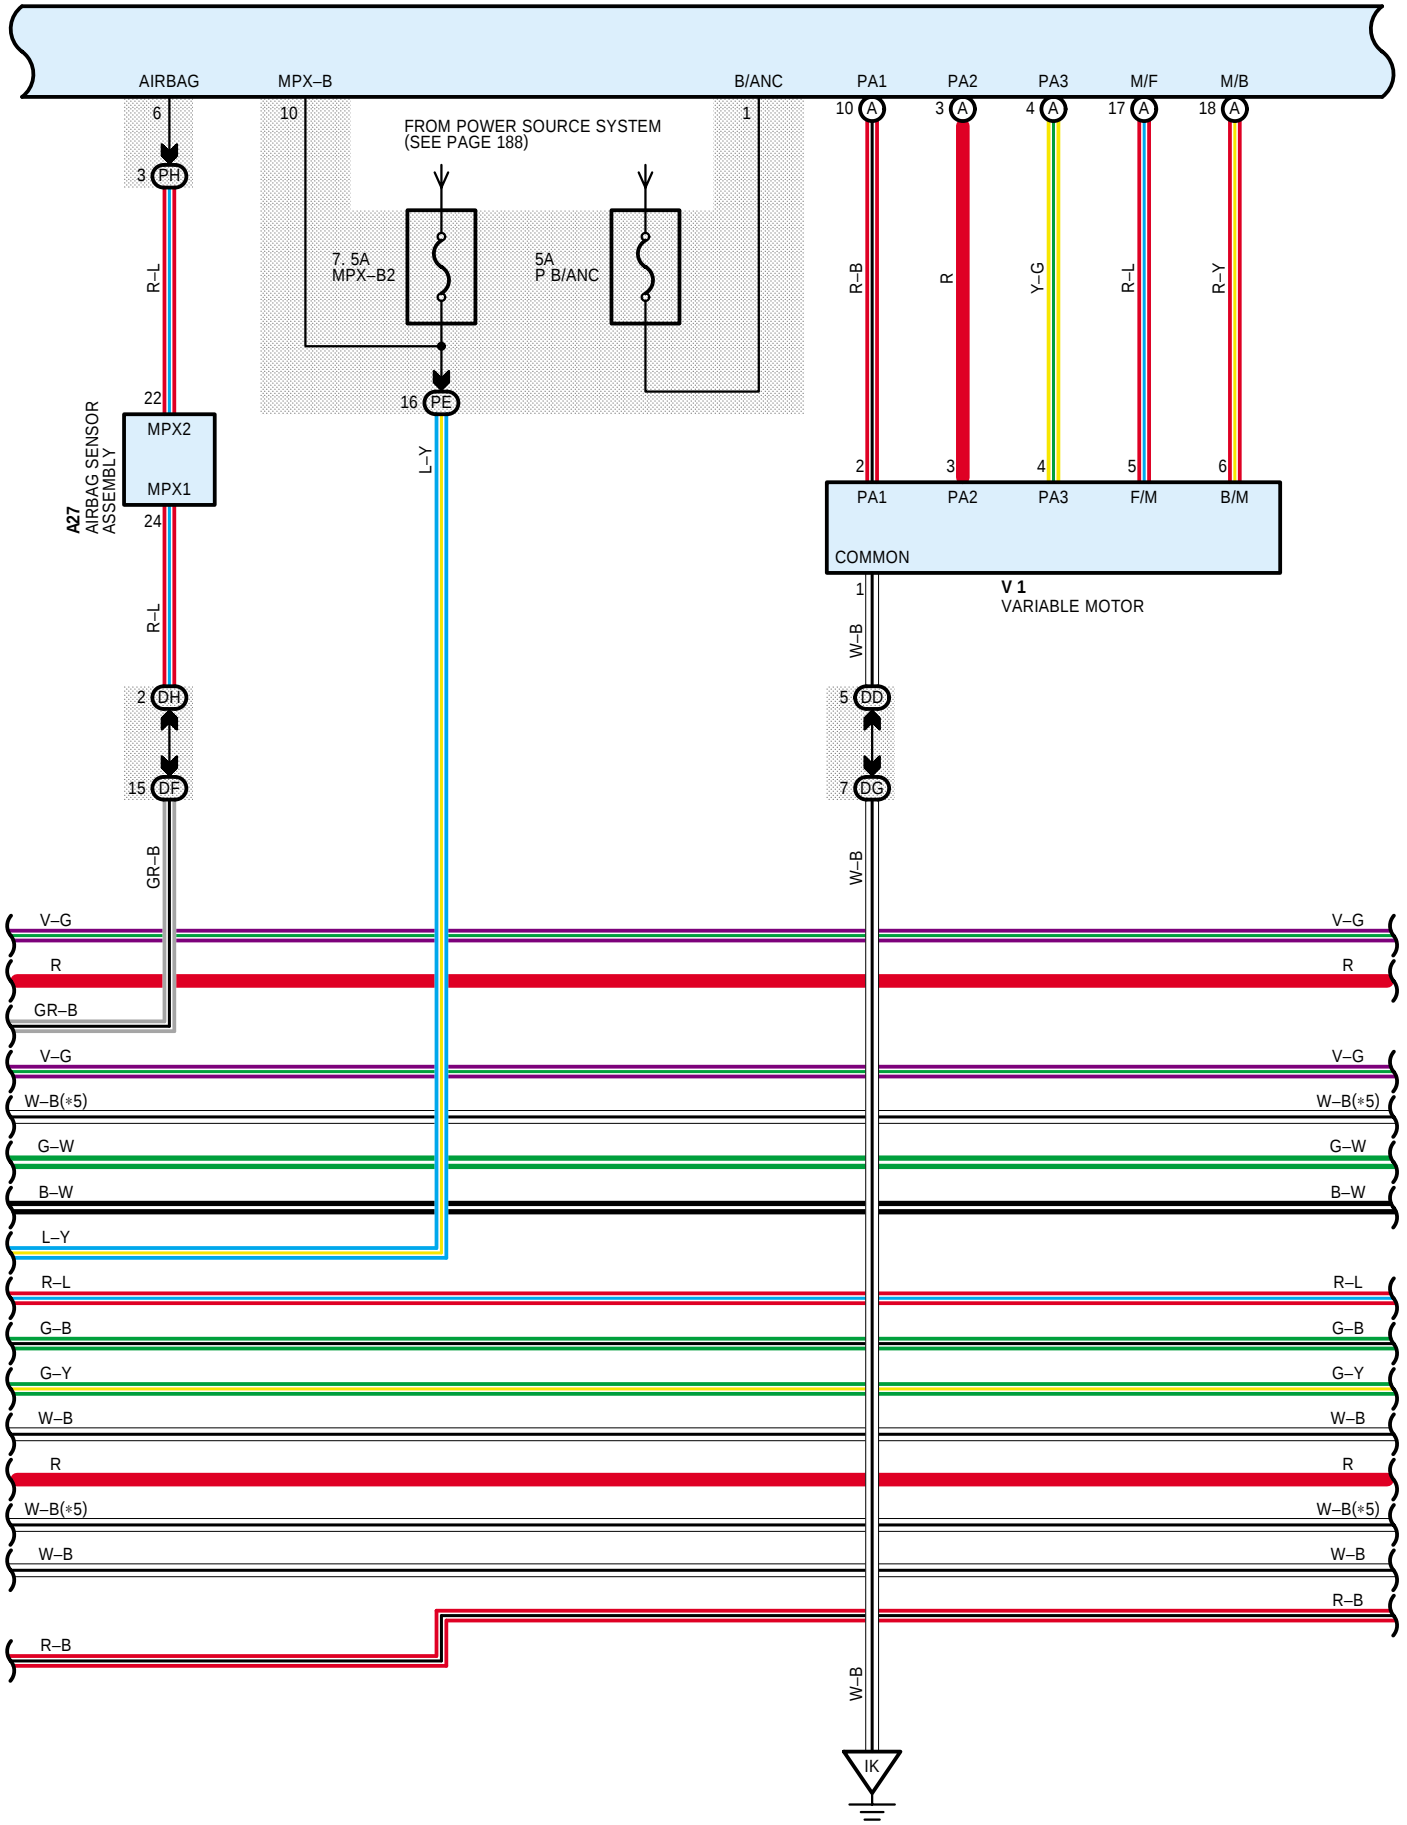


MULTIPLEX COMMUNICATION SYSTEM (J/B ECU) [RHD]

P3 (A), P4 (B), P5 (C)
PASSENGER SIDE J/B ECU

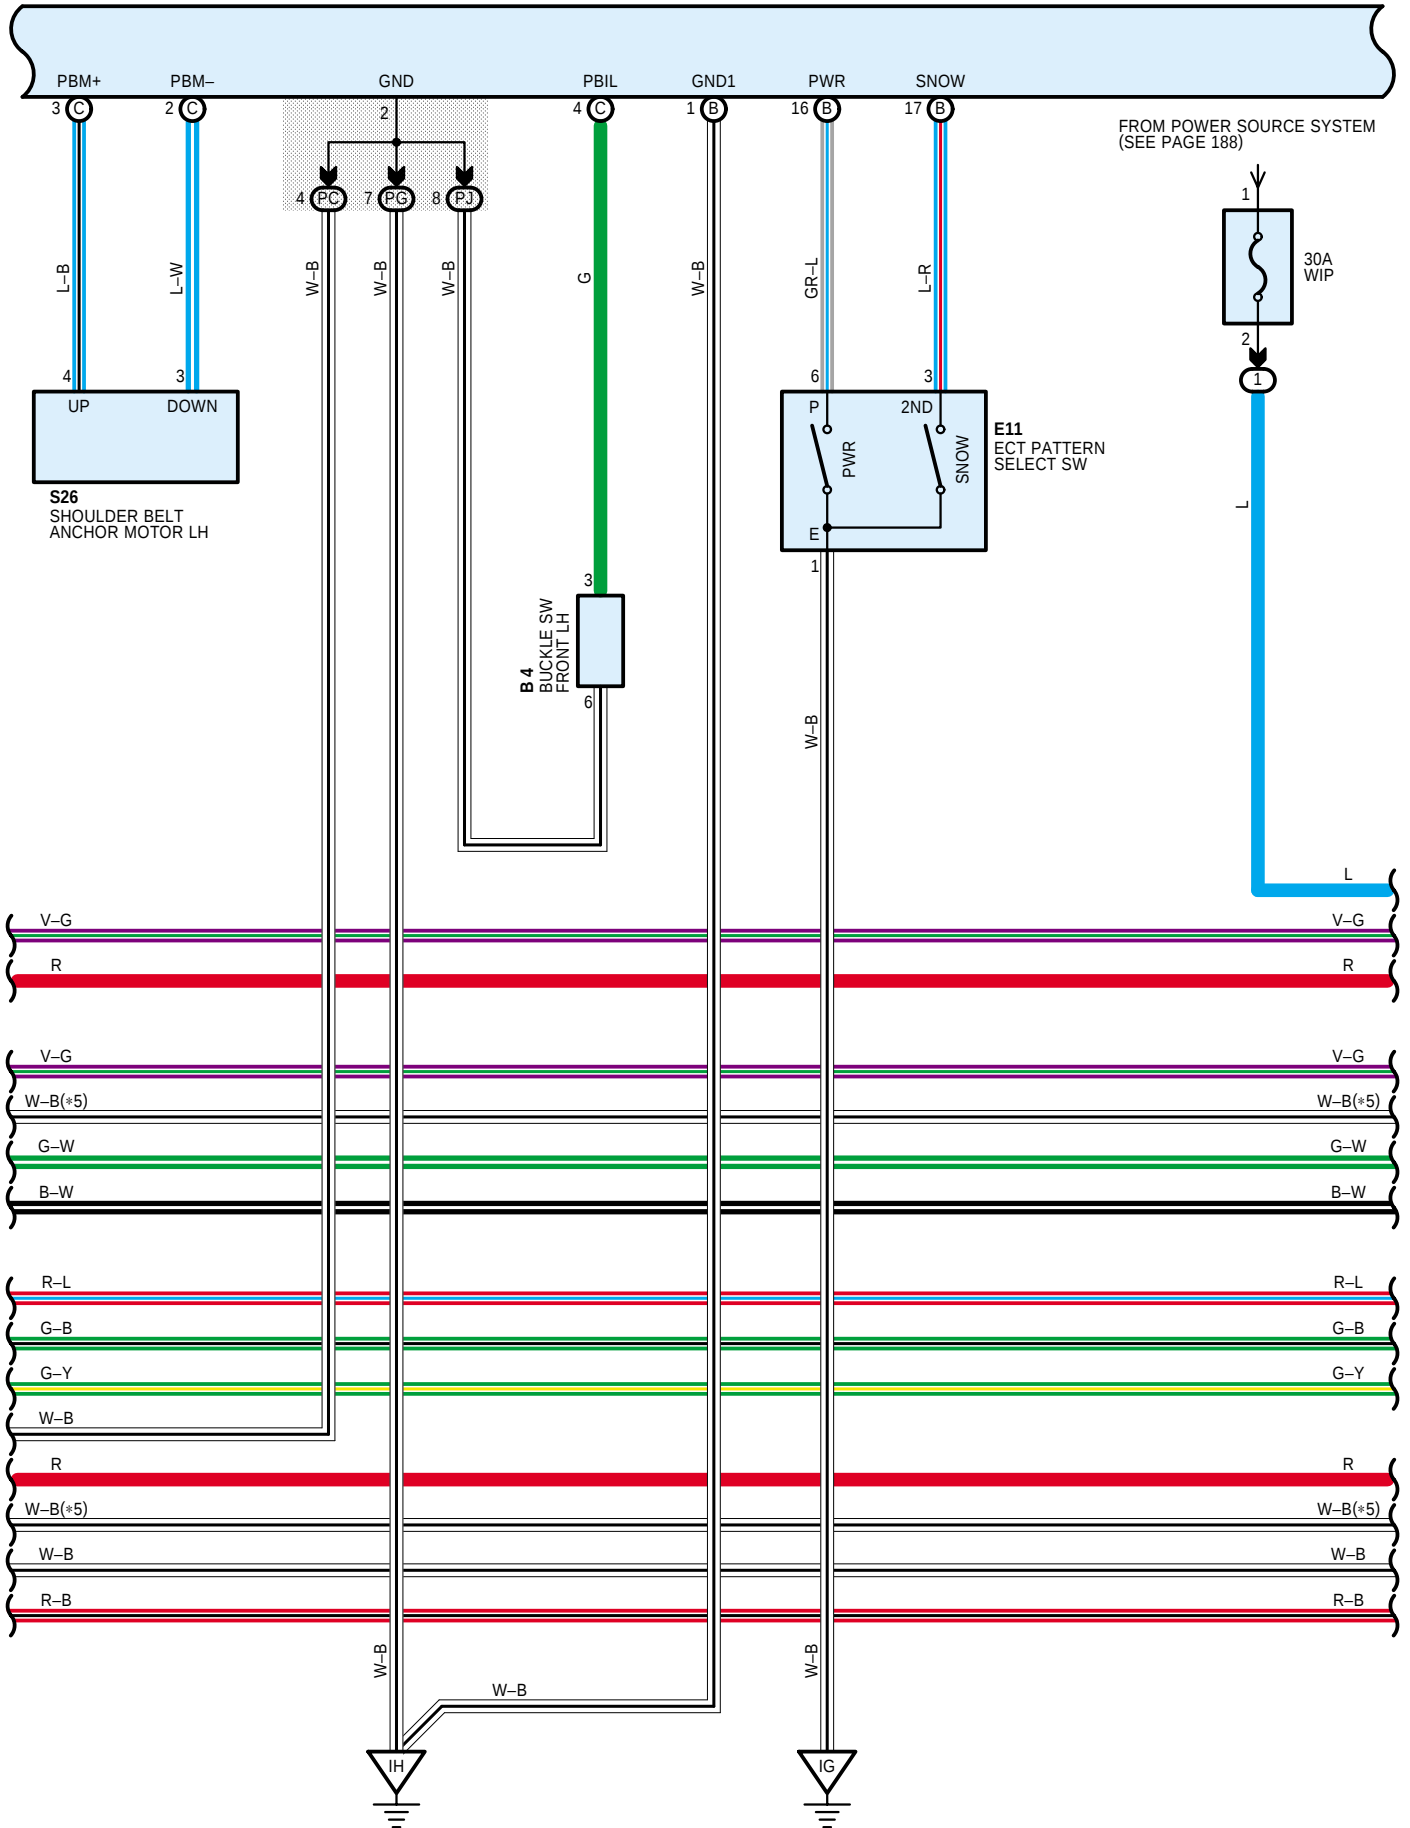


P 3 (A), P 4 (B), P 5 (C)
PASSENGER SIDE J/B ECU

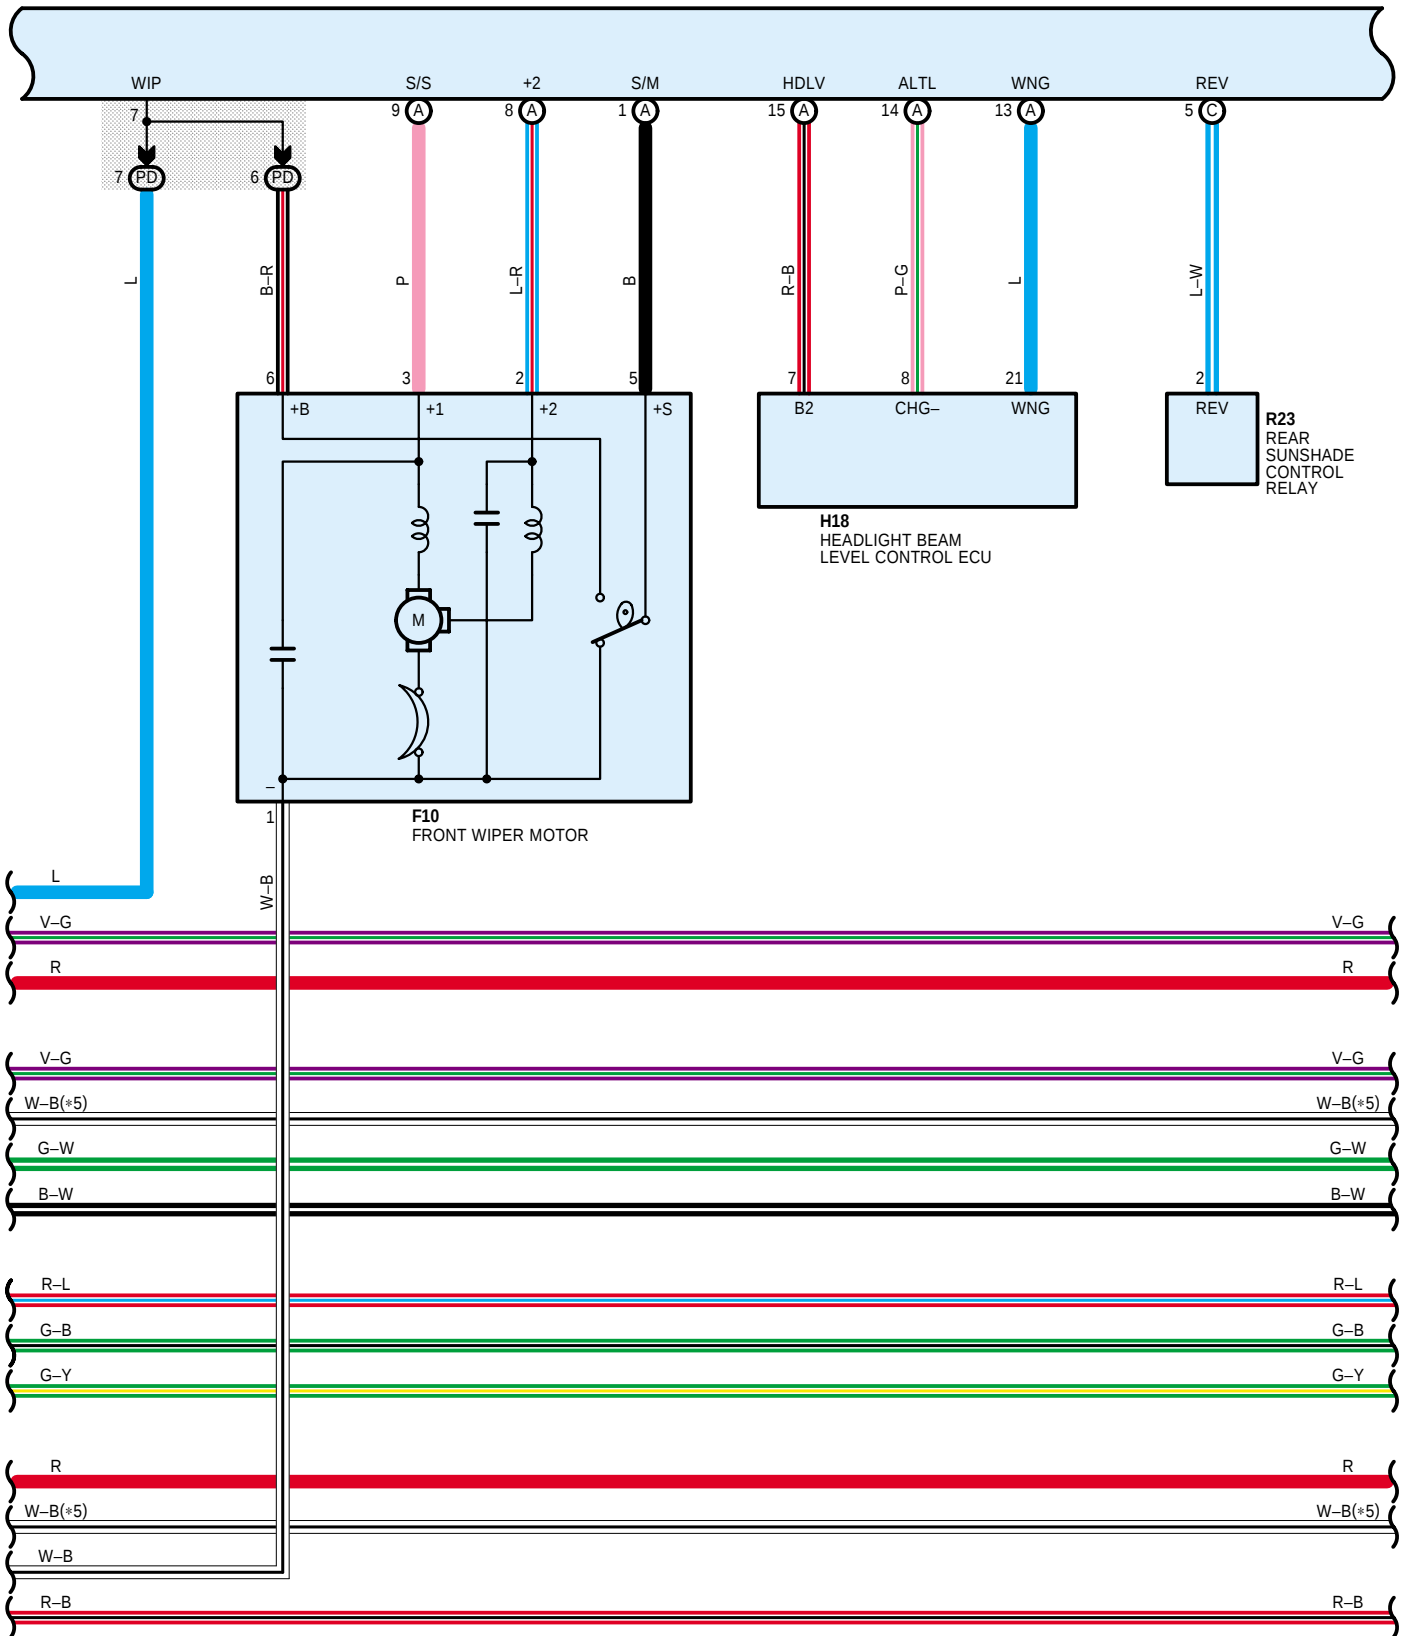


MULTIPLEX COMMUNICATION SYSTEM (J/B ECU) [RHD]

P3 (A), P4 (B), P5 (C)
PASSENGER SIDE J/B ECU

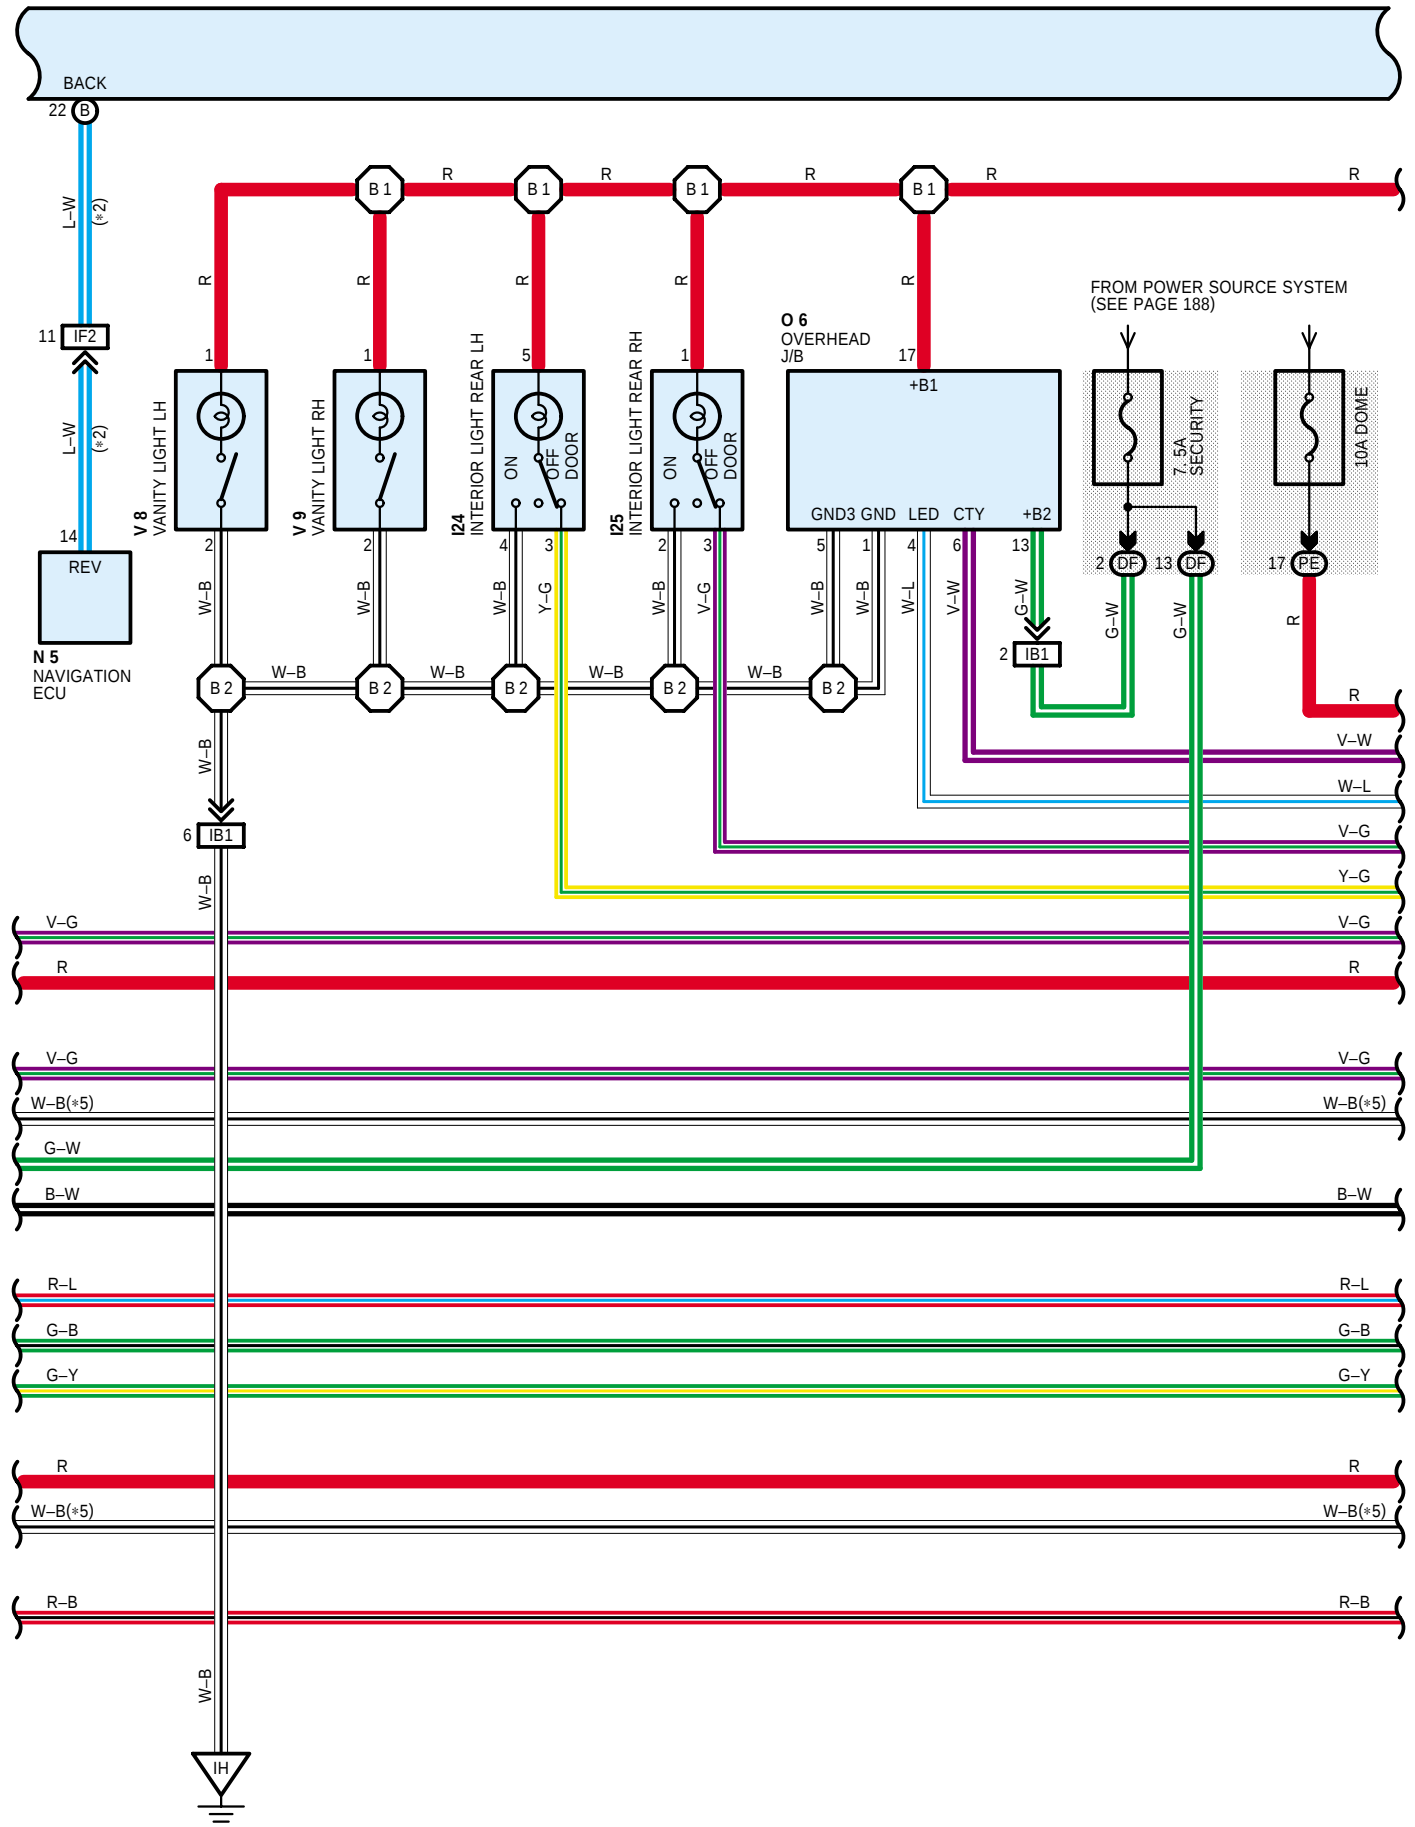


P3 (A), P4 (B), P5 (C)
 PASSENGER SIDE J/B ECU

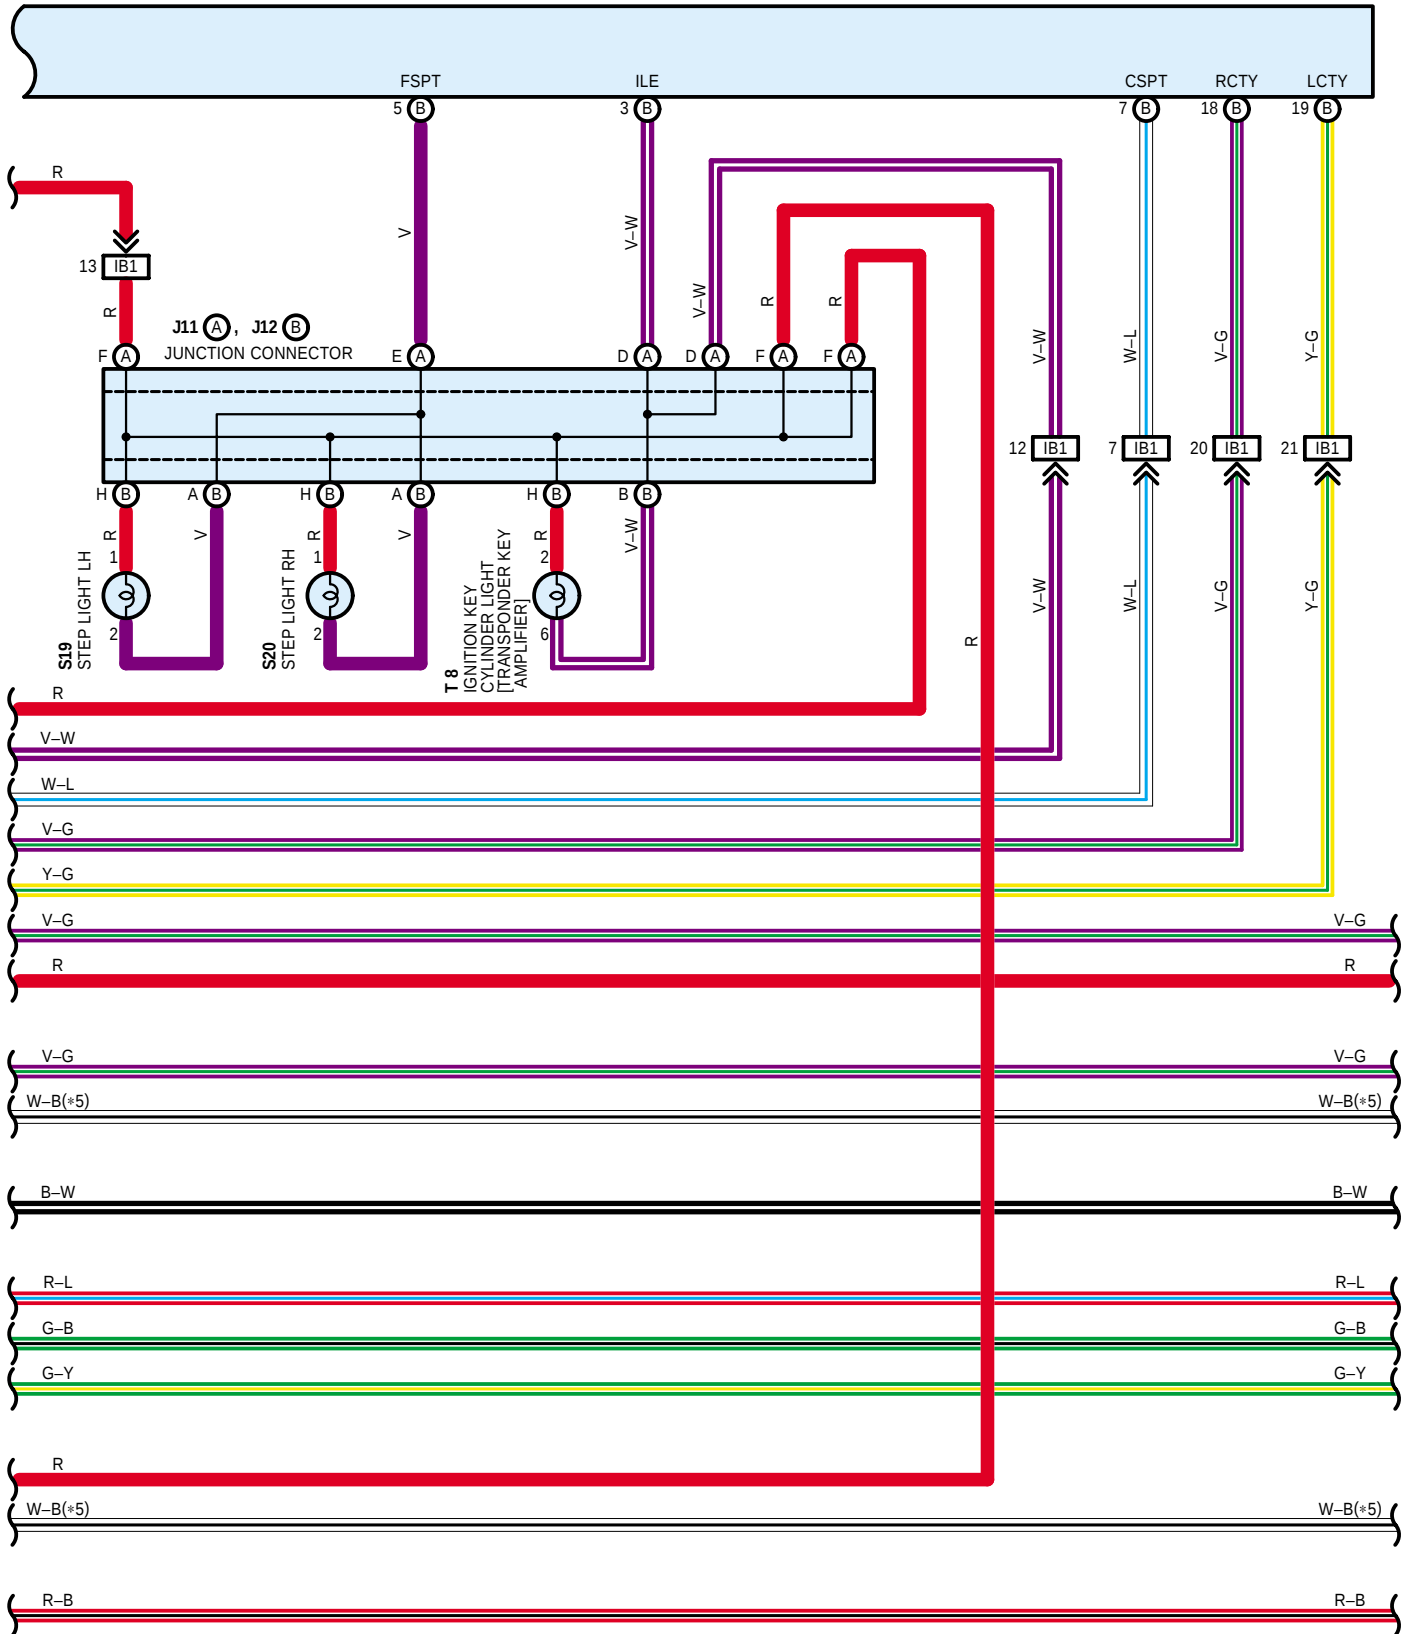


MULTIPLEX COMMUNICATION SYSTEM (J/B ECU) [RHD]

L11 (A), L12 (B), L13 (C)
LUGGAGE ROOM J/B ECU

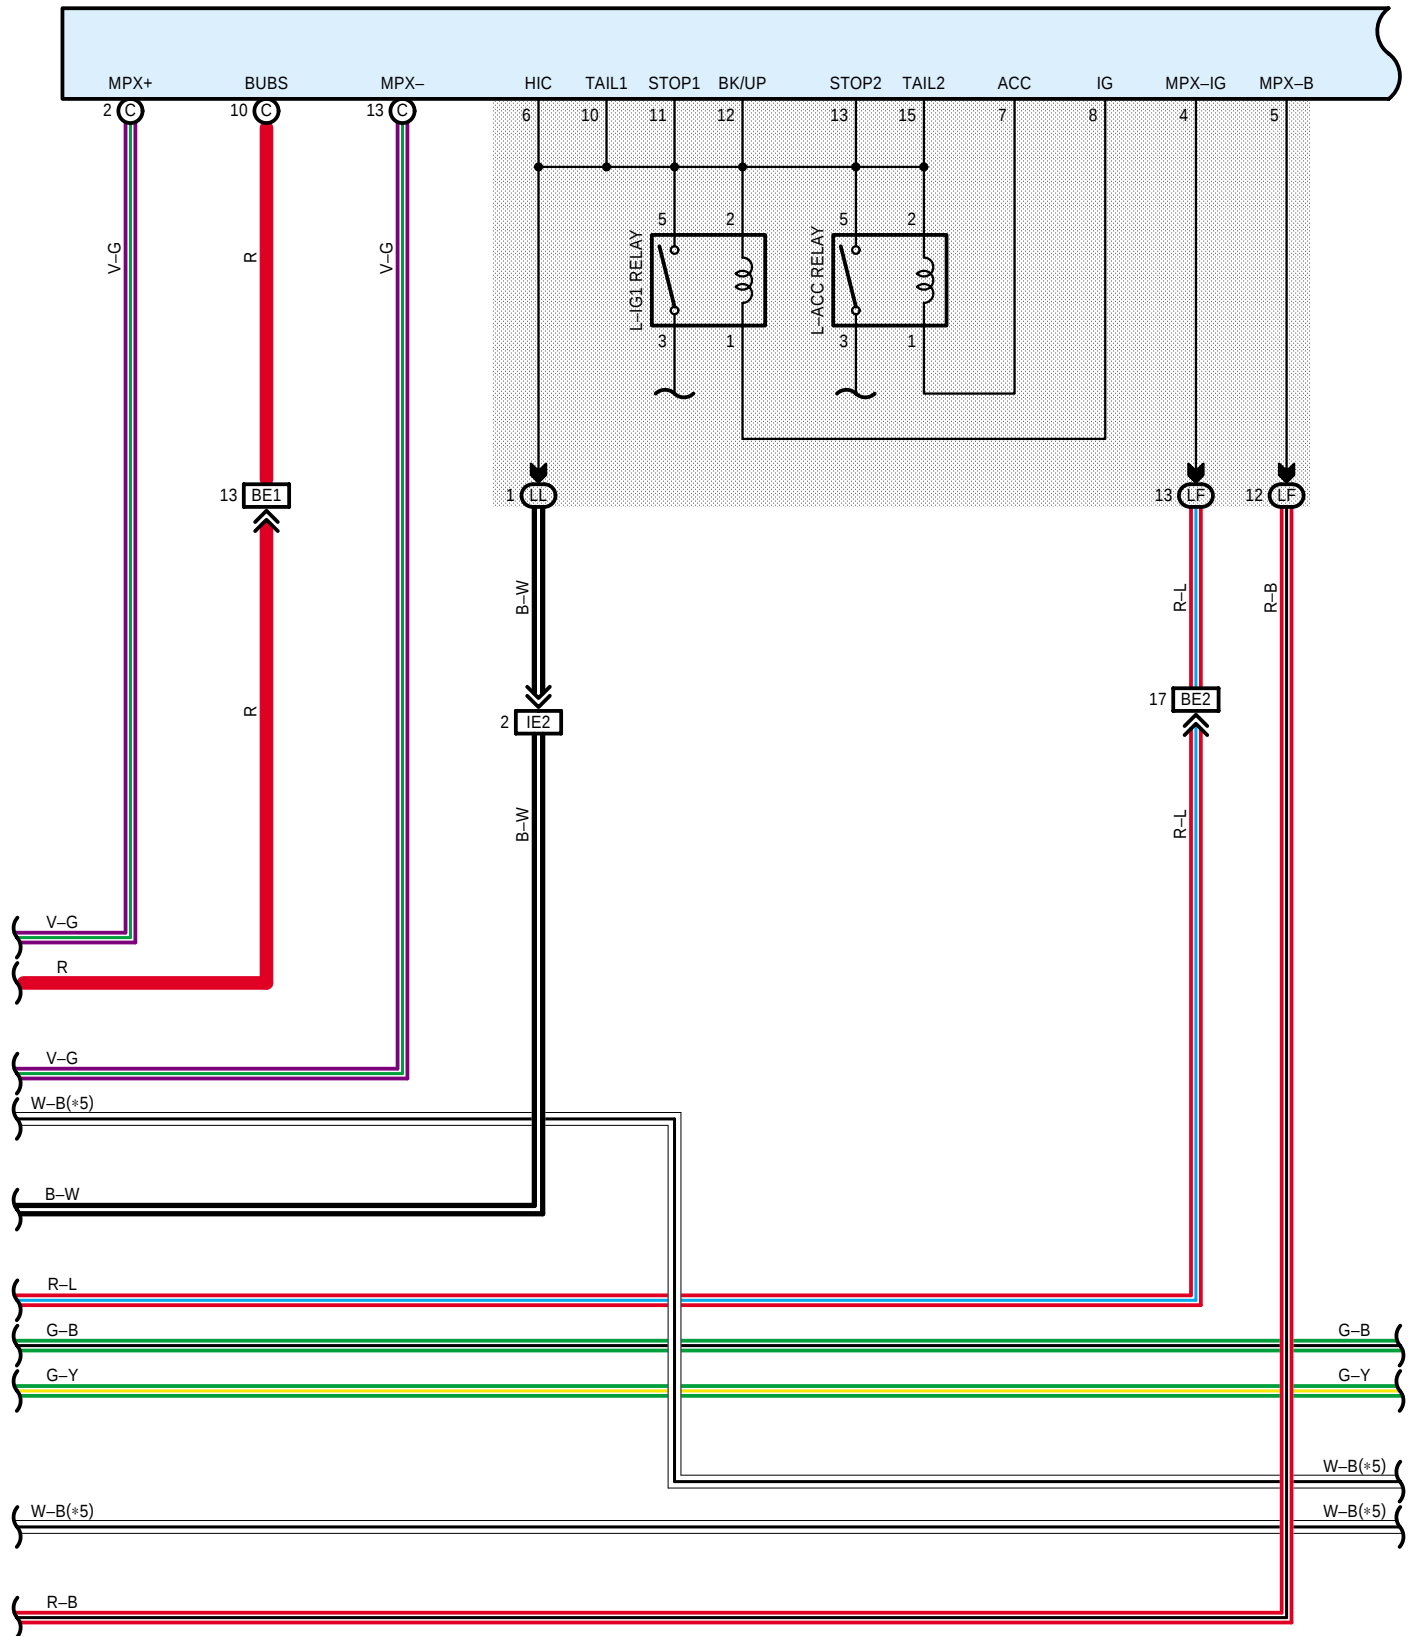

- * 1 : W/ ELECTRONIC MODULATED AIR SUSPENSION
- * 5 : W/ REAR POWER SEAT
- * 8 : W/O ELECTRONIC MODULATED AIR SUSPENSION

L11 (A), L12 (B), L13 (C)
LUGGAGE ROOM J/B ECU

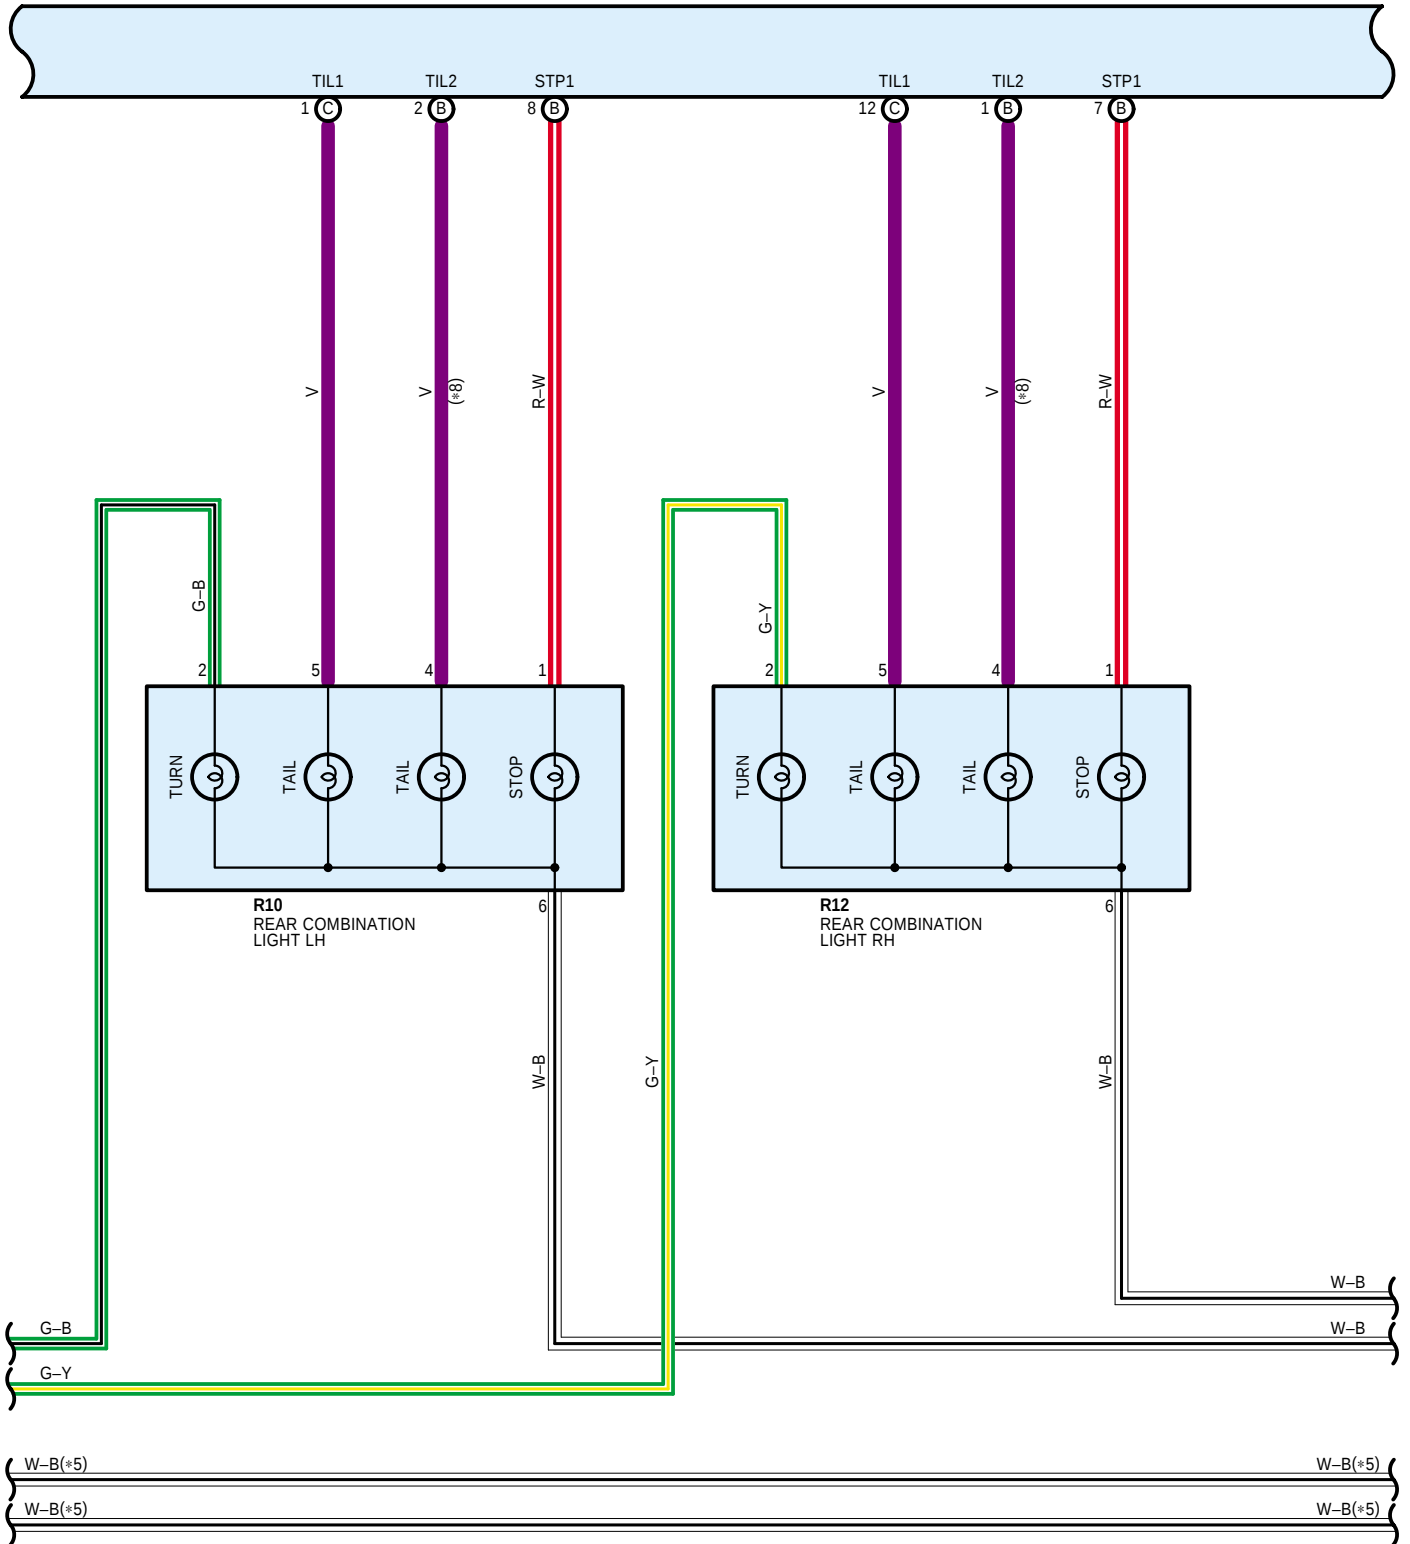

L11 (A), L12 (B), L13 (C)
LUGGAGE ROOM J/B ECU

MPX 3 (C) **FSME** 6 (C) **FSMV** 4 (C) **FSMS** 10 (B) **FSSE** 7 (C) **FSSS** 9 (B) **FSSV** 15 (C)

P-L (*4)
1
M+
C17
CLEARANCE SONAR ECU

BR-Y 1
FE
F19
FUEL SENDER (MAIN)

B-O 2
FV

B-R 3
FR

Y-G 1
FE2
F20
FUEL SENDER (SUB)

L 2
FR2

P 3
FV2

BE2 1
BE2 2
BE2 12

R 1
STOP OR REAR FOG

G-Y 5
BACK-UP

B 2
TAIL


G-W 4
TAIL

W-B 6
R11
REAR COMBINATION LIGHT LH

W-B
W-B
W-B


* 4 : W/ LEXUS PARK ASSIST (CLEARANCE SONAR)
 * 5 : W/ REAR POWER SEAT
 * 9 : W/ SMART KEY SYSTEM

L11 (A), L12 (B), L13 (C)
 LUGGAGE ROOM J/B ECU

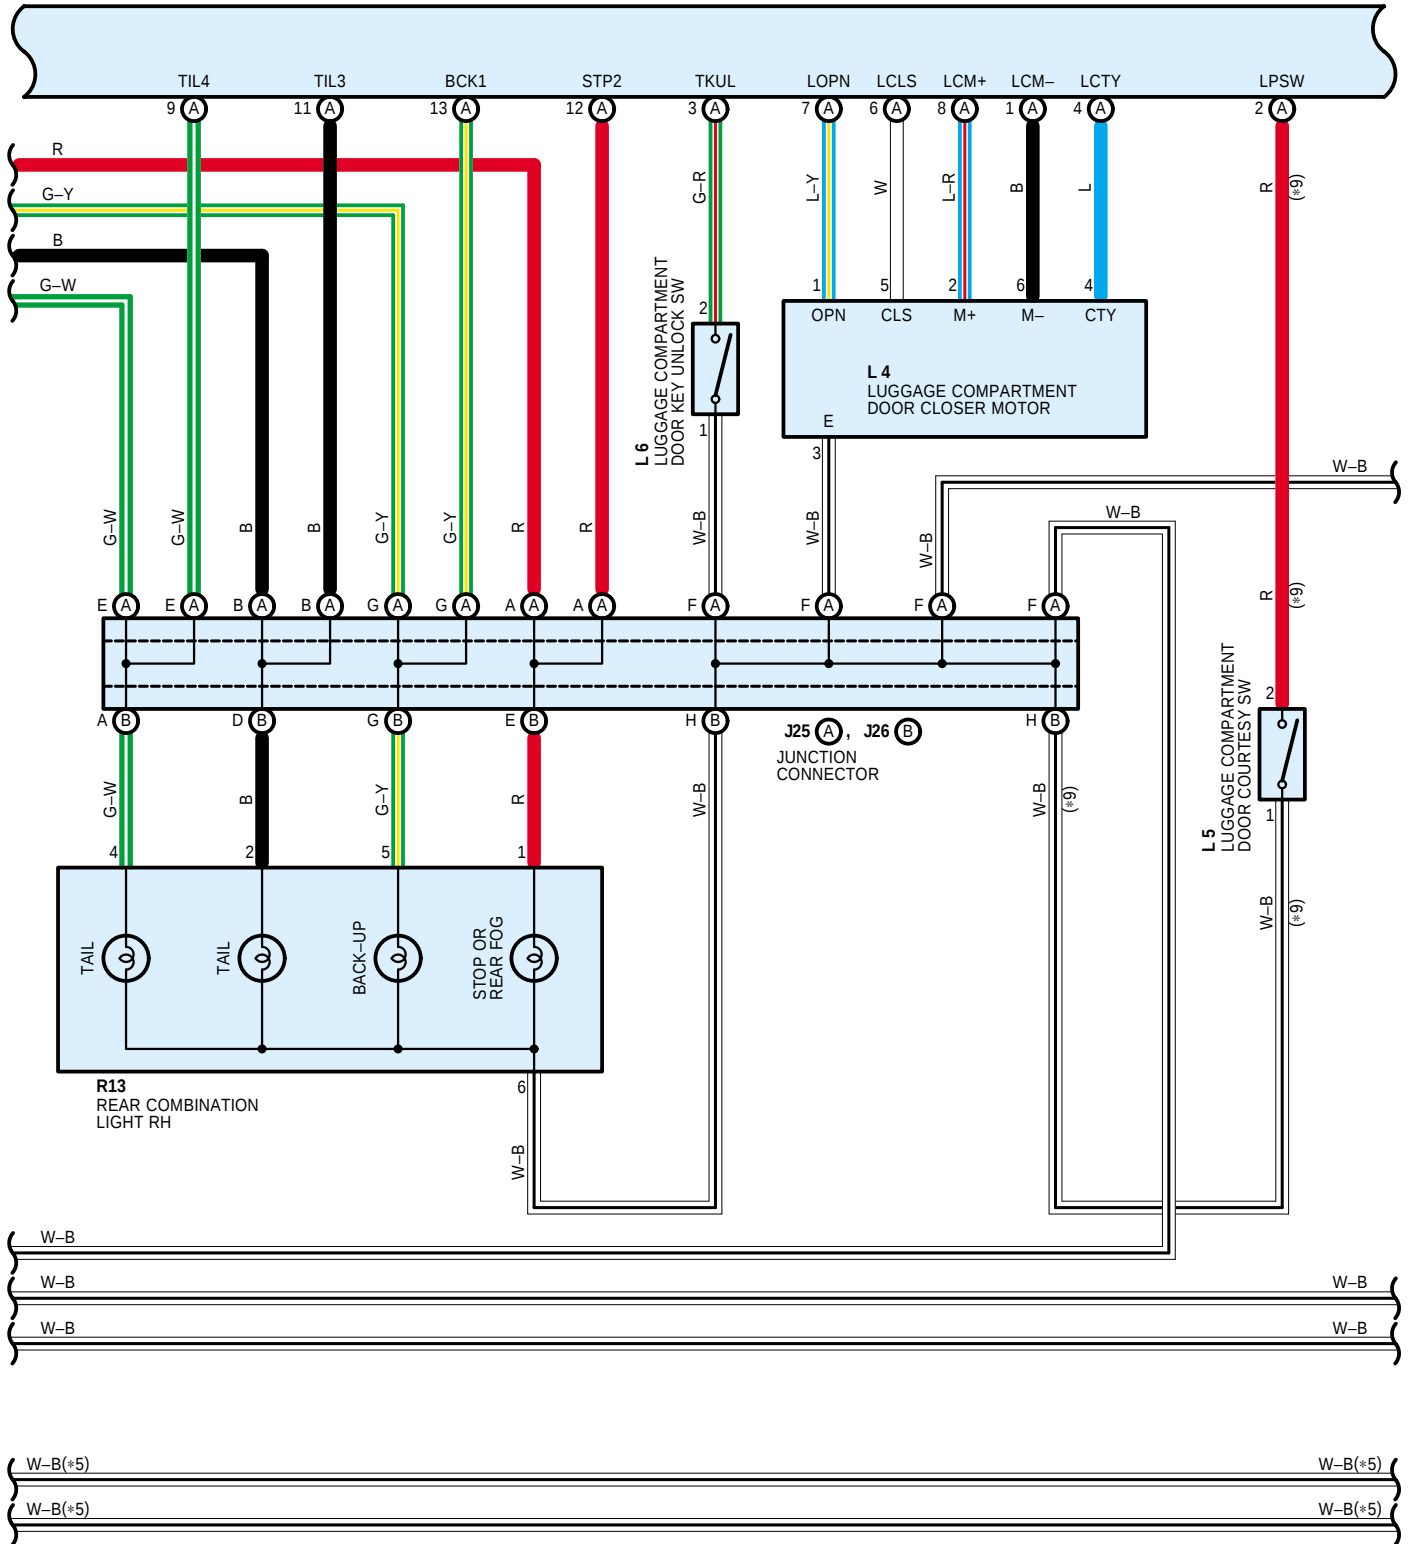


MULTIPLEX COMMUNICATION SYSTEM (J/B ECU) [RHD]

L11 (A), L12 (B), L13 (C)
LUGGAGE ROOM J/B ECU

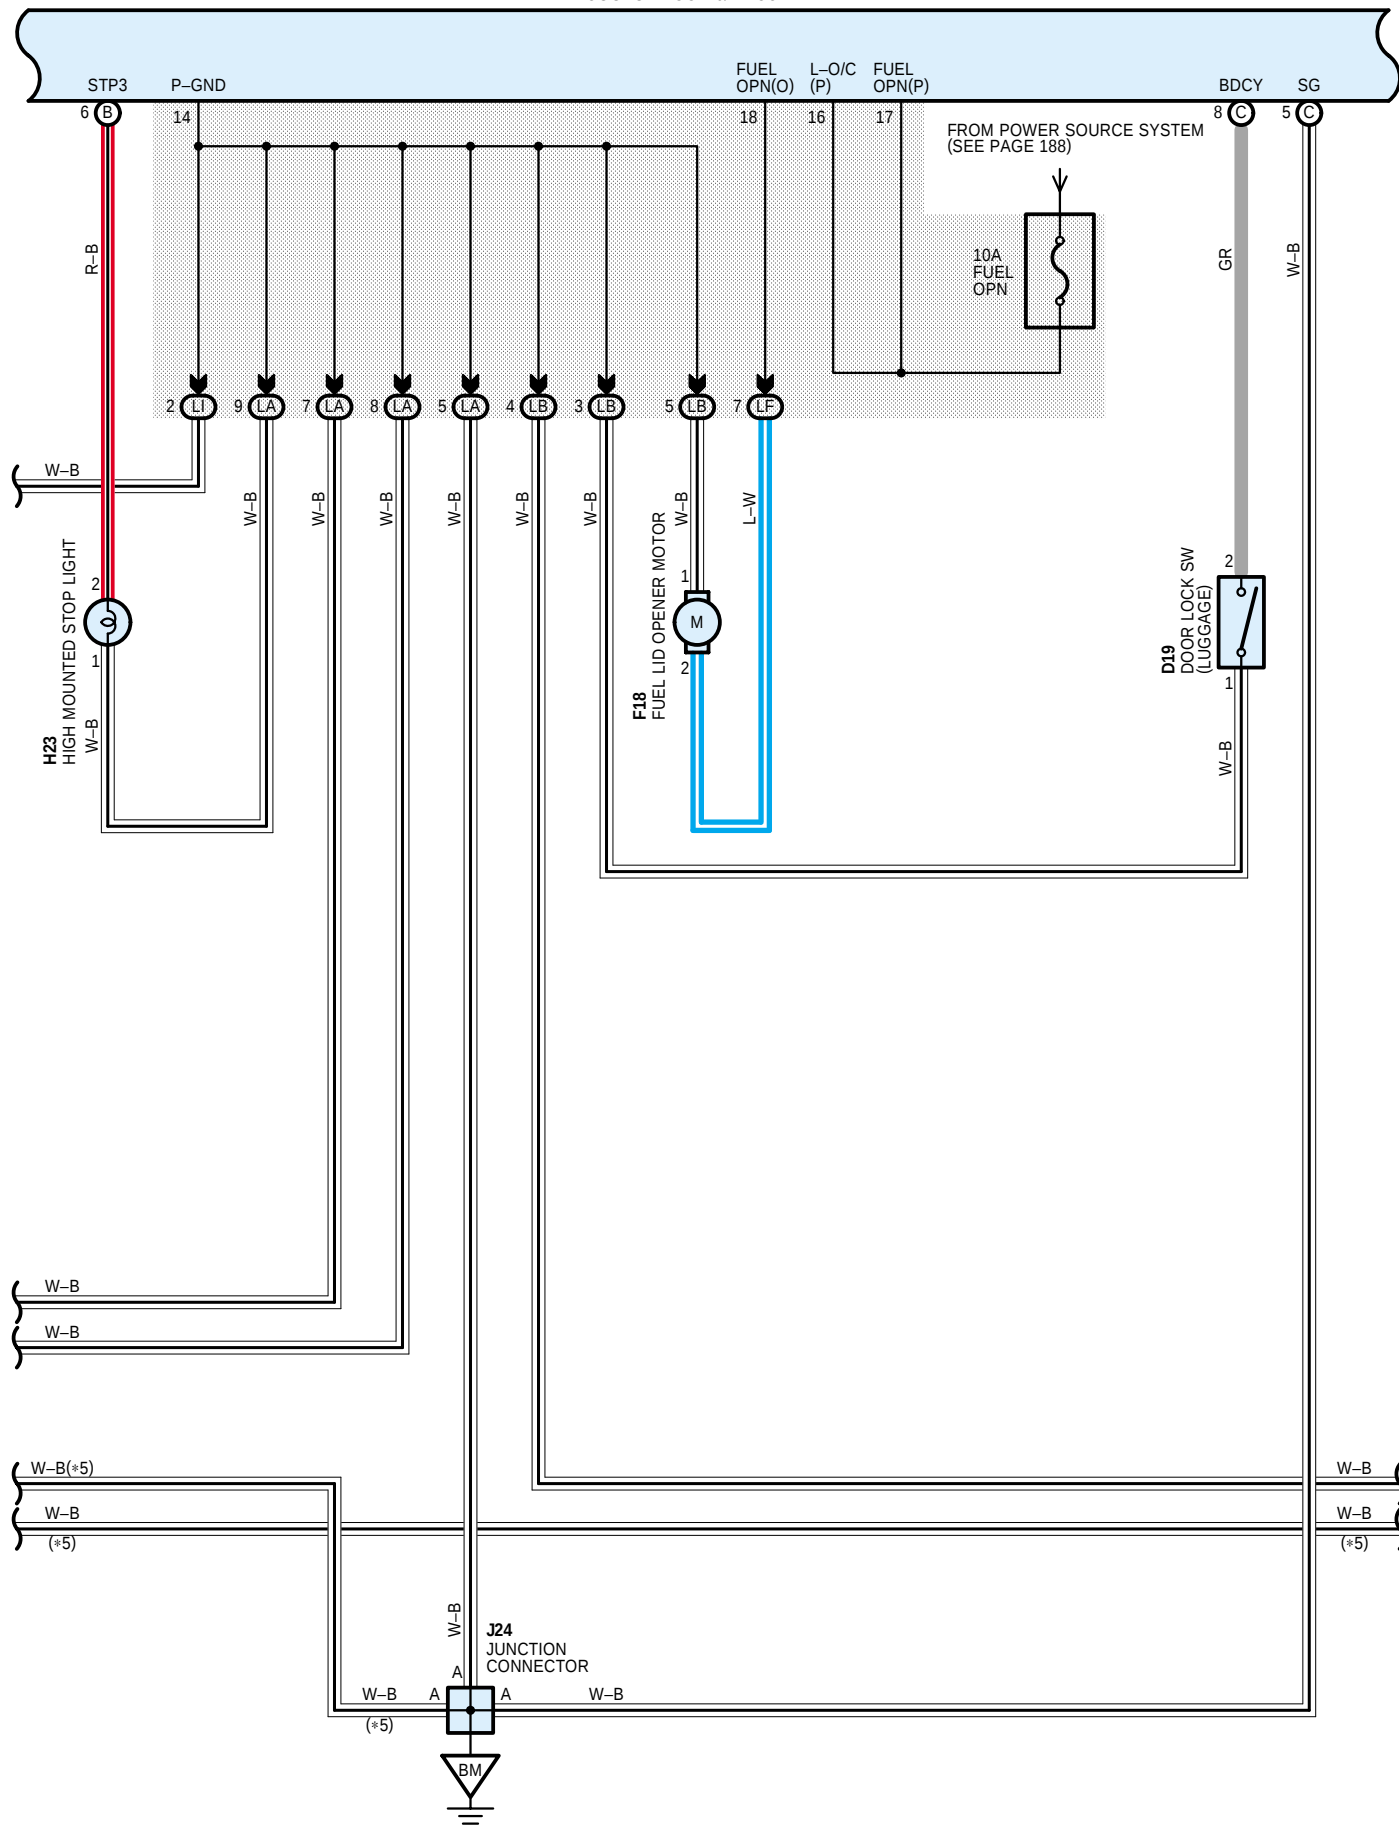


L11 (A), L12 (B), L13 (C)
LUGGAGE ROOM J/B ECU

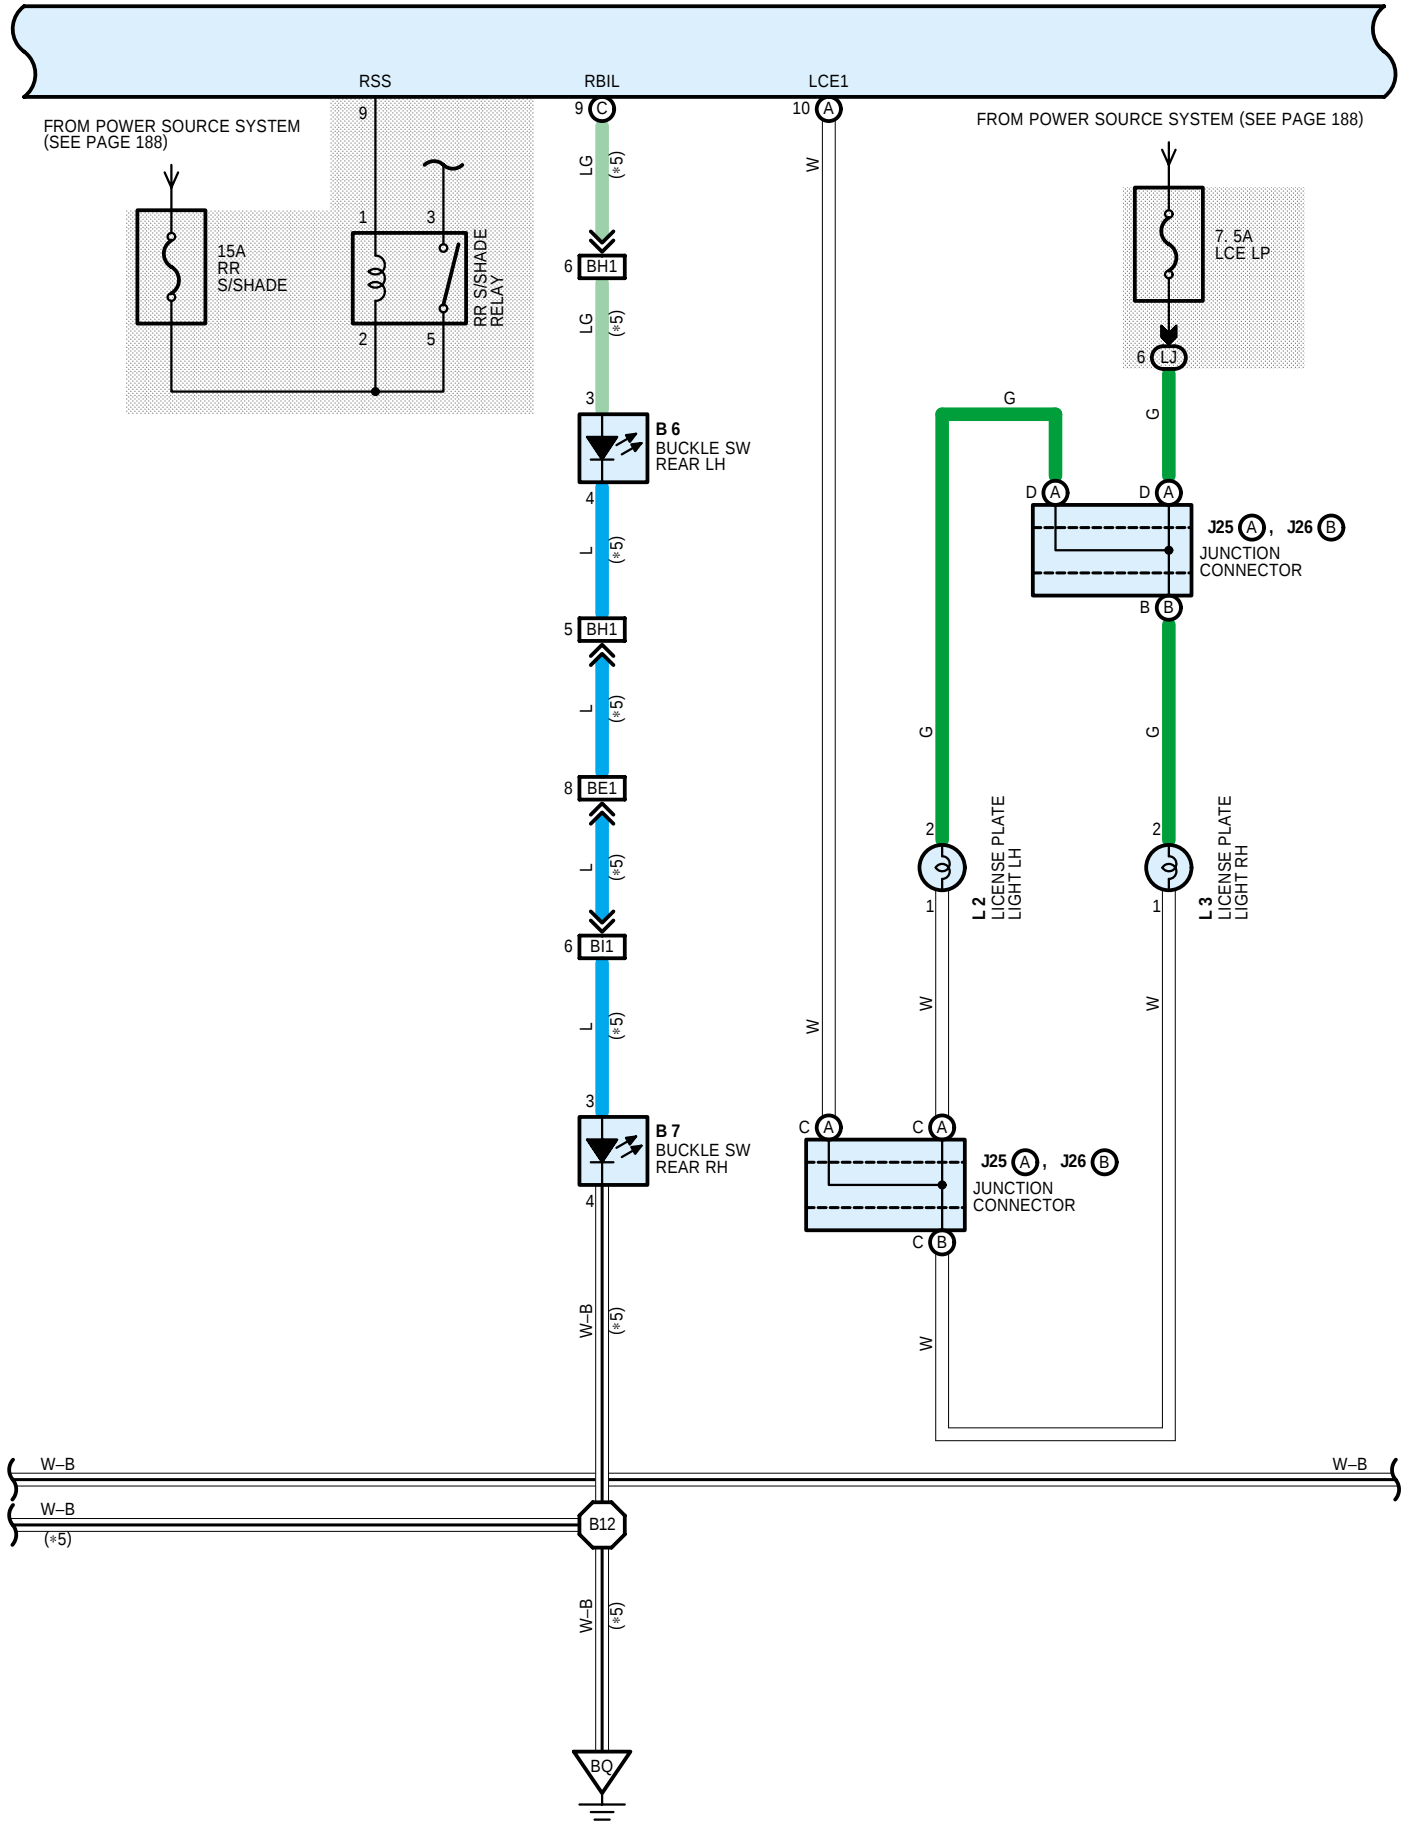

MULTIPLEX COMMUNICATION SYSTEM (J/B ECU) [RHD]

L11 (A), L12 (B), L13 (C)
LUGGAGE ROOM J/B ECU

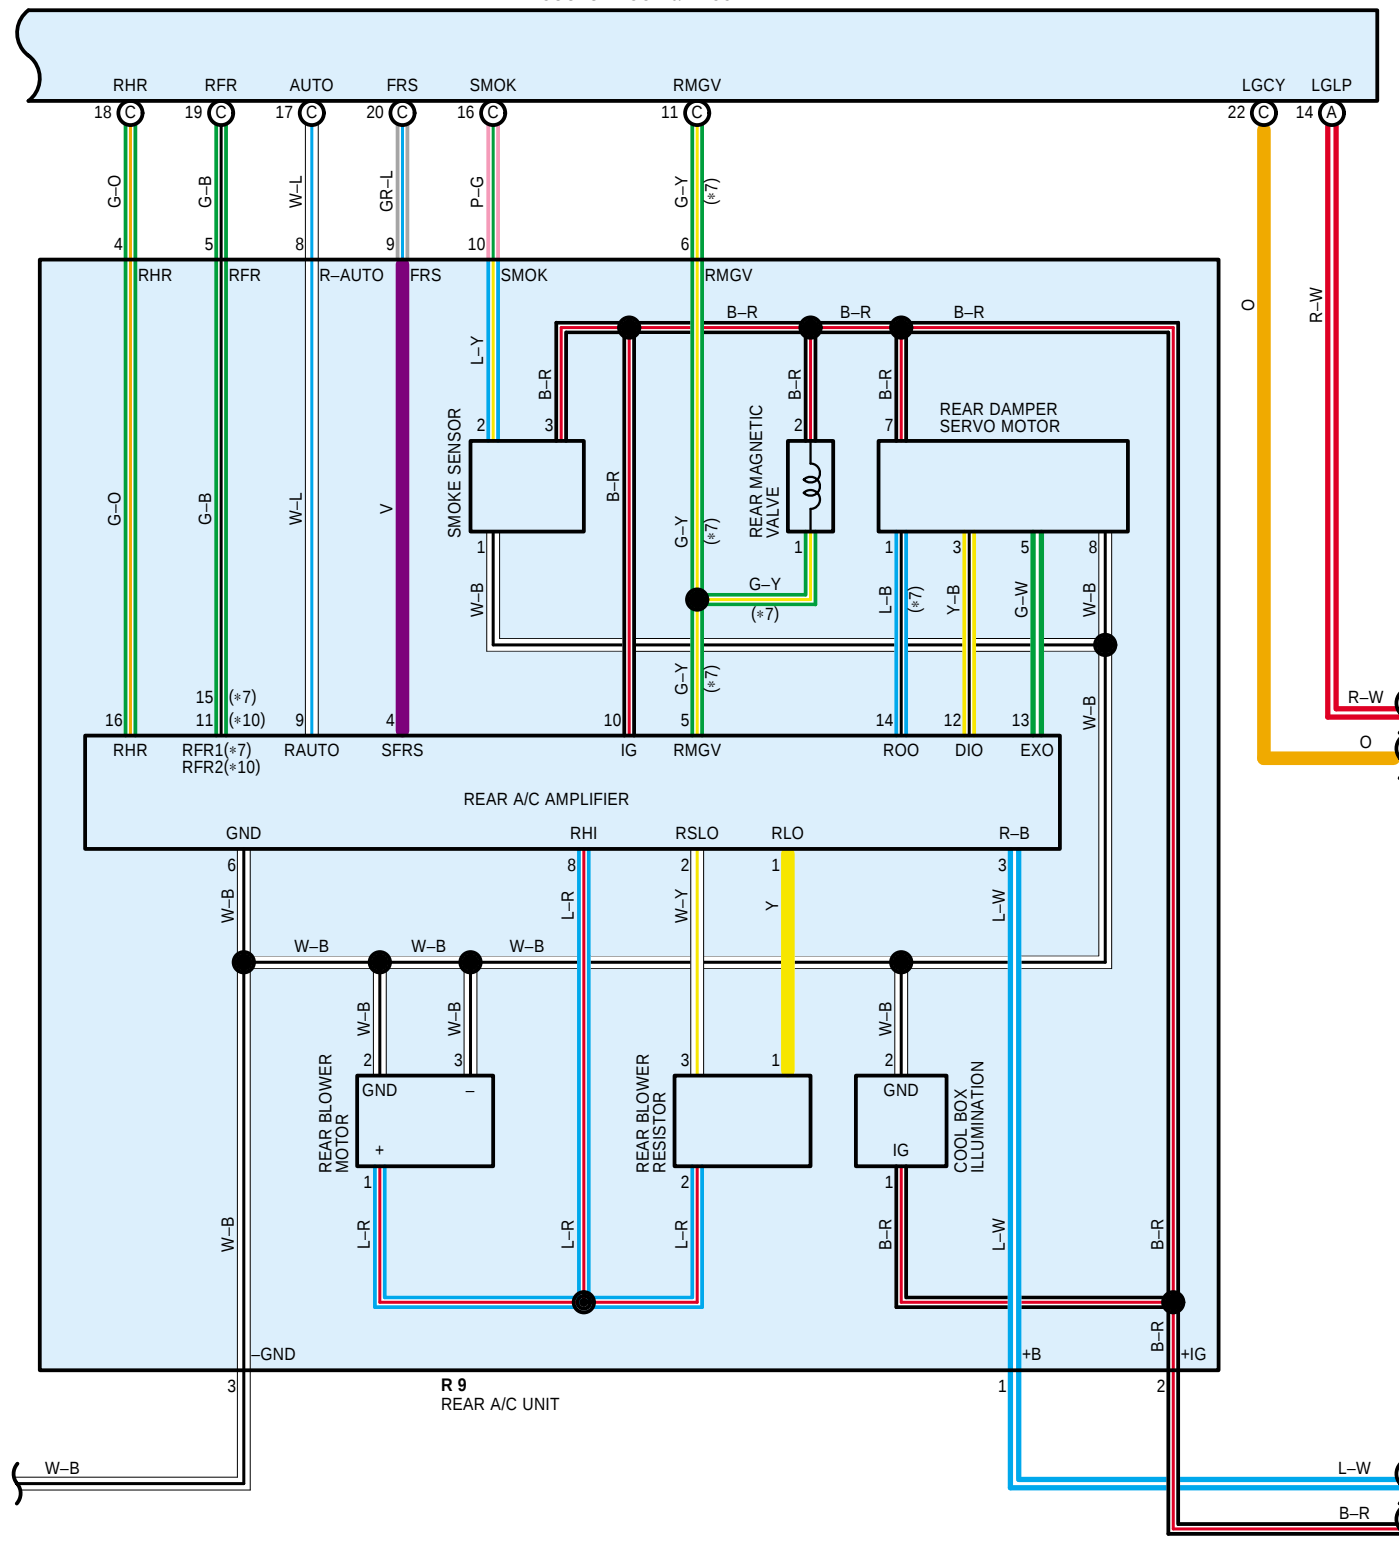

FROM POWER SOURCE SYSTEM (SEE PAGE 188)

