


E ELECTRICAL WIRING ROUTING

Position of Parts in Body

[LHD]

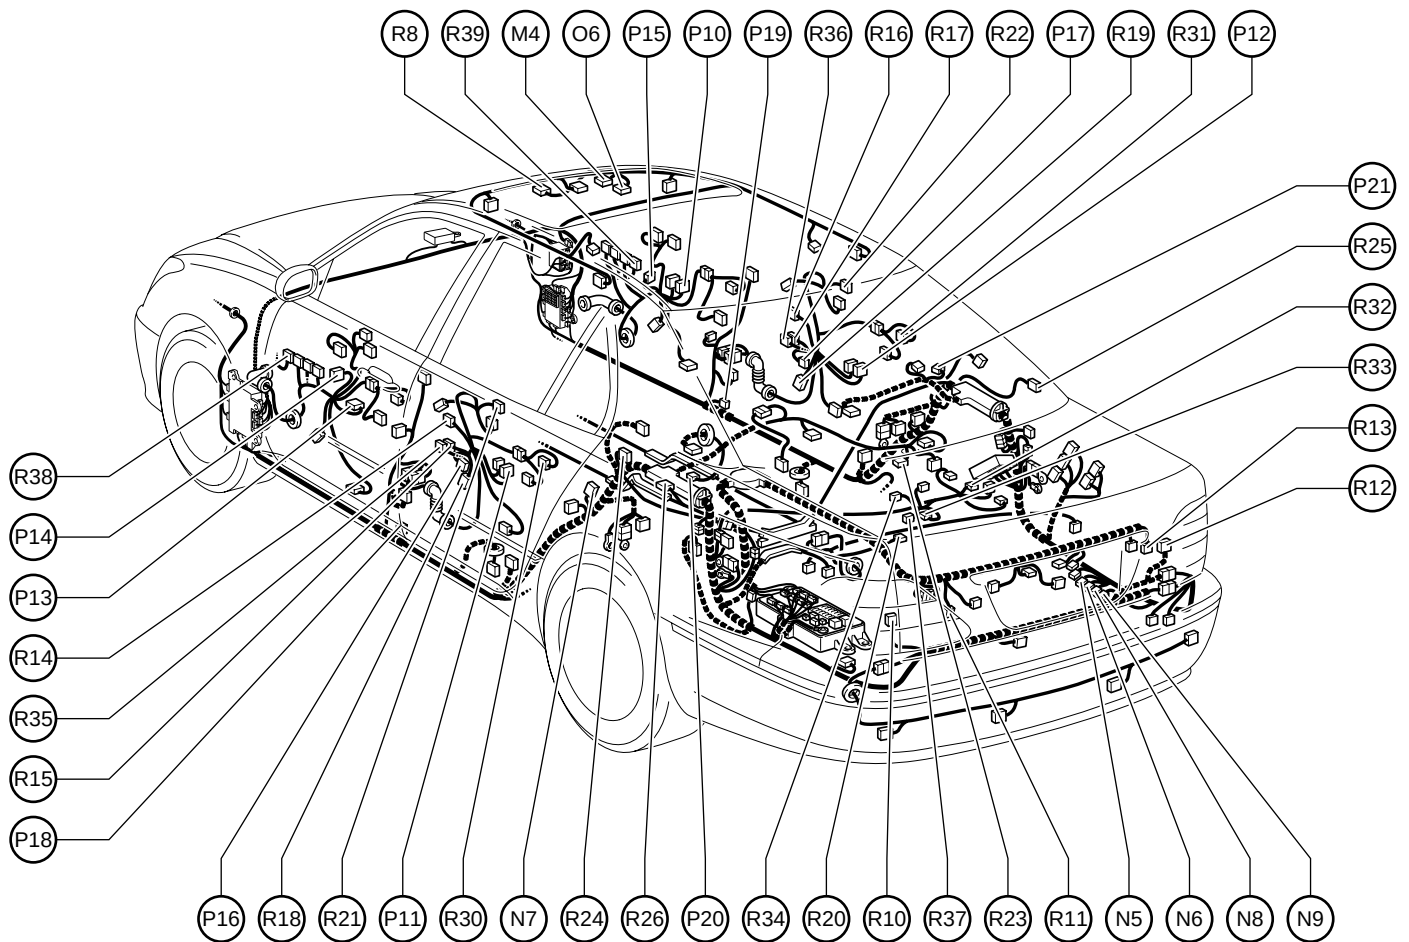

M 4 Moon Roof Control ECU and Motor

N 5 Navigation ECU

N 6 Navigation ECU

N 7 Noise Filter (Rear Window Defogger)

N 8 Navigation ECU

N 9 Navigation ECU

O 6 Overhead J/B

P10 Power Window Control SW Front RH

P11 Power Window Control SW Rear LH

P12 Power Window Control SW Rear RH

P13 Power Window Master SW

P14 Power Window Motor Front LH

P15 Power Window Motor Front RH

P16 Power Window Motor Rear LH

P17 Power Window Motor Rear RH

P18 Pretensioner Front LH

P19 Pretensioner Front RH

P20 Pretensioner Rear LH

P21 Pretensioner Rear RH

R 8 Rain Sensor

R10 Rear Combination Light LH

R11 Rear Combination Light LH

R12 Rear Combination Light RH

R13 Rear Combination Light RH

R14 Rear Door LH ECU

R15 Rear Door LH ECU

R16 Rear Door RH ECU

R17 Rear Door RH ECU

R18 Rear Door Speaker LH

R19 Rear Door Speaker RH

R20 Rear Height Control Valve

R21 Rear Seat Memory SW LH

R22 Rear Seat Memory SW RH

R23 Rear Sunshade Control Relay

R24 Rear Window Defogger

R25 Rear Window Defogger

R26 Room Oscillator (Rear)

R30 Rear Door Outside Handle LH

R31 Rear Door Outside Handle RH

R32 Rear Blower Motor

R33 Rear Blower Resistor

R34 Rear Damper Servo Motor

R35 Rear Door with Motor Lock Assembly LH

R36 Rear Door with Motor Lock Assembly RH

R37 Rear Magnetic Valve

R38 Remote Control Mirror LH

R39 Remote Control Mirror RH