


E ELECTRICAL WIRING ROUTING

Position of Parts in Body

[RHD]

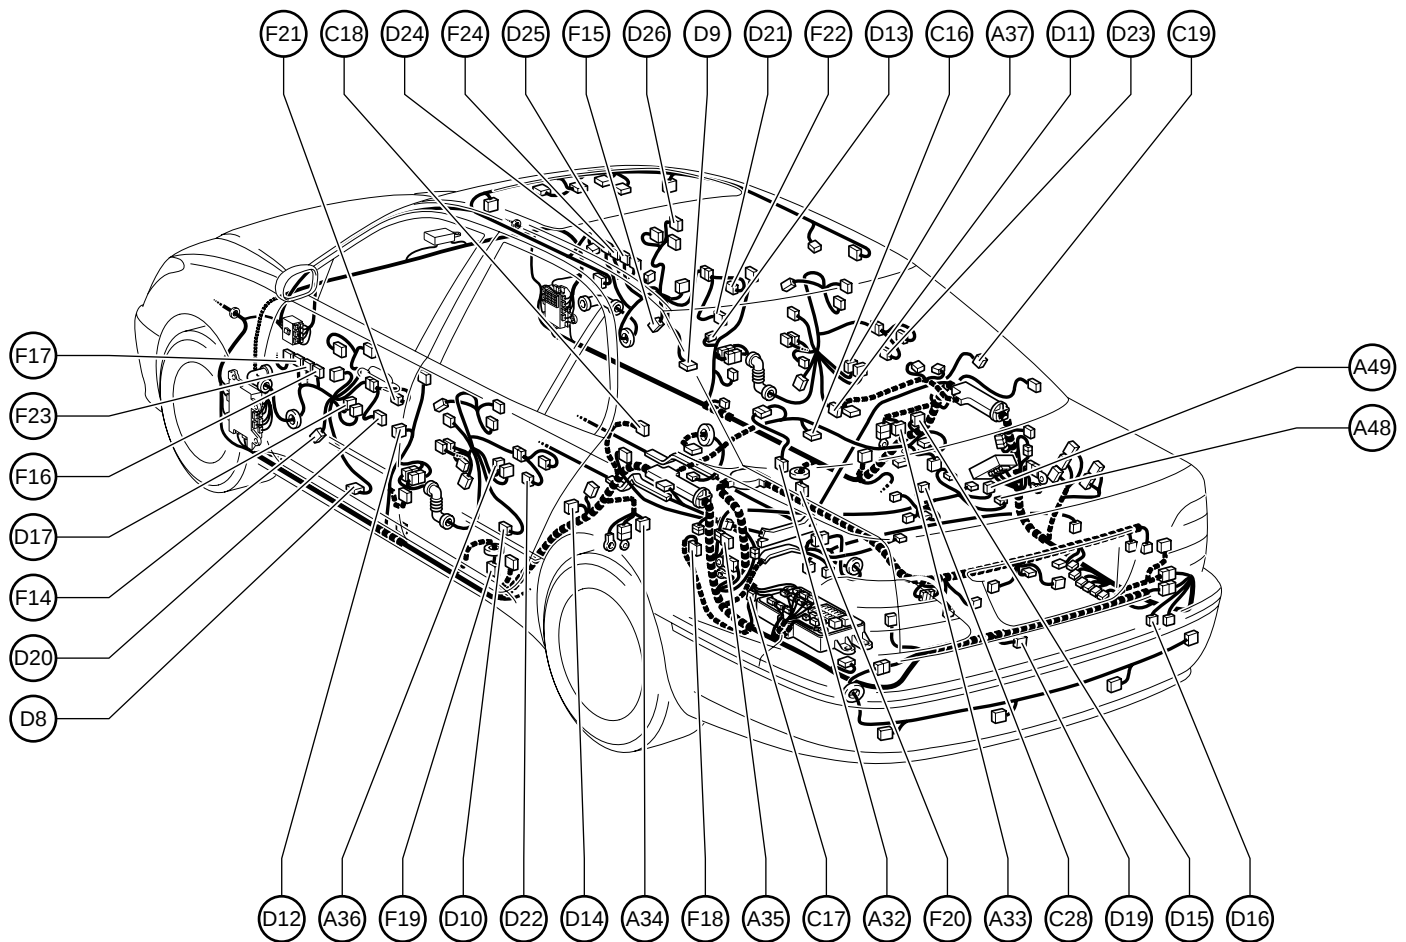

A32 A/C Solar Sensor (Rear)
 A33 ABS Speed Sensor Rear RH
 Pad Wear Indicator SW Rear RH
 A34 ABS Speed Sensor Rear LH
 A35 Acceleration Sensor
 A36 Ashtray Illumination Rear LH
 A37 Ashtray Illumination Rear RH
 A48 A/C Amplifier
 A49 Air Purifier Light

C16 Clearance Sonar Buzzer (Rear)
 C17 Clearance Sonar ECU
 C18 Curtain Shield Airbag Squib LH
 C19 Curtain Shield Airbag Squib RH
 C28 Cool Box Illumination

D 8 Door Courtesy Light Front LH
 D 9 Door Courtesy Light Front RH
 D10 Door Courtesy Light Rear LH
 D11 Door Courtesy Light Rear RH
 D12 Door Courtesy SW Front LH
 D13 Door Courtesy SW Front RH
 D14 Door Courtesy SW Rear LH
 D15 Door Courtesy SW Rear RH

D16 Door Lock Control Receiver
 D17 Door Lock Control SW Front LH
 D19 Door Lock SW (Luggage)
 D20 Door Oscillator Front LH
 D21 Door Oscillator Front RH
 D22 Door Oscillator Rear LH
 D23 Door Oscillator Rear RH
 D24 Driver Door ECU
 D25 Driver Door ECU
 D26 Driving Position Memory SW

F14 Front Door Speaker LH
 F15 Front Door Speaker RH
 F16 Front Passenger Door ECU
 F17 Front Passenger Door ECU
 F18 Fuel Lid Opener Motor
 F19 Fuel Pump
 Fuel Sender (Main)
 F20 Fuel Sender (Sub)
 F21 Front Door Outside Handle LH
 F22 Front Door Outside Handle RH
 F23 Front Door with Motor Lock Assembly LH
 F24 Front Door with Motor Lock Assembly RH