


Position of Parts in Engine Compartment

[LHD]

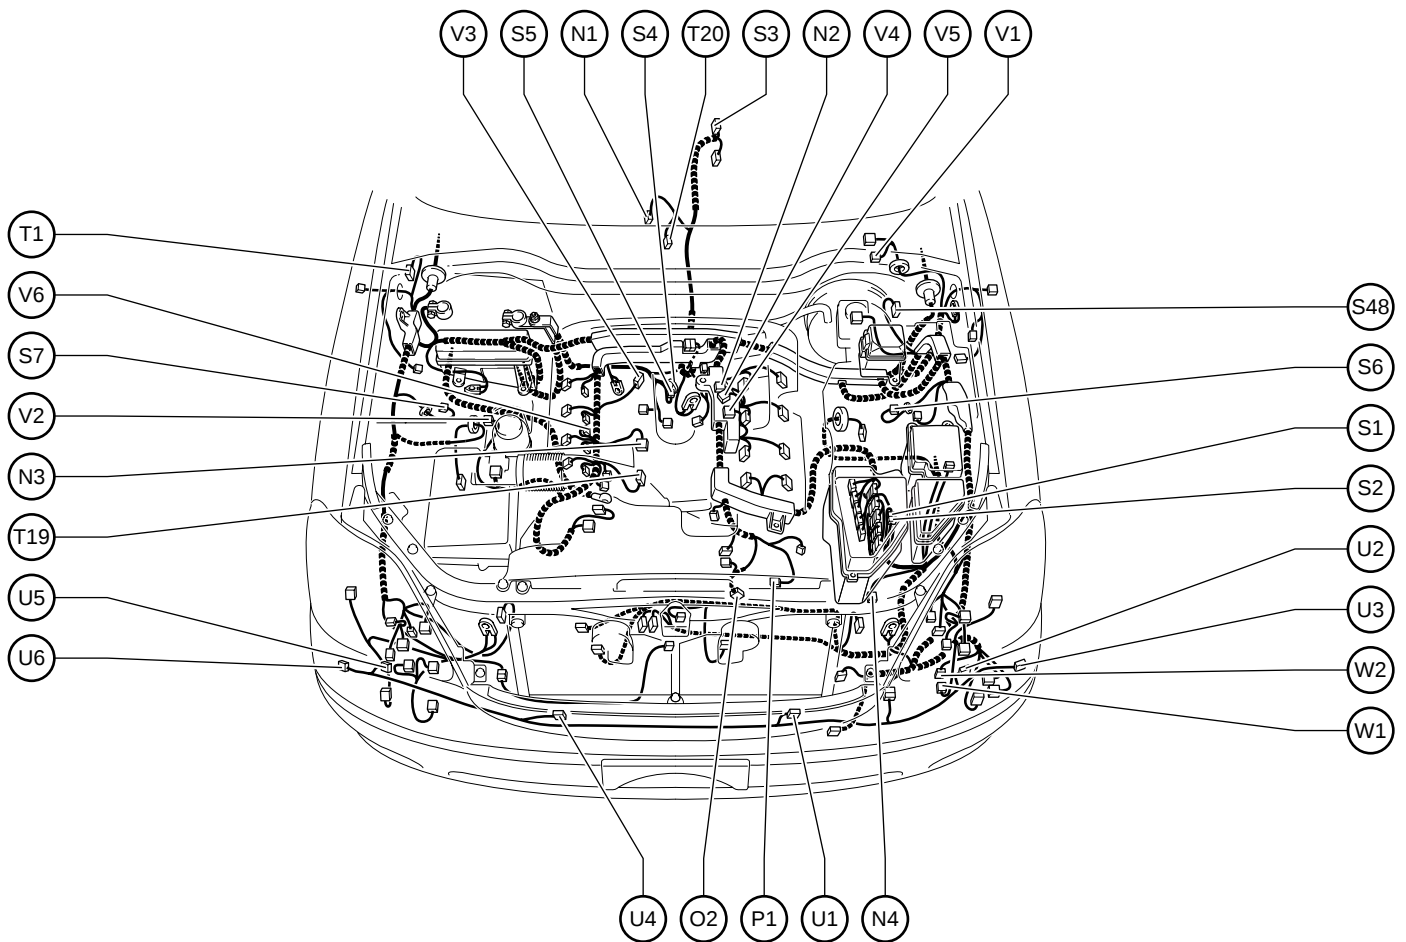

- N 1 A/T Indicator Light SW
Back-Up Light SW
Neutral Start SW
- N 2 Noise Filter (Ignition Left Bank)
- N 3 Noise Filter (Ignition Right Bank)
- N 4 Noise Filter (Rear Window Defogger)

- O 2 Oil Pressure SW

- P 1 PPS Solenoid

- S 1 Short Connector
- S 2 Short Connector
- S 3 Speed Sensor
- S 4 Starter
- S 5 Starter
- S 6 Suspension Control Actuator Front LH
- S 7 Suspension Control Actuator Front RH
- S48 Skid Control ECU with Actuator

- T 1 Theft Deterrent Horn
- T 19 Throttle Control Motor
Throttle Position Sensor
- T 20 Turbine Speed Sensor

- U 1 Ultrasonic Sensor (Front Left Center)
- U 2 Ultrasonic Sensor (Front Left Side)
- U 3 Ultrasonic Sensor (Front Left)
- U 4 Ultrasonic Sensor (Front Right Center)
- U 5 Ultrasonic Sensor (Front Right Side)
- U 6 Ultrasonic Sensor (Front Right)

- V 1 Variable Motor
- V 2 Variable Resistor
- V 3 VSV (ACIS)
- V 4 VSV (EVAP)
- V 5 VVT Sensor LH
- V 6 VVT Sensor RH

- W 1 Washer Level Sensor
- W 2 Washer Motor