


Position of Parts in Instrument Panel

[LHD]

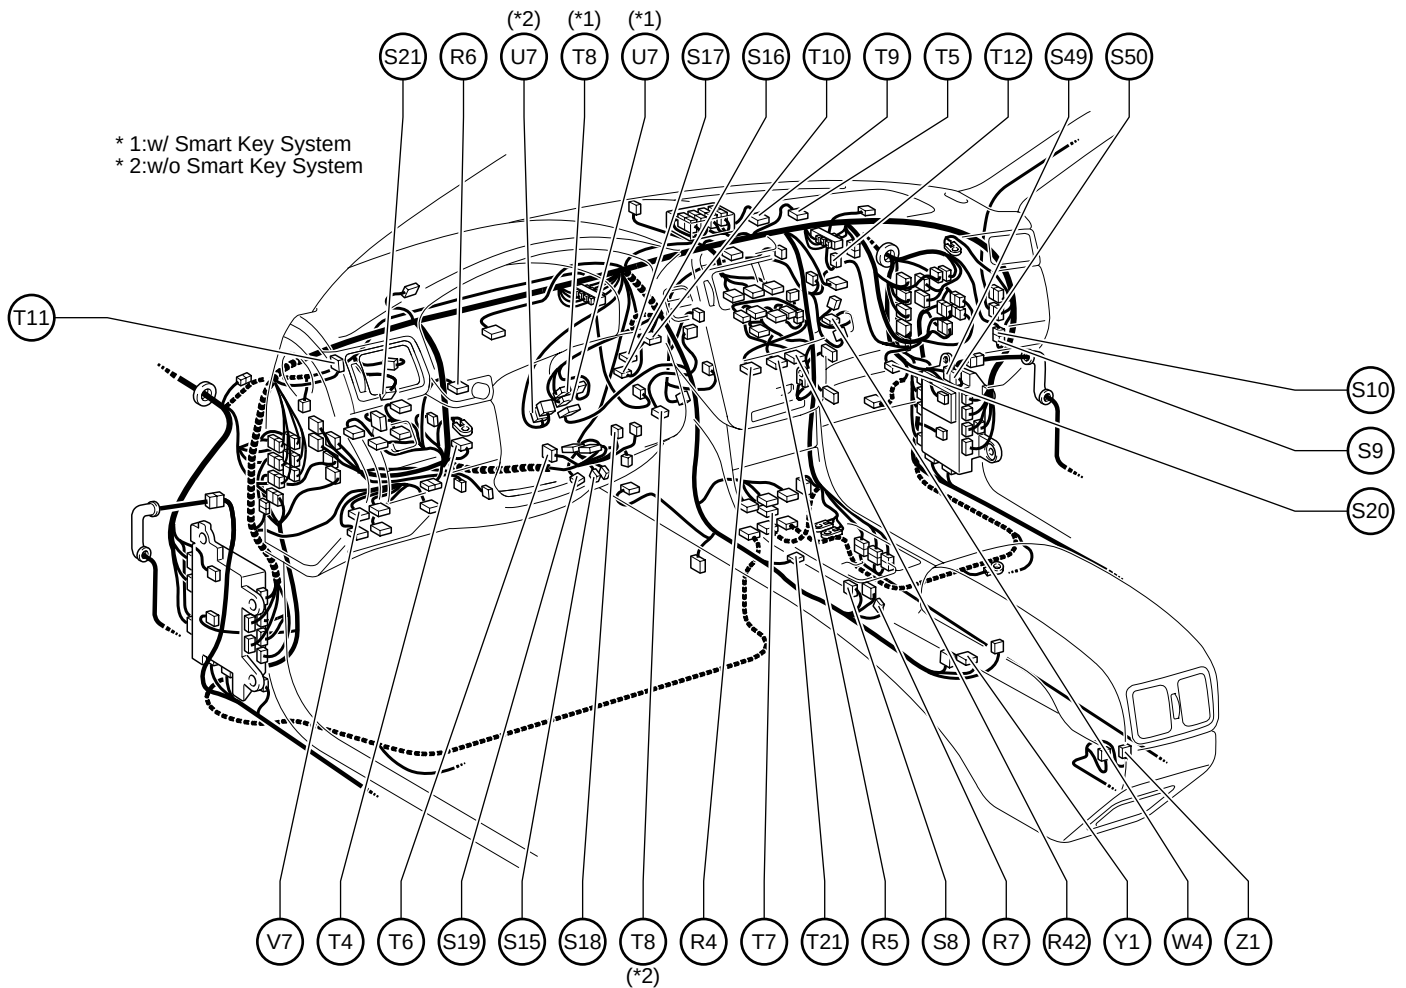

R 4 Radio and Player
R 5 Radio and Player
R 6 Rheostat
R 7 Room Oscillator (Front)
R42 Radio and Player

S 8 Shift Lock Control ECU
S 9 Short Connector (Height Control)
S10 Short Connector (Height Control)
S15 Smart Key System Cancel SW
S16 Speed Warning Buzzer
S17 Steering Lock ECU
S18 Steering Sensor
S19 Step Light Front LH
S20 Step Light Front RH
S21 Stop Light SW
S49 Short Connector
S50 Short Connector

T 4 Telescopic Motor and Position Sensor
T 5 Theft Deterrent ECU
T 6 Tilt Motor and Position Sensor
T 7 Climate Control Seat SW Front LH
Climate Control Seat SW Front RH
Headlight Cleaner SW
Rear Seat Reset SW
Rear Sunshade SW (Front)
Seat Heater SW Front LH
Seat Heater SW Front RH
Traction Control SW
T 8 Ignition Key Cylinder Light
Transponder Key Amplifier
T 9 Transponder Key Computer
T10 Trip SW
T11 Tweeter Front LH
T12 Tweeter Front RH
T21 Transmission Control SW

U 7 Unlock Warning SW

V 7 VSC Warning Buzzer

W 4 Water Valve Servo Motor

Y 1 Yaw Rate Sensor

Z 1 Option Connector (Cellular Phone)