


Position of Parts in Body

[LHD]

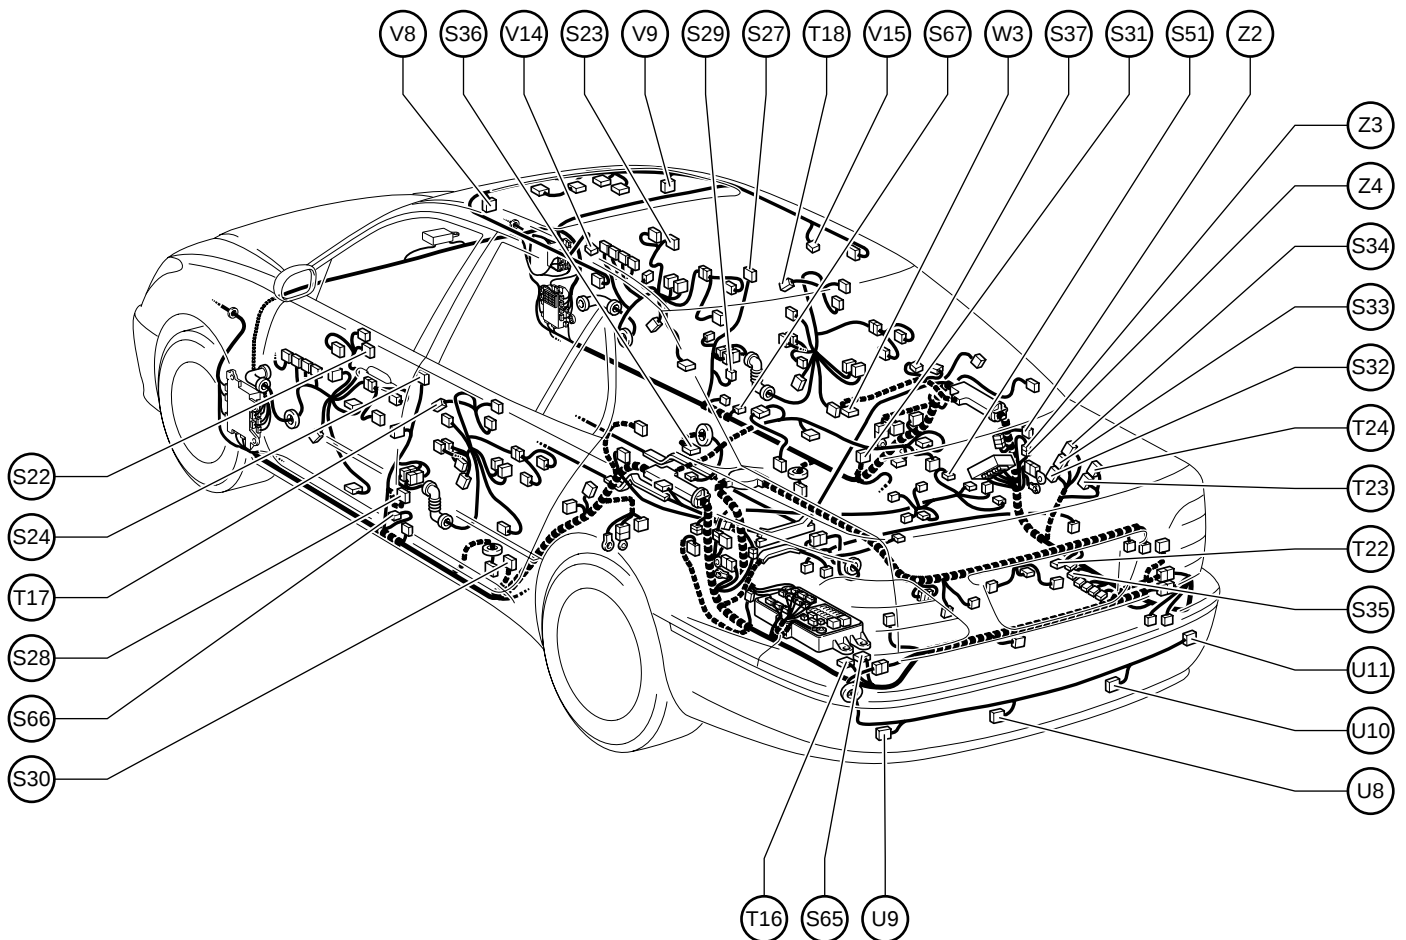

S22 Shoulder Belt Adjust SW Front LH
 S23 Shoulder Belt Adjust SW Front RH
 S24 Shoulder Belt Anchor Motor and Position Sensor LH
 S27 Shoulder Belt Anchor Motor RH
 S28 Side Airbag Sensor Front LH
 S29 Side Airbag Sensor Front RH
 S30 Side Airbag Sensor Rear LH
 S31 Side Airbag Sensor Rear RH
 S32 Stereo Component Amplifier
 S33 Stereo Component Amplifier
 S34 Stereo Component Amplifier
 S35 Stereo Component Tuner
 S36 Suspension Control Actuator Rear LH
 S37 Suspension Control Actuator Rear RH
 S51 Smoke Sensor
 S65 Seat Belt Control ECU
 S66 Seat Belt Motor LH
 S67 Seat Belt Motor RH

U 8 Ultrasonic Sensor (Rear Left Center)
 U 9 Ultrasonic Sensor (Rear Left)
 U10 Ultrasonic Sensor (Rear Right Center)
 U11 Ultrasonic Sensor (Rear Right)

V 8 Vanity Light Front LH
 V 9 Vanity Light Front RH
 V14 Vanity Light Rear LH
 V15 Vanity Light Rear RH

W 3 Woofer

Z 2 Option Connector
 (Telephone Transceiver and Speaker Relay)
 Z 3 Option Connector
 (Telephone Transceiver and Speaker Relay)
 Z 4 Option Connector
 (Telephone Transceiver and Speaker Relay)

T16 Theft Deterrent Siren
 T17 Tweeter Rear LH
 T18 Tweeter Rear RH
 T22 Television Camera
 T23 Television Camera ECU
 T24 Television Camera ECU