


Position of Parts in Instrument Panel

[RHD]

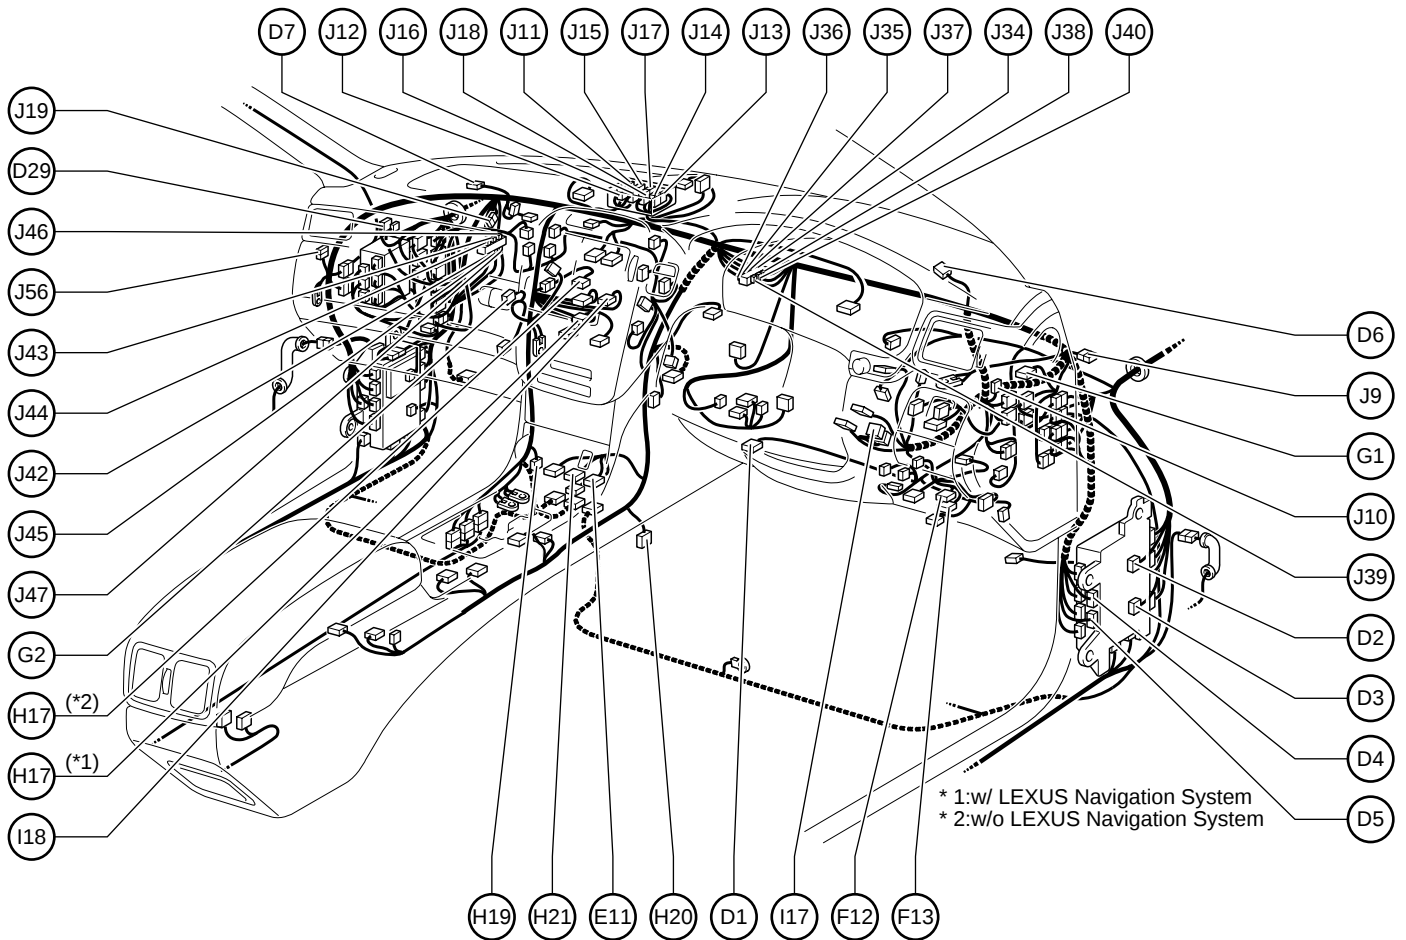

D 1 DLC3
 D 2 Driver Side J/B ECU
 D 3 Driver Side J/B ECU
 D 4 Driver Side J/B ECU
 D 5 Driver Side J/B ECU
 D 6 Duct Sensor (Driver's Side)
 D 7 Duct Sensor (Front Passenger's Side)
 D29 Distance Control ECU

E 11 ECT Pattern Select SW

F 12 Fuel Lid Opener SW
 F 13 Fuel Lid Opener SW Illumination

G 1 Gateway ECU
 G 2 Glove Box Light

H 17 Hazard SW
 H 19 Heated Oxygen Sensor (Bank 1 Sensor 2)
 H 20 Heated Oxygen Sensor (Bank 2 Sensor 2)
 H 21 Height Control SW

I 17 Ignition SW
 I 18 Instrument Panel Register

J 9 Junction Connector
 J 10 Junction Connector
 J 11 Junction Connector
 J 12 Junction Connector
 J 13 Junction Connector
 J 14 Junction Connector
 J 15 Junction Connector
 J 16 Junction Connector
 J 17 Junction Connector
 J 18 Junction Connector
 J 19 Junction Connector
 J 34 Junction Connector
 J 35 Junction Connector
 J 36 Junction Connector
 J 37 Junction Connector
 J 38 Junction Connector
 J 39 Junction Connector
 J 40 Junction Connector
 J 42 Junction Connector
 J 43 Junction Connector
 J 44 Junction Connector
 J 45 Junction Connector
 J 46 Junction Connector
 J 47 Junction Connector
 J 56 Junction Connector