


Position of Parts in Body

[RHD]

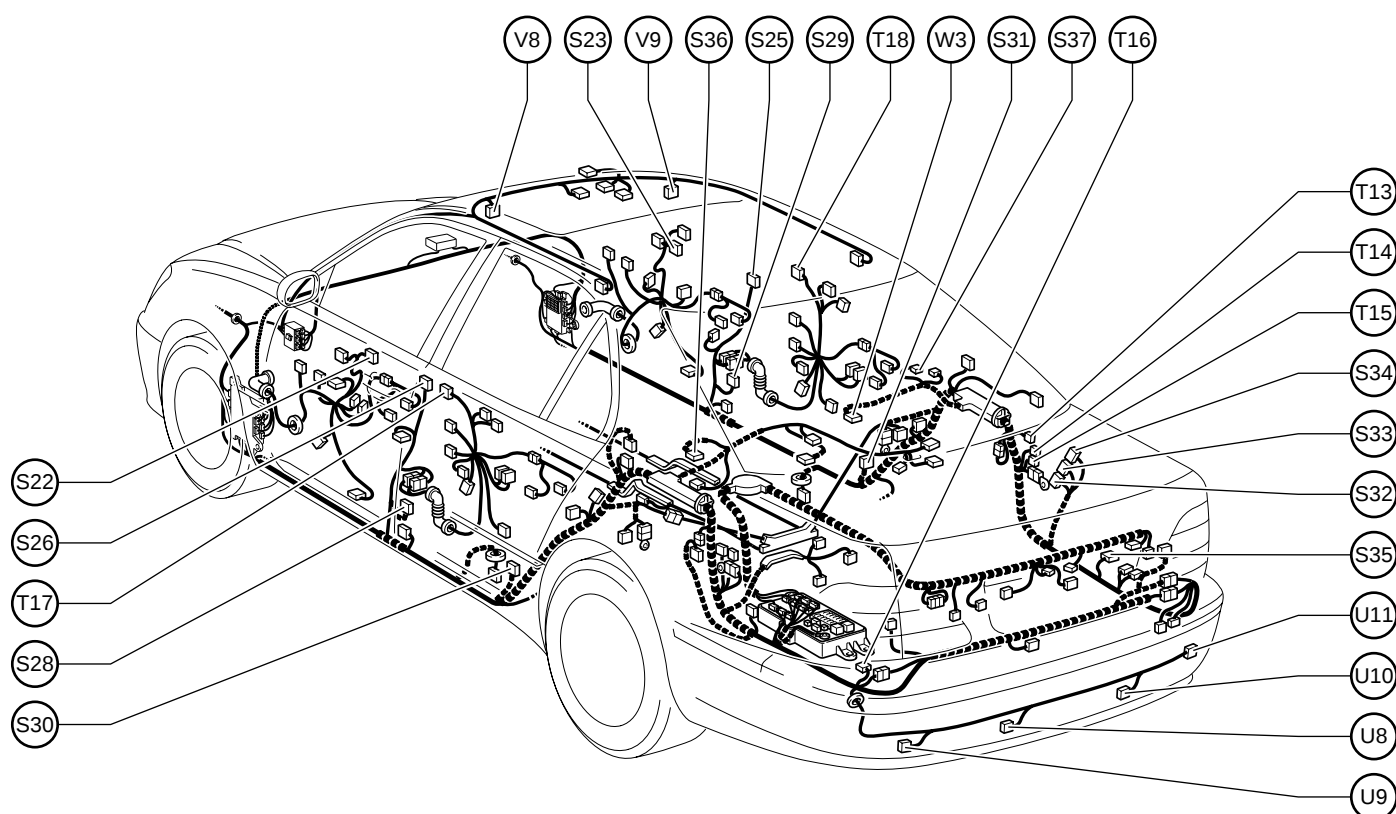

S22 Shoulder Belt Adjust SW Front LH
 S23 Shoulder Belt Adjust SW Front RH
 S25 Shoulder Belt Anchor Motor and Position Sensor RH
 S26 Shoulder Belt Anchor Motor LH
 S28 Side Airbag Sensor Front LH
 S29 Side Airbag Sensor Front RH
 S30 Side Airbag Sensor Rear LH
 S31 Side Airbag Sensor Rear RH
 S32 Stereo Component Amplifier
 S33 Stereo Component Amplifier
 S34 Stereo Component Amplifier
 S35 Stereo Component Tuner
 S36 Suspension Control Actuator Rear LH
 S37 Suspension Control Actuator Rear RH

T13 Telephone Transceiver and Speaker Relay
 T14 Telephone Transceiver and Speaker Relay
 T15 Telephone Transceiver and Speaker Relay
 T16 Theft Deterrent Siren
 T17 Tweeter Rear LH
 T18 Tweeter Rear RH

U 8 Ultrasonic Sensor (Rear Left Center)
 U 9 Ultrasonic Sensor (Rear Left)
 U10 Ultrasonic Sensor (Rear Right Center)
 U11 Ultrasonic Sensor (Rear Right)

V 8 Vanity Light LH
 V 9 Vanity Light RH

W 3 Woofer