



SCREEN FLICKER OR COLOR DISTORTION

INSPECTION PROCEDURE


1 CHECK DISPLAY SETTING

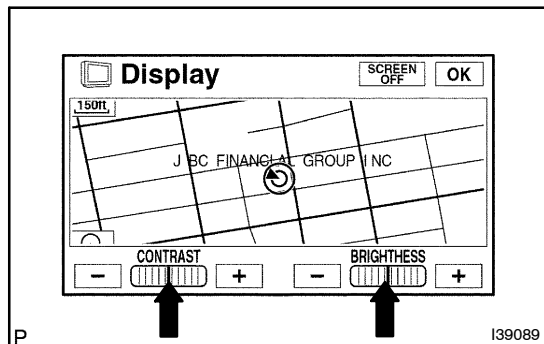

- (a) Enter the option screen by pressing the "OPTION" switch.
- (b) Enter the display adjustment screen by pressing the "DISPLAY" switch.
- (c) Reset display settings (contrast, brightness) and check if the screen appears normal.

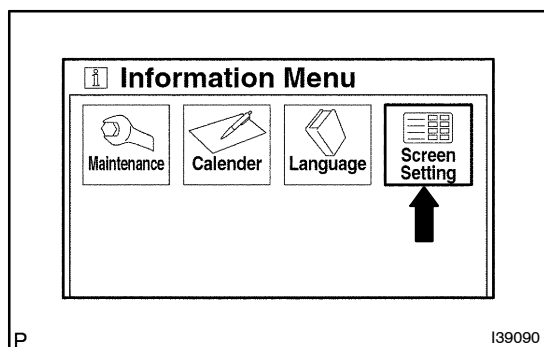

- (d) Press the "Information" switch and then the "Screen Setting" switch.

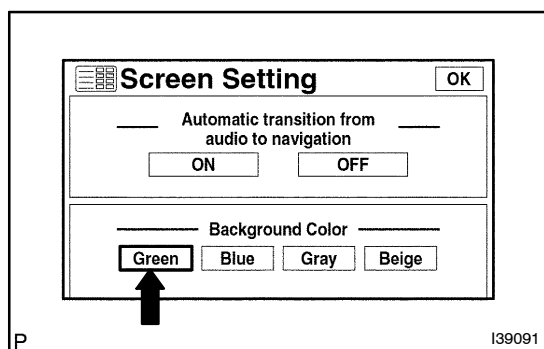

- (e) Set the "Background Color" to "Green" (initial setting) and check if it is normal.

OK: Returns to normal.

OK → **END**

NG

2 CHECK CABIN

- (a) Check if the cabin temperature is -20°C (-4.0°F) or less.

OK: Cabin is warmer than -20°C (-4.0°F).


NG →

HEAT THE CABIN AND RECHECK THE TEMPERATURE

OK

3 DISPLAY CHECK MODE (COLOR BAR CHECK MODE)

(a) Enter the "Display Check" mode (Color Bar Check Mode) (see page 05-1752).

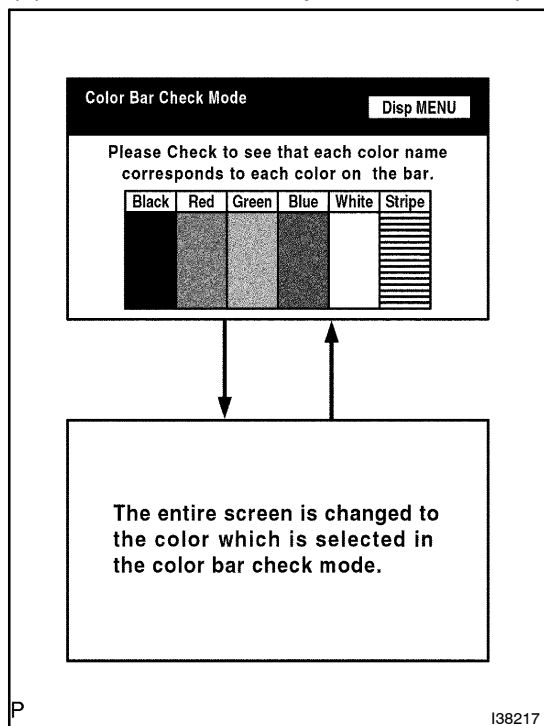

(b) Check that color bars match the displayed names.

OK: Color bars match the displayed names.


NG

**REPLACE MULTI-DISPLAY
(SEE PAGE 67-8)**

OK

4 NAVIGATION CHECK MODE (NAVI COLOR BAR CHECK)

(a) Enter the "Navigation Check" mode (NAVI Color Bar Check) (see page 05-1758).

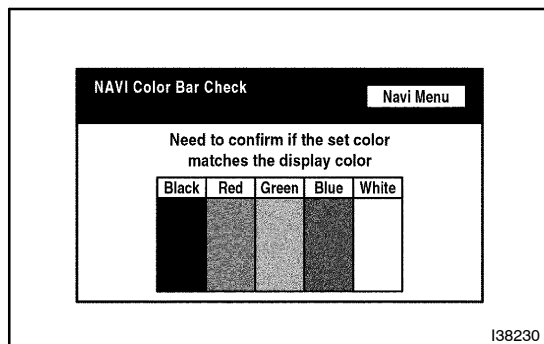

(b) Check that color bars match the displayed names.

OK: Color bars match the displayed names.

OK

**REPLACE MULTI-DISPLAY
(SEE PAGE 67-8)**

NG

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-1771)**