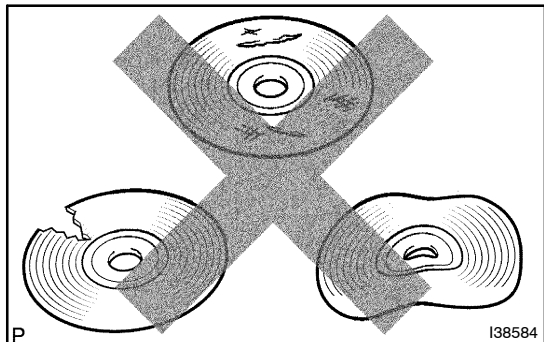


MAP DISC CANNOT BE INSERTED**INSPECTION PROCEDURE****1 CHECK MAP DISC**

- (a) Check that the map disc is not deformed or cracked.
OK: No deformations or cracks appear on the map disc.

NG**REPLACE THE MAP DISC****OK****2 CHECK NAVIGATION ECU**

- (a) Check if the "PUSH" indicator near the disc slot comes on.
OK: It does not come on.

NG**PRESS THE EJECT SWITCH TO EJECT THE DISC****OK**

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-1771)