


VEHICLE POSITION MARK IS NOT UPDATED

INSPECTION PROCEDURE

1 CHECK THE MAP DISC

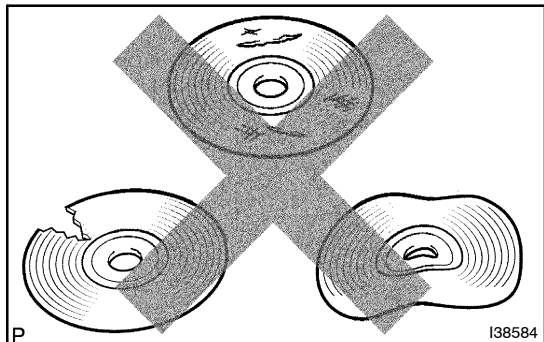

(a) Check that the map disc is not deformed or cracked.

OK: No deformations or cracks appear on the map disc.

NG

REPLACE THE MAP DISC

OK

2 CHECK THE MAP DISPLAY

(a) Check if a touch scroll can be performed on the map display.

OK: Touch scroll can be performed.


NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1771)

OK

3 NAVIGATION CHECK MODE (VEHICLE SENSORS)

(a) Enter the "Navigation Check" mode (Vehicle Sensors) (see page 05-1757).

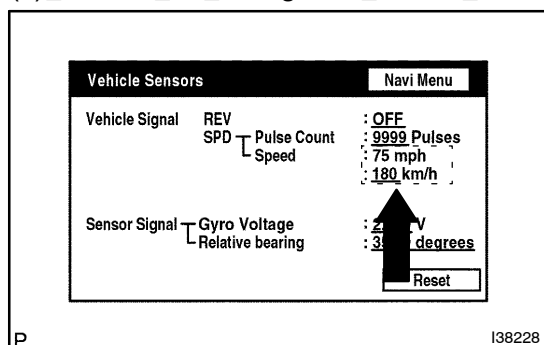

(b) While driving, compare the "SPEED" indicator to the reading on the speedometer. Check if these readings are almost the same.

OK: The readings are almost the same.

NG

GO TO "SPEED SIGNAL CIRCUIT (NAVIGATION ECU - COMBINATION METER ASSY)" IN THE FLOW CHART (SEE PAGE 05-1859)

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1771)