

VOICE RECOGNITION DIFFICULTY

INSPECTION PROCEDURE

1 CHECK CONDITION

- (a) Check if the system's voice recognition level is low with only one particular voice.


OK: The system's voice recognition level is low with any voice.

NG

SYSTEM'S VOICE RECOGNITION LEVEL VARIES DEPENDING ON VOICE AND PRONUNCIATION. THIS IS NOT A MALFUNCTION

OK

2 CHECK MAP DISC

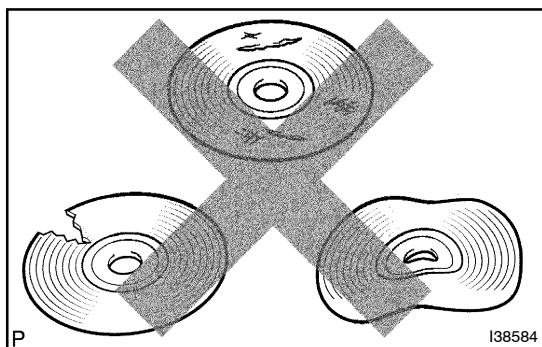

- (a) Check that the map disc is not deformed or cracked.


OK: No deformations or cracks appear on the map disc.

NG

REPLACE MAP DISC

OK

3 CHECK MAP DISC

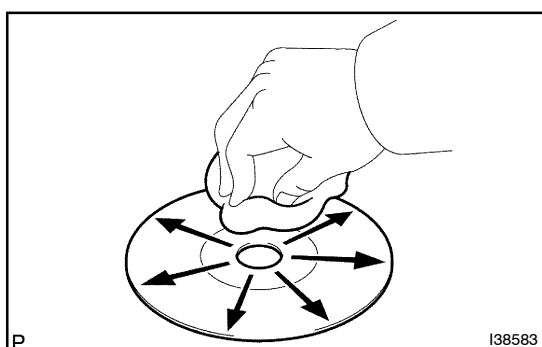

- (a) Check for dirt on the map disc surface.

OK: No dirt is on the map disc surface.

HINT:

If dirt is on the map disc surface, wipe it with a soft cloth from inside to outside in a radial direction.

NOTICE:

Do not use conventional record cleaner or anti-static preservative.


NG

CLEAN THE MAP DISC

OK

4 NAVIGATION CHECK MODE (MICROPHONE CHECK)

(a) Enter the "Microphone Check" mode (see page 05-1760)

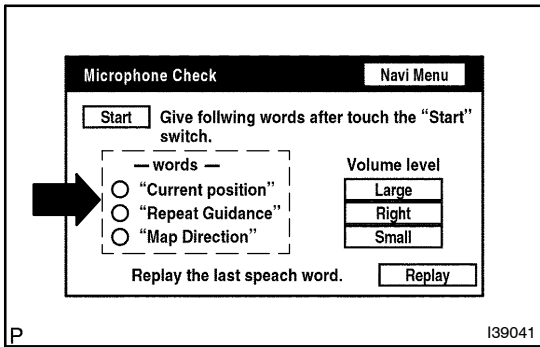

(b) Follow the directions on the screen. Check if the word recognition indicator is displayed in green in each item.

OK: All check items are recognized.

NG

**PROCEED TO NEXT CIRCUIT INSPECTION
SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-1771)**

OK

NORMAL OPERATION