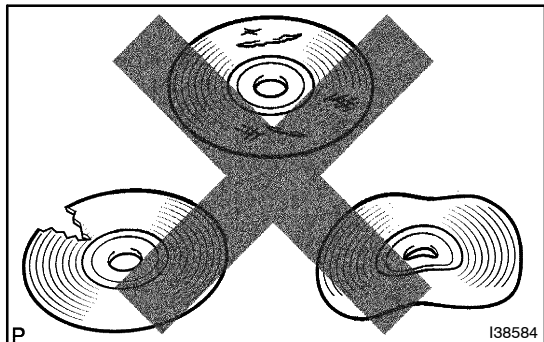
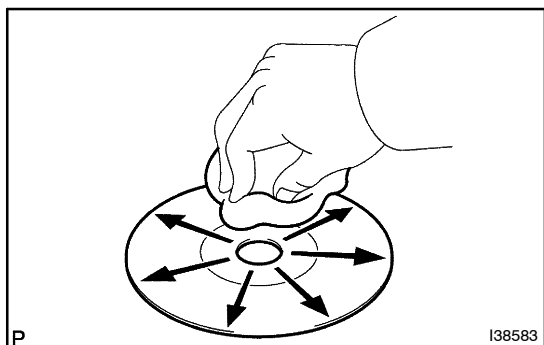


VOICE IS NOT RECOGNIZED**INSPECTION PROCEDURE****1 CHECK MAP DISC**

- (a) Check that the map disc is not deformed or cracked.
OK: No deformations or cracks appear on the map disc.

NG**REPLACE MAP DISC****OK****2 CHECK MAP DISC**

- (a) Check for dirt on the map disc surface.
OK: No dirt is on the map disc surface.

HINT:

If dirt is on the map disc surface, wipe it with a soft cloth from inside to outside in a radial direction.


NOTICE:

Do not use conventional record cleaner or anti-static preservative.

NG**CLEAN THE MAP DISC****OK**

3 NAVIGATION CHECK MODE (MICROPHONE CHECK)

(a) Enter the "Microphone Check" mode (see page 05-1760)

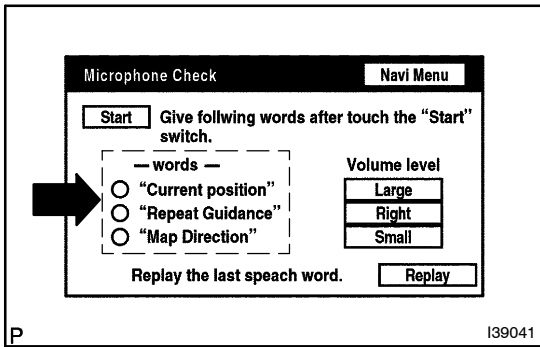

(b) Follow the directions on the screen. Check if the word recognition indicator is displayed in green in each item.

OK: All check items are recognized.

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1771)

OK

REPLACE NAVIGATION ECU (SEE PAGE 67-9)