

CHARGING SYSTEM

LOCATION

190UV-01

LHD

FL Block Assy

- R/B H-fuse
- D-J/B H-fuse
- ALT H-fuse
- ALT-S Fuse
- DC CUT Fuse


Passenger Side J/B

- DOME Fuse
- MPX-B2 Fuse

Ignition Switch Assy

Combination Meter

- Charge Warning Lamp

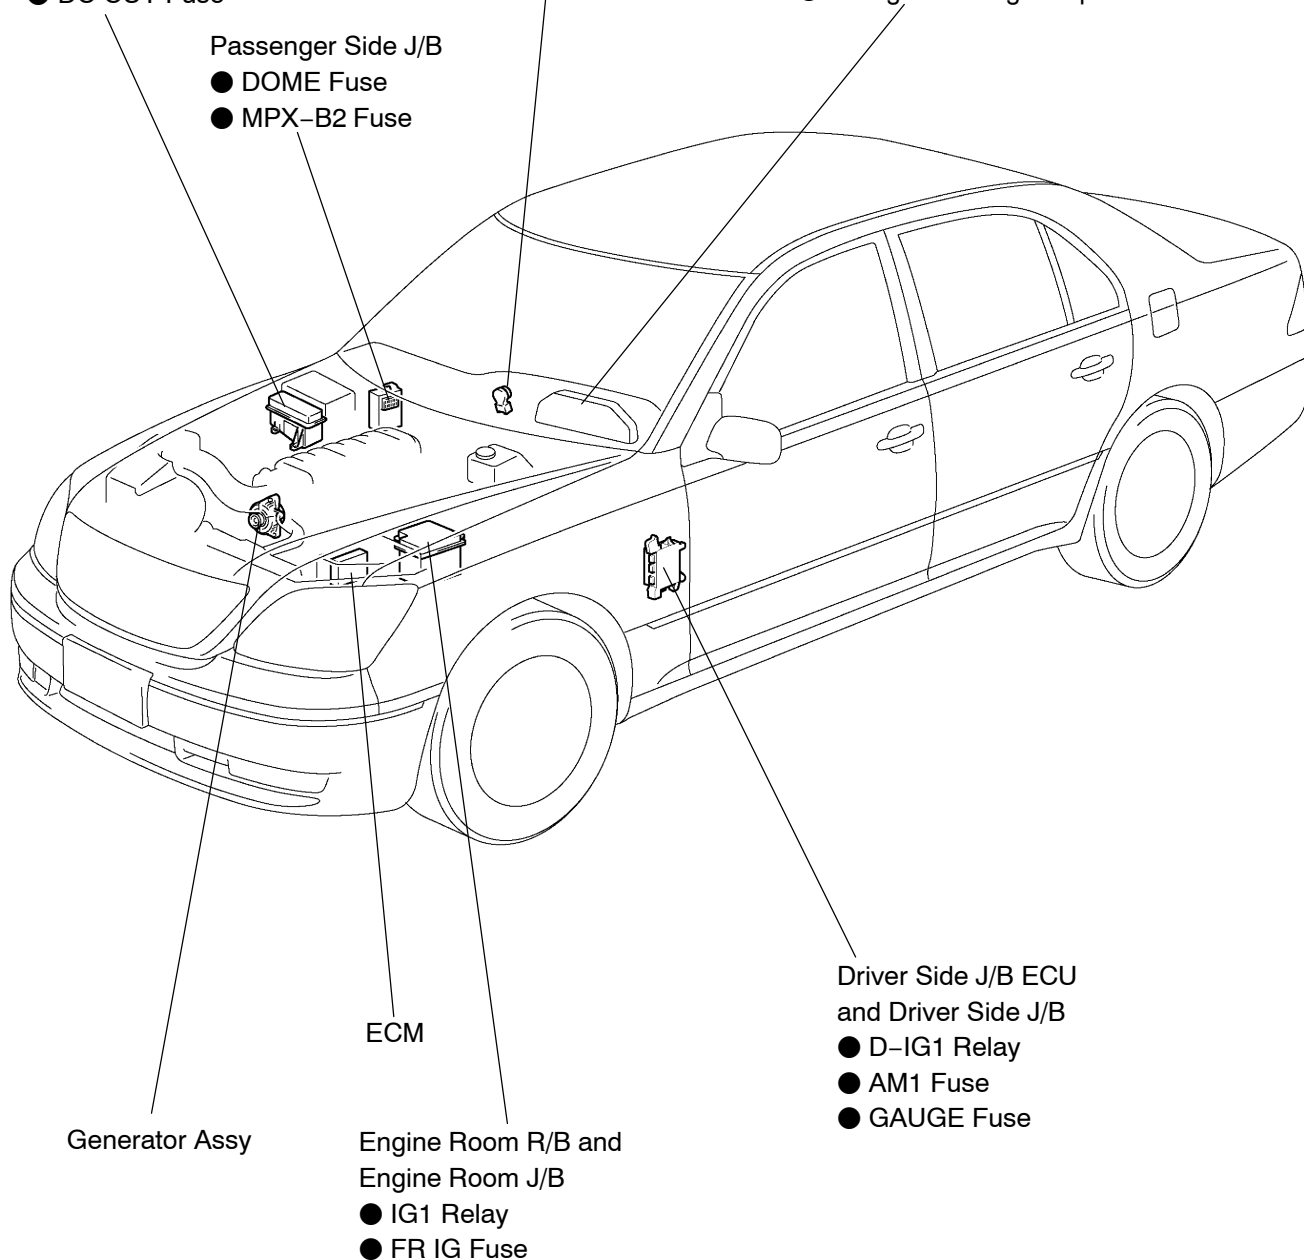

Driver Side J/B ECU and Driver Side J/B

- D-IG1 Relay
- AM1 Fuse
- GAUGE Fuse

RHD

