


OVERHAUL


HINT:

- Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
 - Reassembly is in the reverse order of overhaul.
1. **REMOVE ENGINE UNDER COVER NO.1** (SEE PAGE 76-3)
 2. **REMOVE FRONT FENDER LINER LH** (SEE PAGE 76-3)
 3. **REMOVE FRONT FENDER LINER RH** (SEE PAGE 76-3)
 4. **REMOVE FRONT BUMPER COVER** (SEE PAGE 76-3)

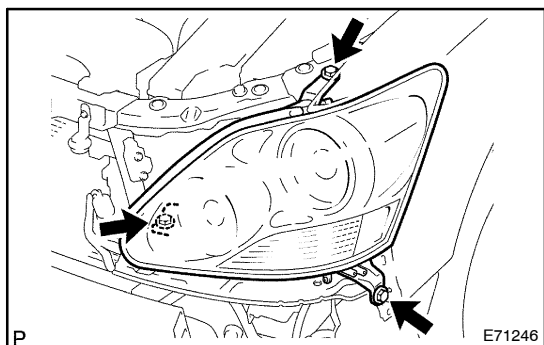


5. REMOVE LH HEADLAMP ASSY

- (a) Remove the 3 screws.
- (b) Pull out the LH headlamp assy forward.
- (c) Disconnect the connectors and remove the LH headlamp assy.

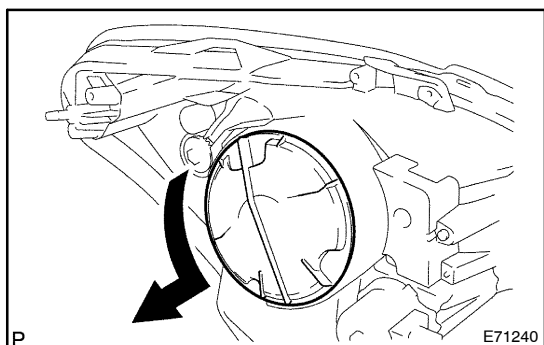


6. REMOVE DISCHARGE HEADLAMP BULB


- (a) Turn the headlamp socket cover as shown in the illustration.

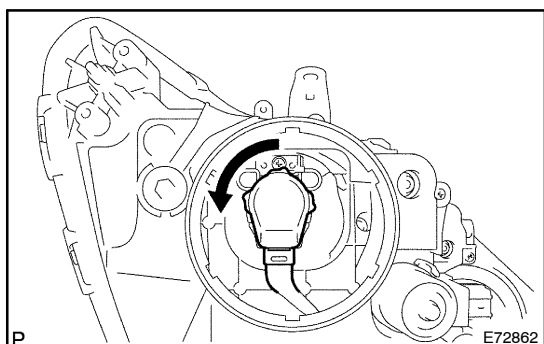


- (b) Remove the discharge headlamp bulb socket as shown in the illustration.

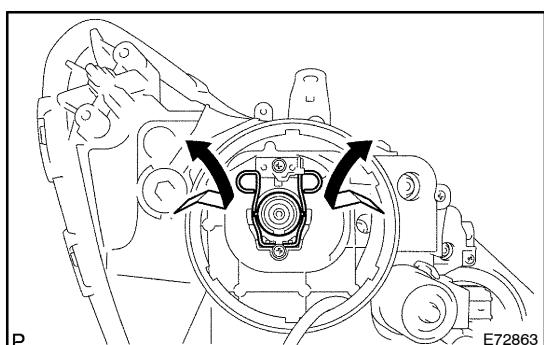


- (c) Release the lock of the set spring and remove the discharge headlamp bulb.

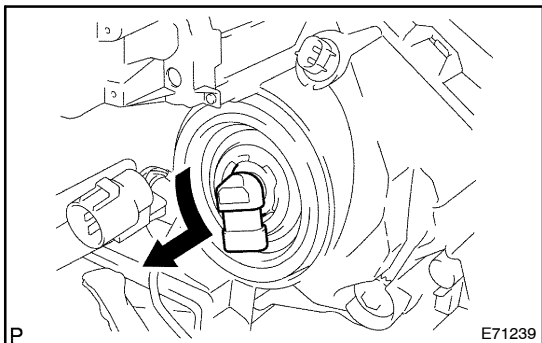**7. REMOVE HEADLAMP, NO.2 BULB**


- (a) Remove the headlamp No.2 bulb as shown in the illustration.

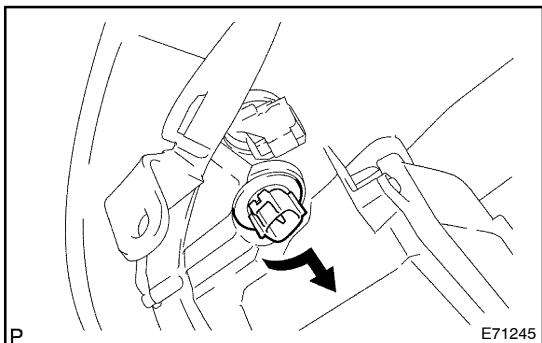**8. REMOVE FRONT TURN SIGNAL LAMP BULB**


- (a) Remove the front turn signal lamp bulb and the front turn signal lamp socket as shown in the illustration.
- (b) Remove the front turn signal lamp bulb from the front turn signal lamp socket.

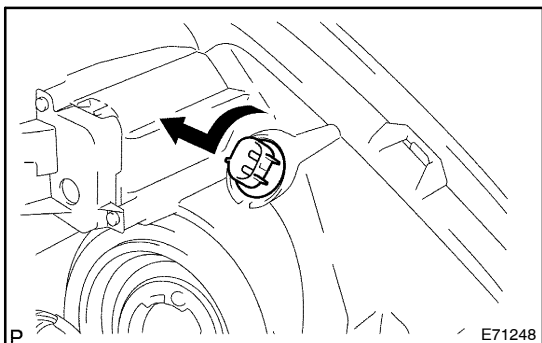**9. REMOVE CLEARANCE LAMP BULB**


- (a) Remove the clearance lamp bulb and the clearance lamp bulb socket as shown in the illustration.
- (b) Remove the clearance lamp bulb from the clearance lamp bulb socket.

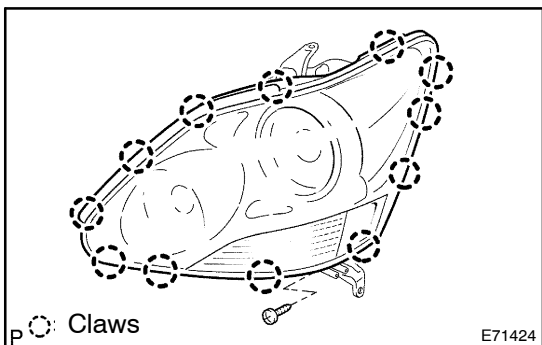**10. REMOVE HEADLAMP COVER SEAL LH**


- (a) Remove the screw and disengage the 12 claws.
- (b) Remove the headlamp lens from the headlamp unit.

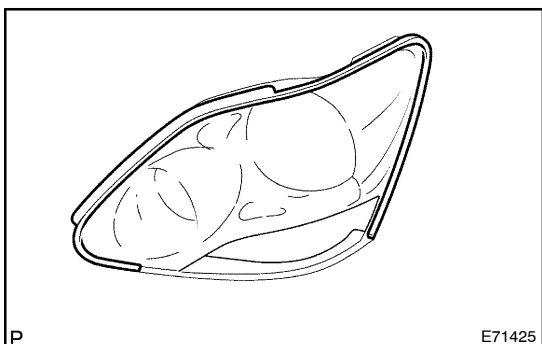

- (c) Remove the headlamp cover seal LH.

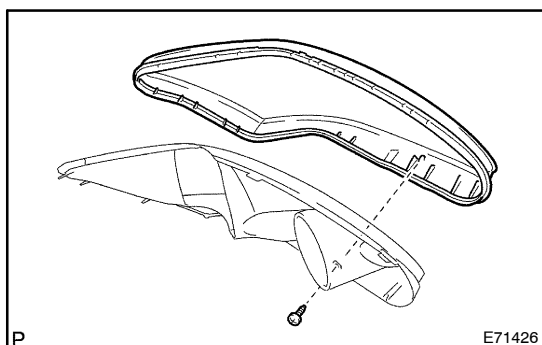


- (d) Remove the screw and the headlamp lens from the extension.

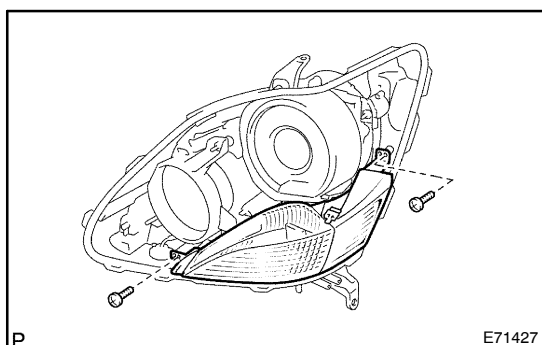


11. REMOVE LIGHT CONTROL ECU

- (a) Remove the 2 screws and the turn signal lens from the headlamp unit.

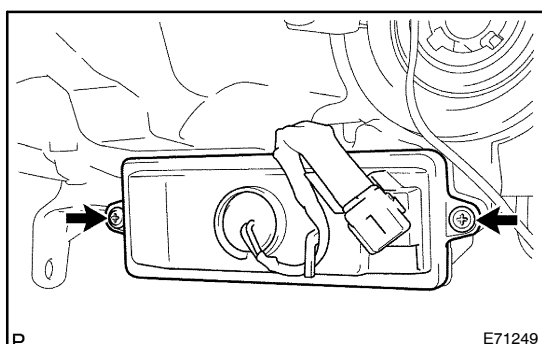

- (b) Remove the 2 screws and the headlamp cover No. 1.

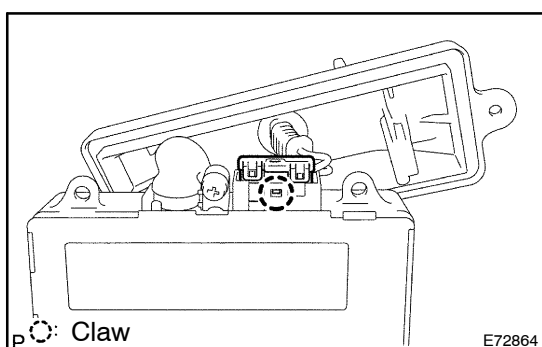

- (c) Release the claw fitting, disconnect the connector from the light control ECU and remove the headlamp cover No. 1.
- (d) Remove the headlamp gasket from the headlamp cover No. 1.

12. INSTALL FRONT BUMPER COVER (SEE PAGE 76-3)

13. INSTALL FRONT FENDER LINER LH (SEE PAGE 76-3)

14. INSTALL FRONT FENDER LINER RH (SEE PAGE 76-3)

15. INSTALL ENGINE UNDER COVER NO. 1 (SEE PAGE 76-3)

16. HEADLIGHT AIM ONLY (SEE PAGE 65-12)

17. ADJUST FOG LIGHT AIM (SEE PAGE 65-19)