



DISASSEMBLY

1. REMOVE DRAIN HOSES
2. REMOVE ASPIRATOR
3. REMOVE EVAPORATOR TEMPERATURE SENSOR
4. REMOVE TUBE AND ACCESSORY AND EXPANSION VALVE

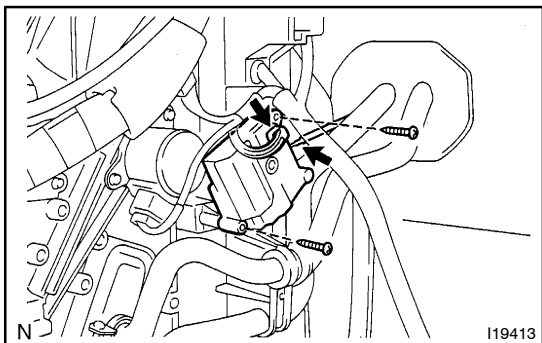


5. REMOVE WATER VALVE CONTROL SERVOMOTOR

- (a) Disconnect the connector.
- (b) Disconnect the control cable.
- (c) Remove the 2 screws and servomotor.

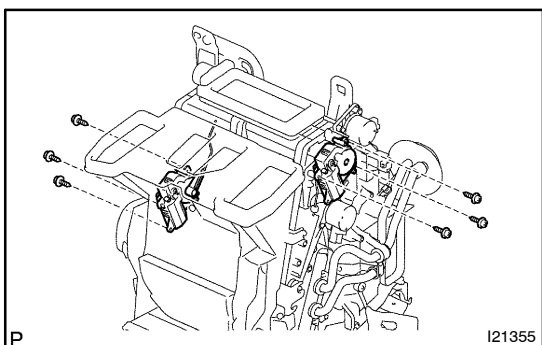


6. REMOVE COOL AIR BYPASS DAMPER CONTROL SERVOMOTORS

Remove the 6 screws and 2 servomotors.

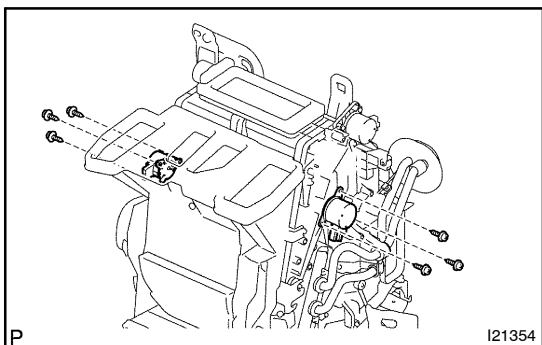



7. REMOVE AIR MIX SERVOMOTORS

Remove the 6 screws and 2 servomotors.

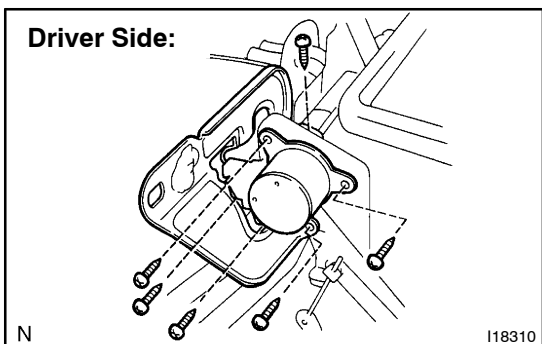


8. REMOVE AIR OUTLET SERVOMOTORS

- (a) Driver side:
Remove the 3 screws and bracket.
- (b) Remove the 6 screws and 2 servomotors.

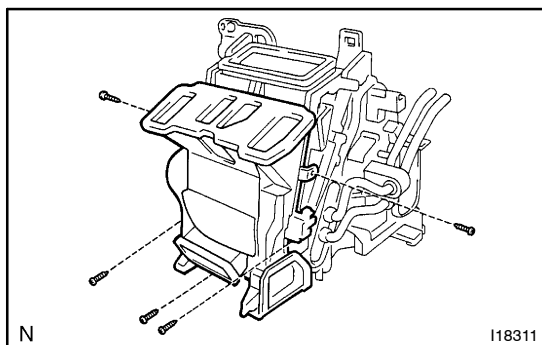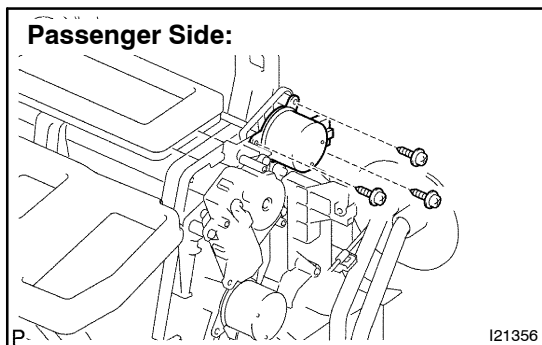

9. REMOVE DUCT

Remove the 5 screws and air vent duct.

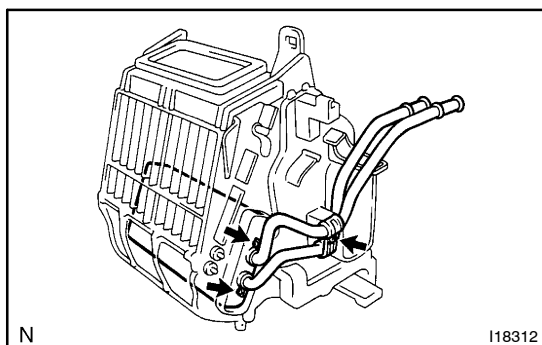


10. REMOVE HEATER RADIATOR

- Remove the screw and clamp.
- Remove the 2 screws, 2 clamps and heater radiator pipes.

HINT:

At the time of reassembly, please refer to the following item.
Do not reuse the 2 O-rings.

- Pull out the heater radiator.

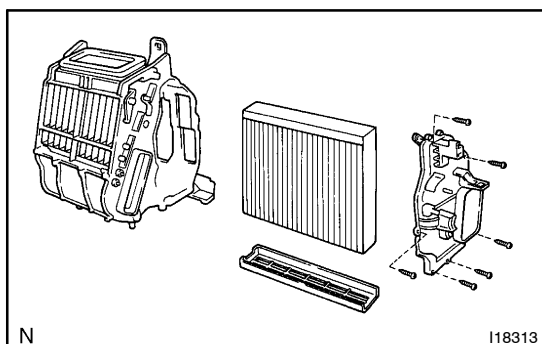

11. REMOVE EVAPORATOR


- Remove the 6 screws and evaporator cover.
- Pull out the evaporator.

HINT:

At the time of installation, please refer to the following item.
If evaporator is replaced, add compressor oil to the evaporator.

Add 40 cc (1.4 fl.oz.)

Compressor oil: ND-OIL 8 or equivalent

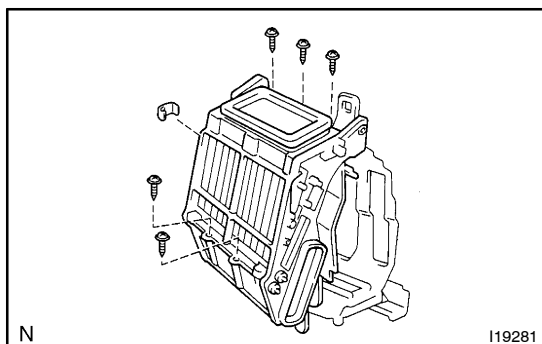

12. REMOVE HEATER CASE

Remove the 5 screws, clamp and heater case.