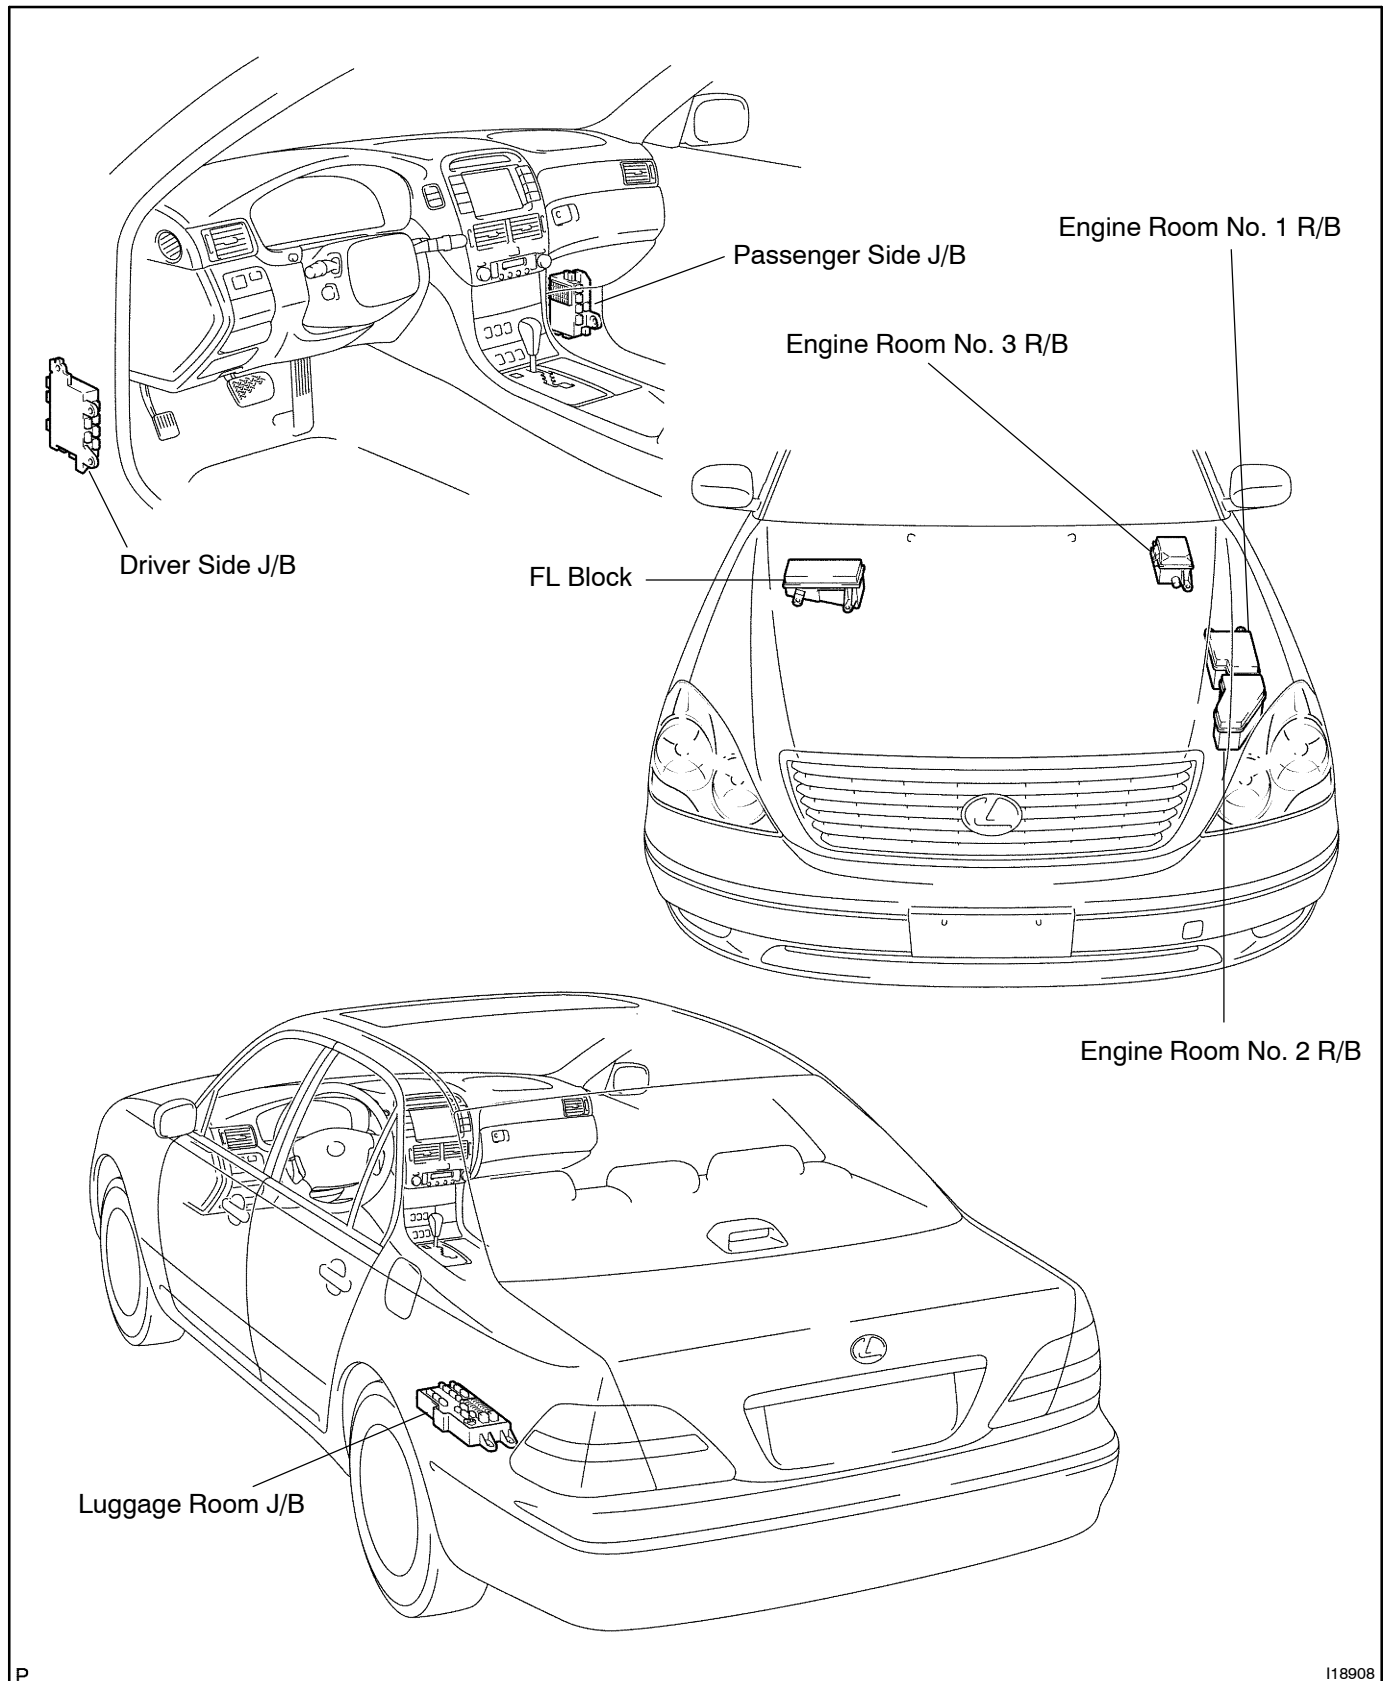
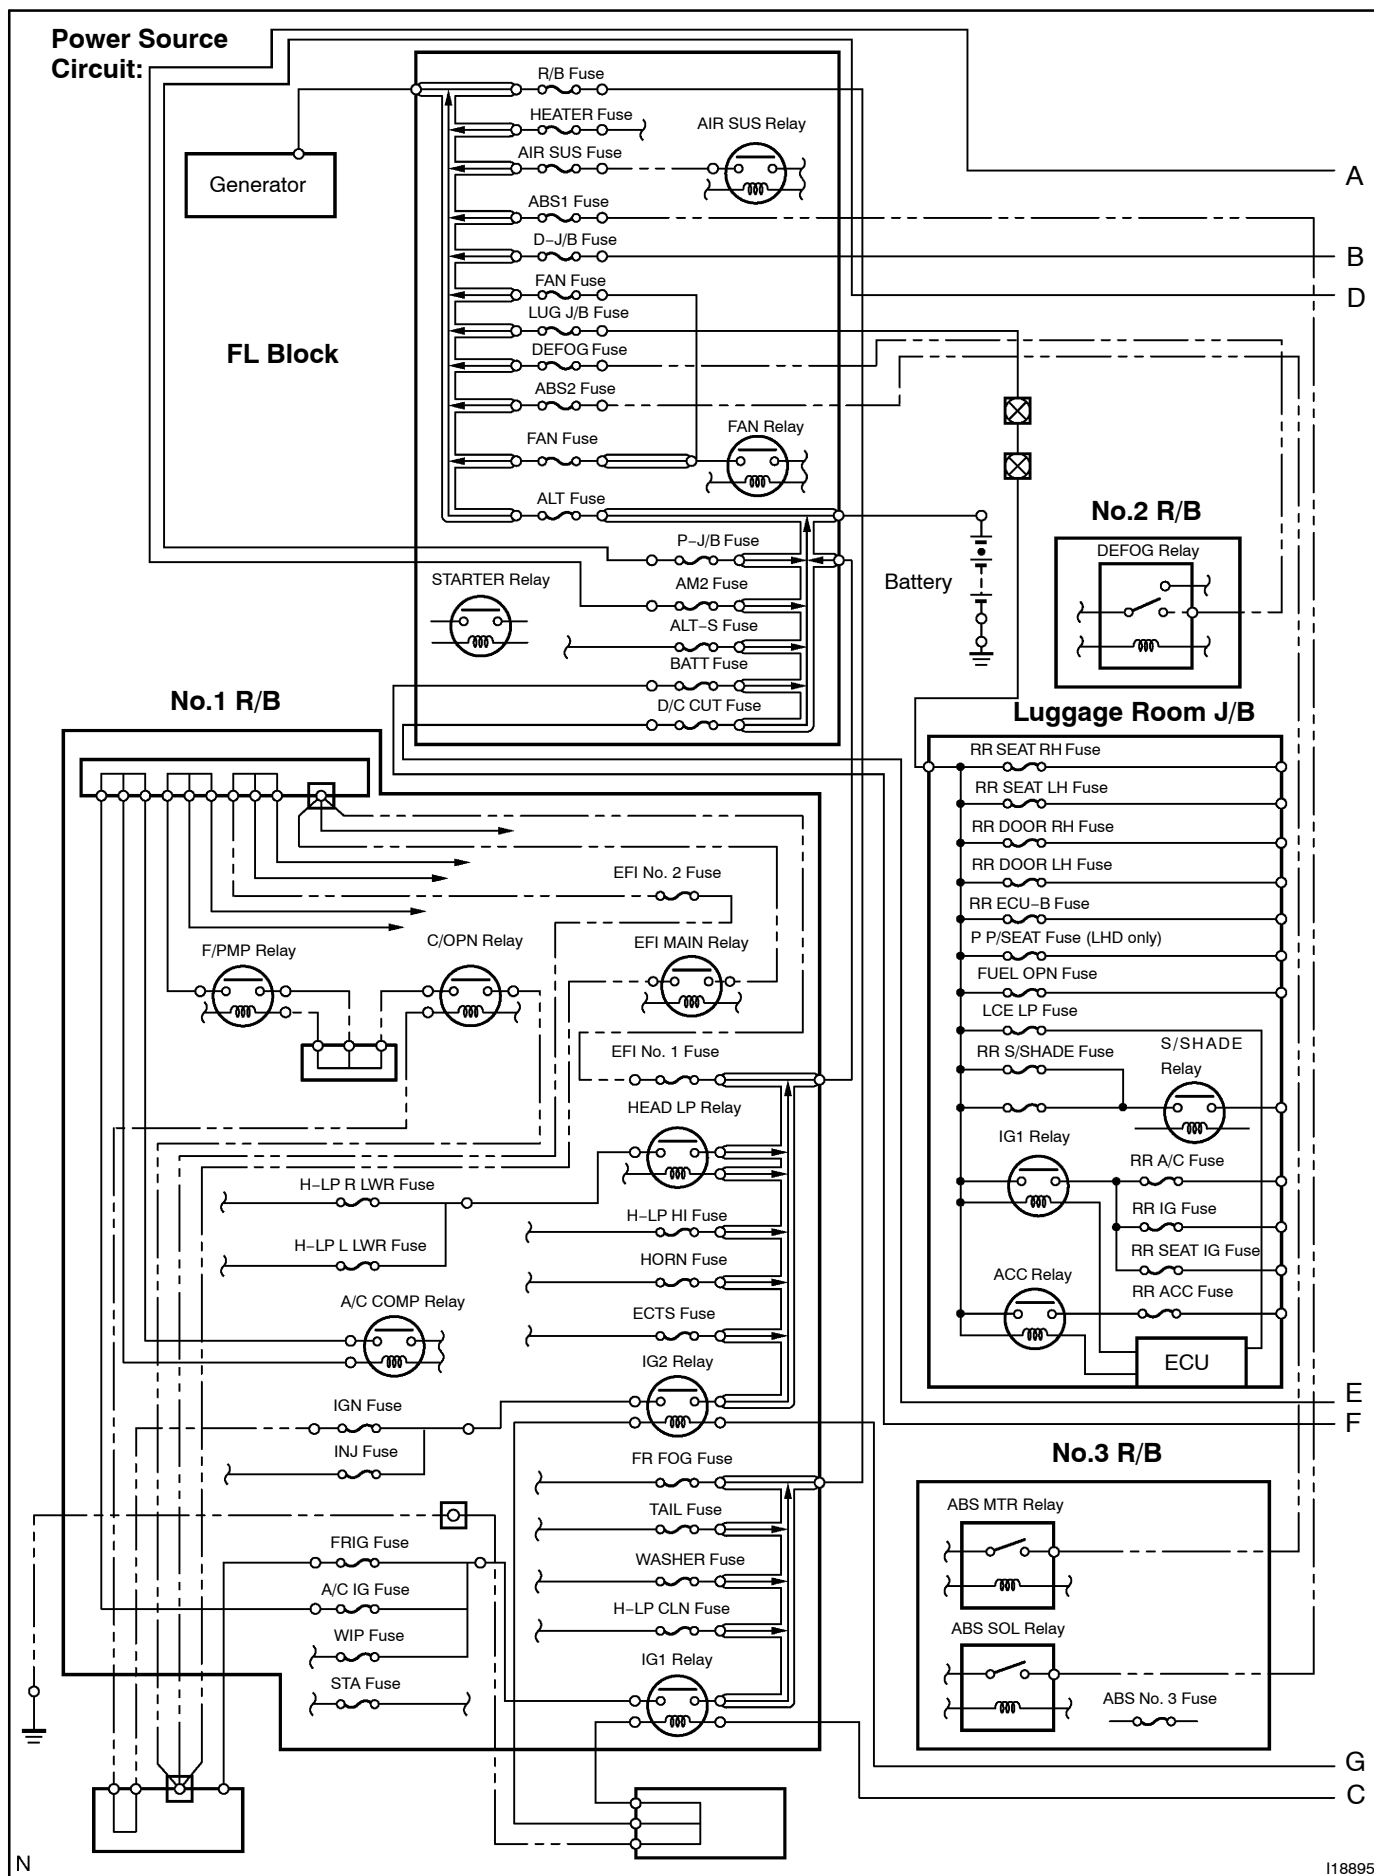
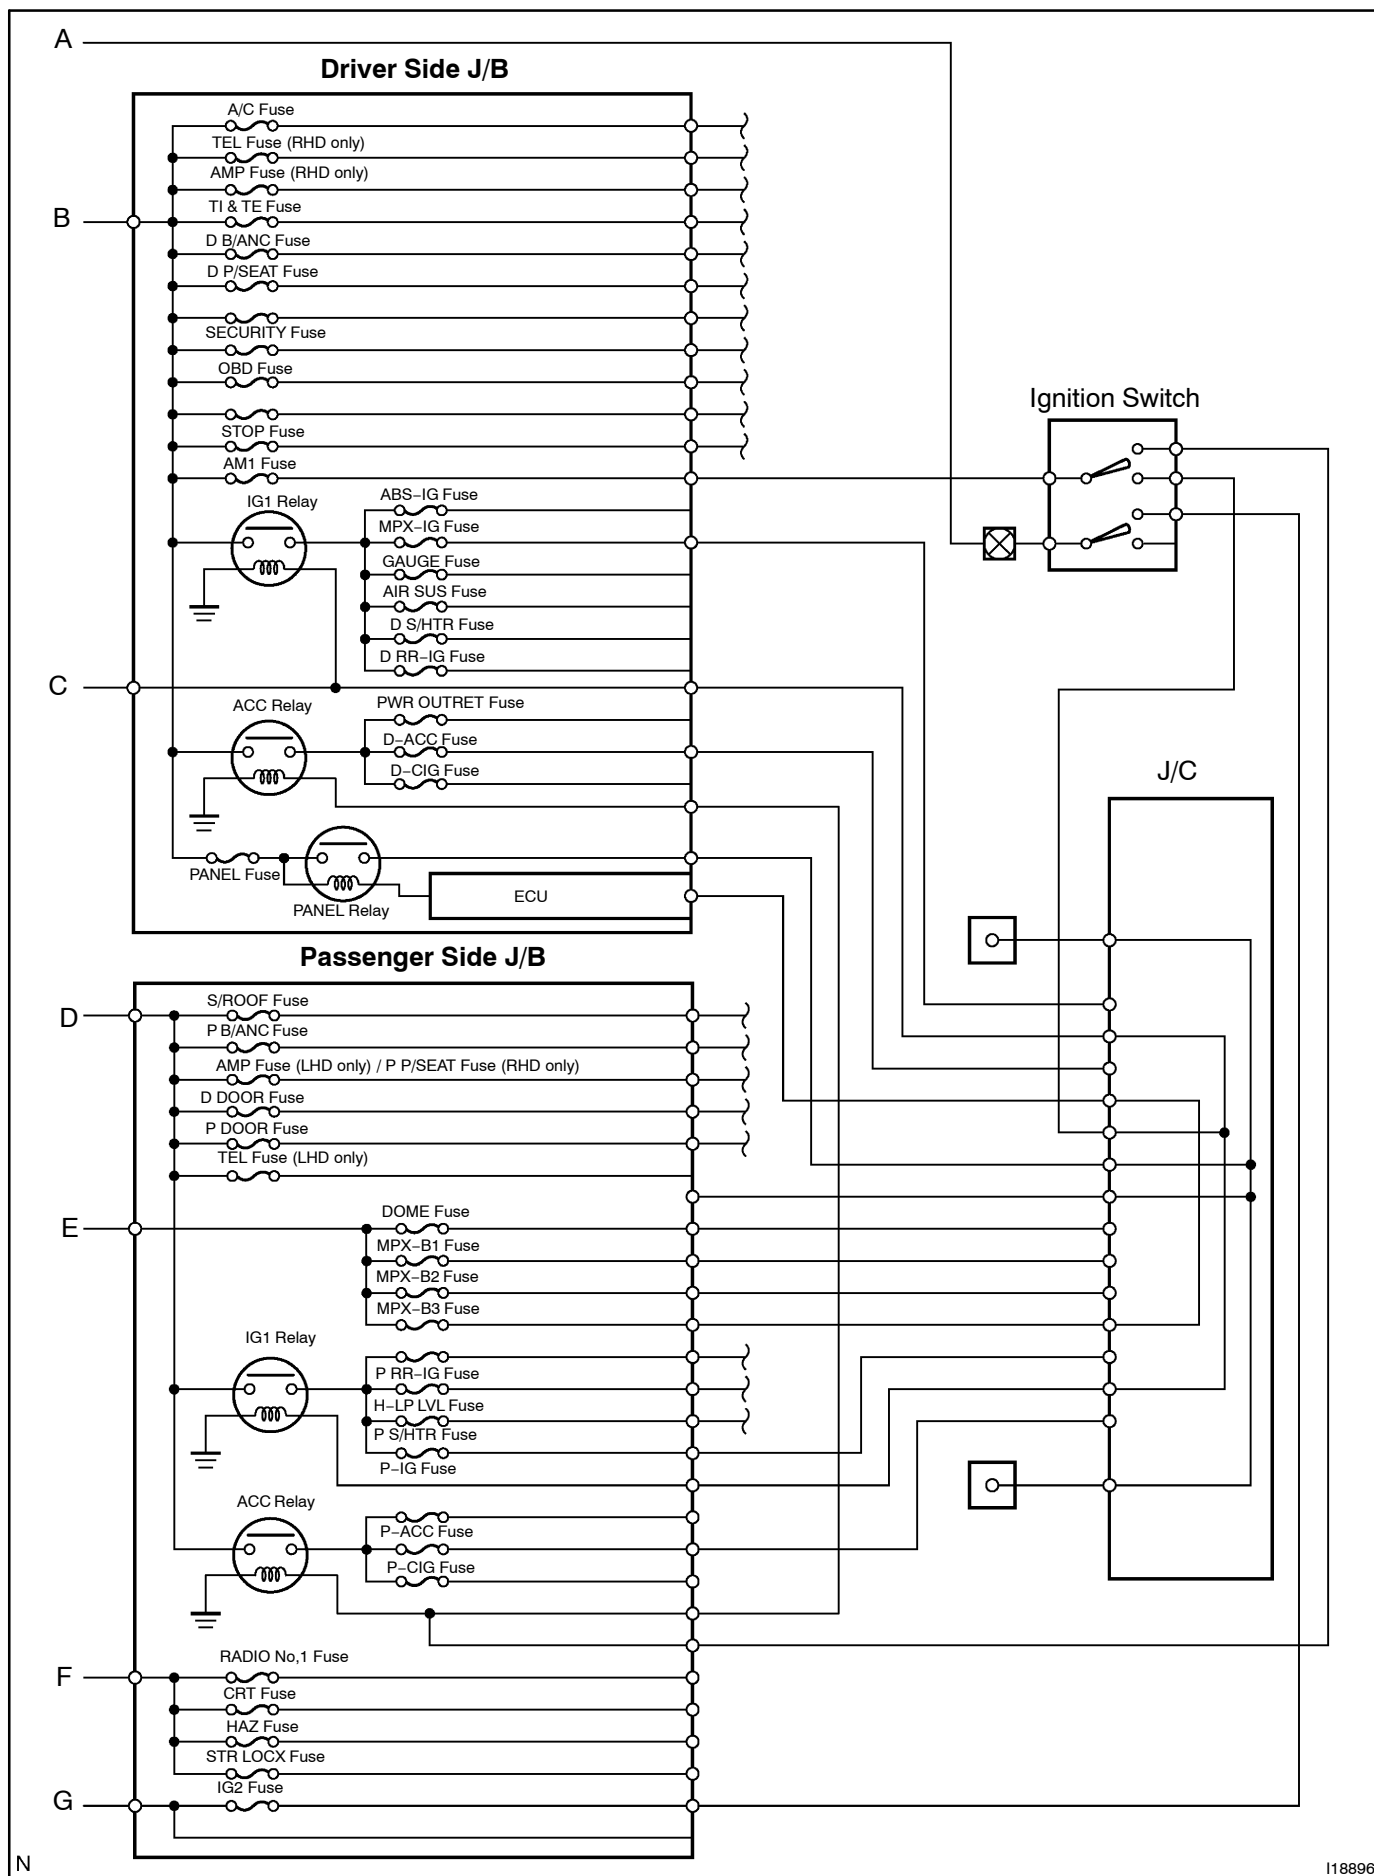


POWER SOURCE LOCATION

BE21F-01

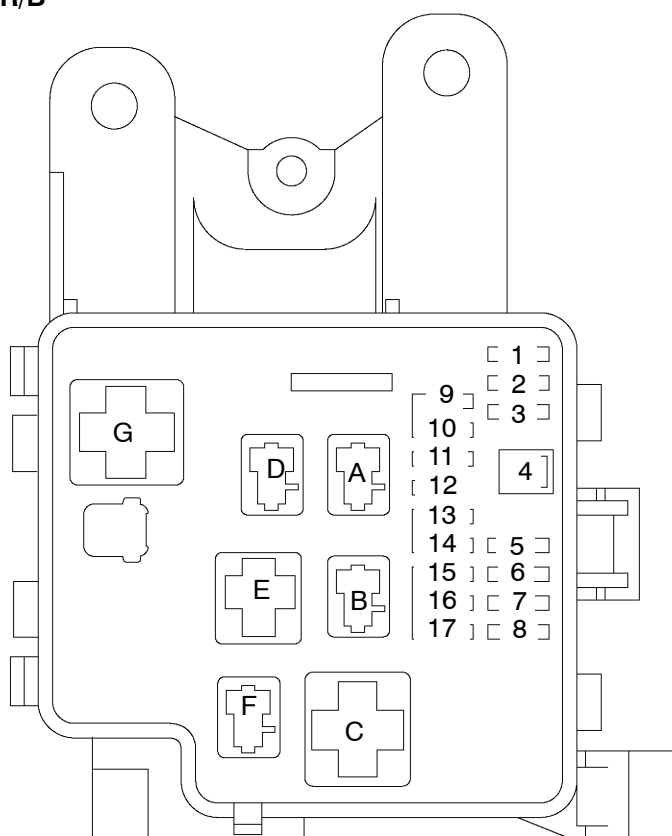




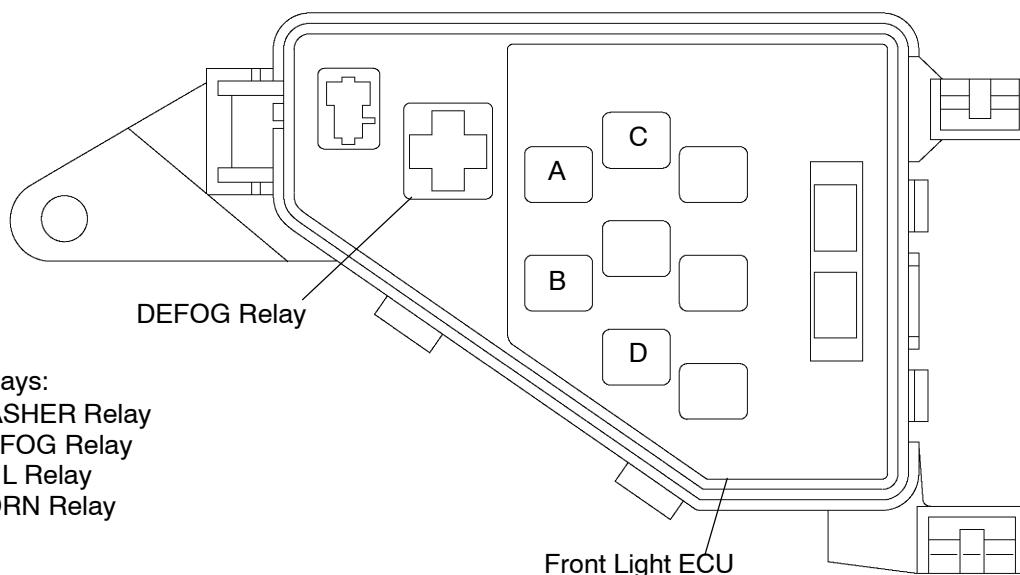


Engine Room No. 1 R/B**Fuses:**

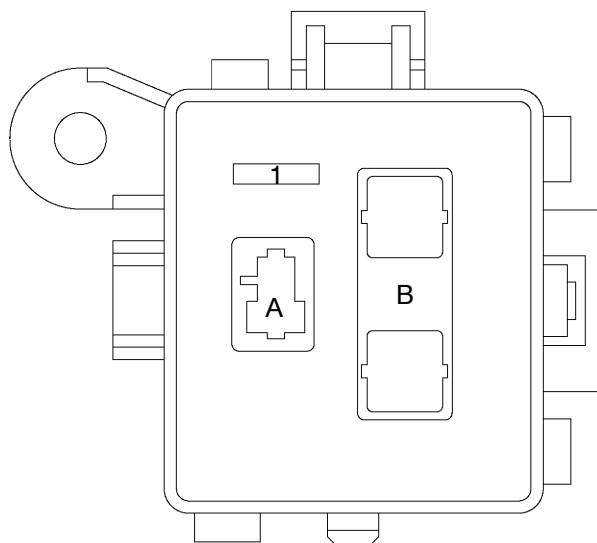
1. FR FOG Fuse
2. WASHER Fuse
3. TAIL Fuse
4. H-LP CLN Fuse
5. EFI No.1 Fuse
6. HORN Fuse
7. ETCS Fuse
8. H-LP Hi Fuse
9. H-LP R LWR Fuse
10. H-LP L LWR Fuse
11. EFI No.2 Fuse
12. STA Fuse
13. INJ Fuse
14. IGN Fuse
15. FRIG Fuse
16. A/C IG Fuse
17. WIP Fuse

**Relays:**

- A. A/C COMP Relay
- B. EFI MAIN Relay
- C. HEAD LP Relay
- D. C/OPN Relay
- E. F/PMP Relay
- F. IG2 Relay
- G. IG1 Relay

Engine Room No. 2 R/B**Relays:**

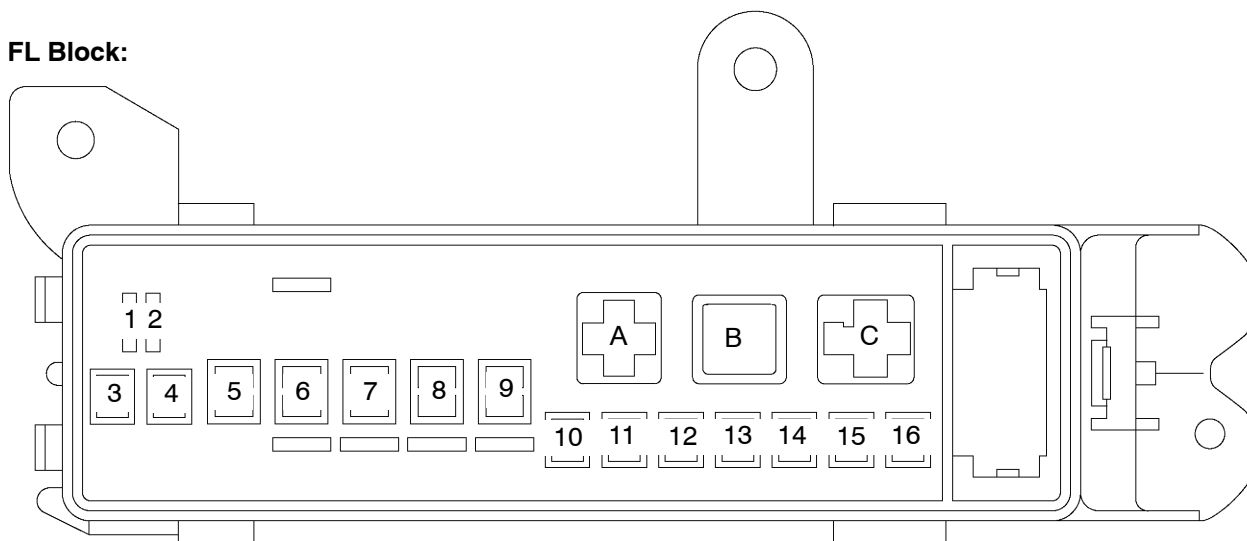
- A. WASHER Relay
- B. Fr. FOG Relay
- C. TAIL Relay
- D. HORN Relay

Engine Room R/B No. 3**Fuses:**

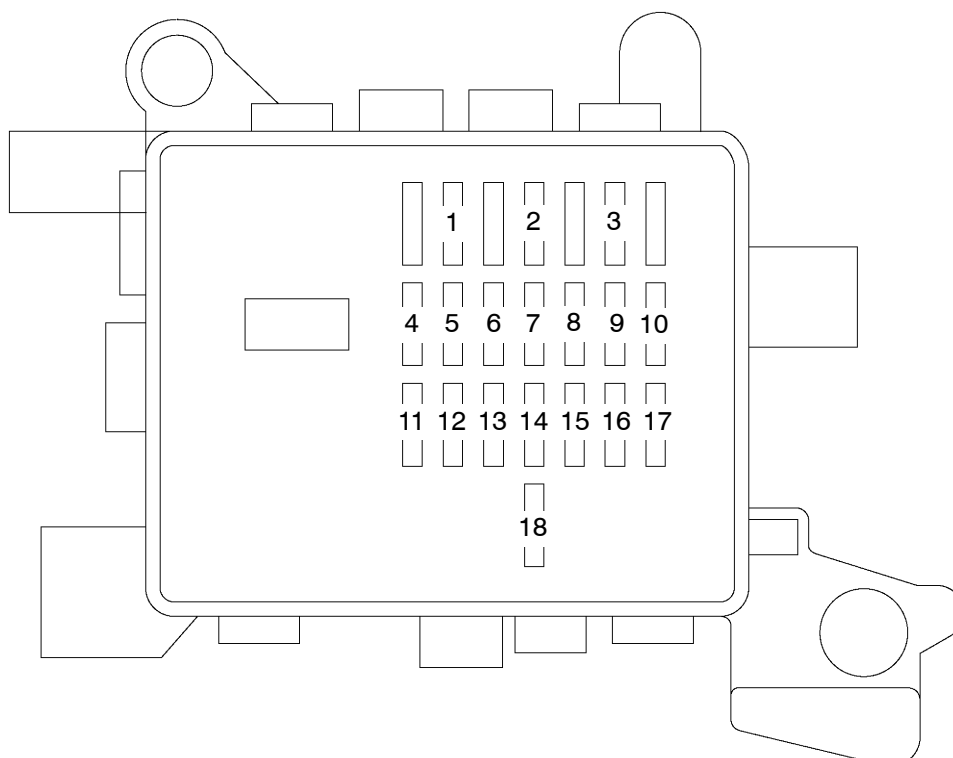
1. ABS3 Fuse

Relays:

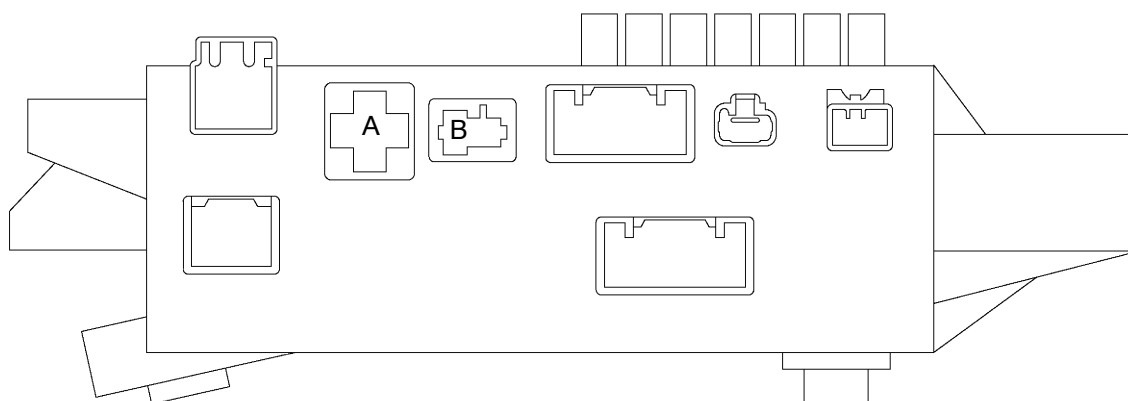
- A. ABS SOL Relay
B. ABS MTR Relay

FL Block:**Fuses:**

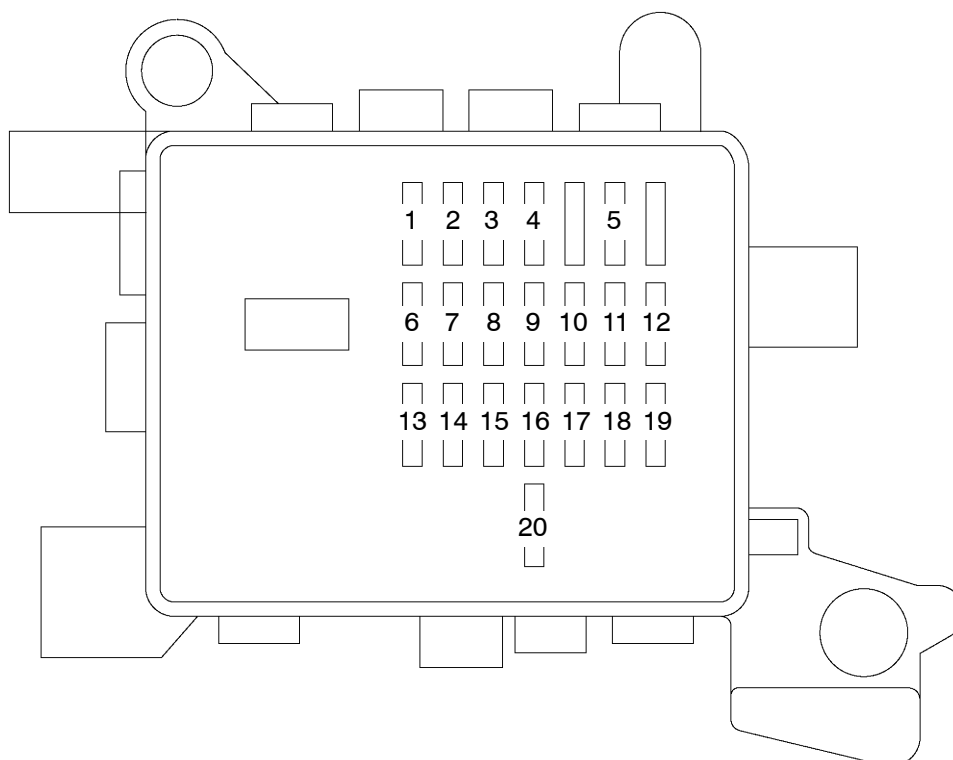
- | | | | |
|-----------------|---------------|------------------|------------------|
| 1. ALT-S Fuse | 5. P-J/B Fuse | 9. R/B Fuse | 13. ABS1 Fuse |
| 2. D/C CUT Fuse | 6. ALT Fuse | 10. FAN Fuse | 14. HEATER Fuse |
| 3. AM2 Fuse | 7. D-J/B Fuse | 11. AIR SUS Fuse | 15. ABS2 Fuse |
| 4. BATT Fuse | 8. FAN Fuse | 12. DEFOG Fuse | 16. LUG J/B Fuse |

Driver side J/B (LHD models):**Fuses:**

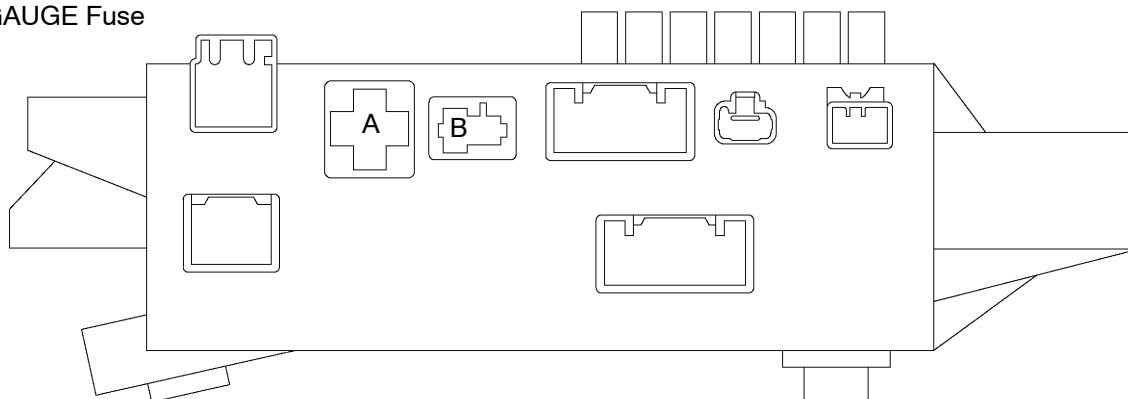
- | | | | |
|---------------|-----------------|-------------------|------------------|
| 1. DP/SEAT | 5. POWER OUTLET | 10. GAUGE Fuse | 15. ABS-IG Fuse |
| 2. PANEL Fuse | 6. D-ACC Fuse | 11. STOP Fuse | 16. AM1 Fuse |
| 3. TI&TE Fuse | 7. AIRSUS Fuse | 12. A/C Fuse | 17. OBD Fuse |
| 4. D-CIG Fuse | 8. D S/HTR Fuse | 13. SECURITY Fuse | 18. D RR-IG Fuse |
| | 9. MPX-IG Fuse | 14. D B/ANC Fuse | |

**Relays:**

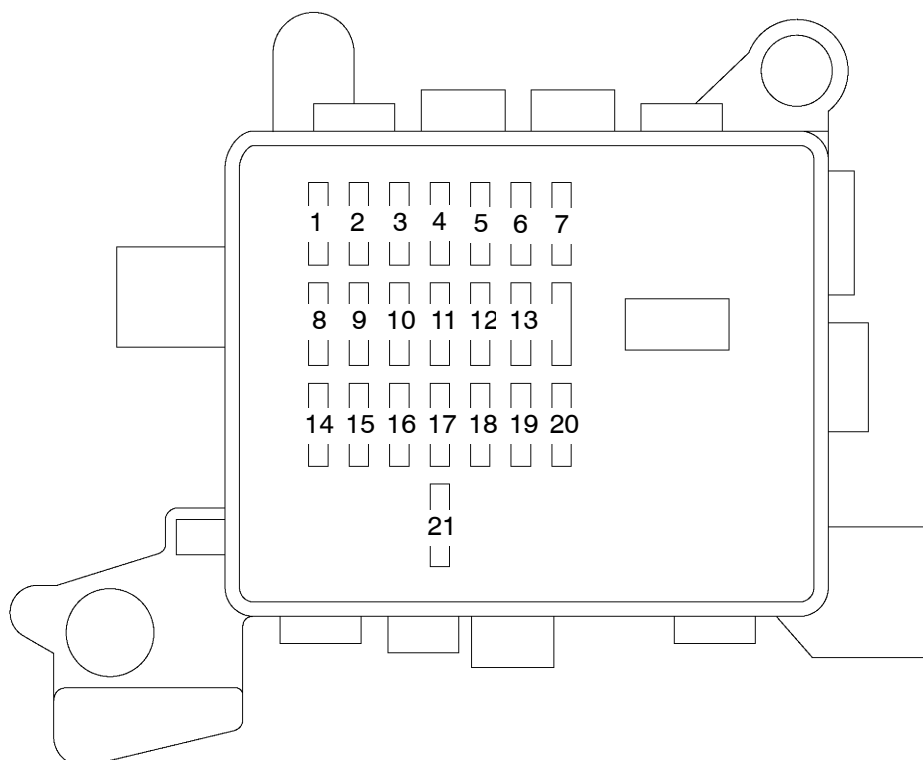
- A. D-IG1 Relay
- B. D-ACC Relay

Driver side J/B (RHD models):**Fuses:**

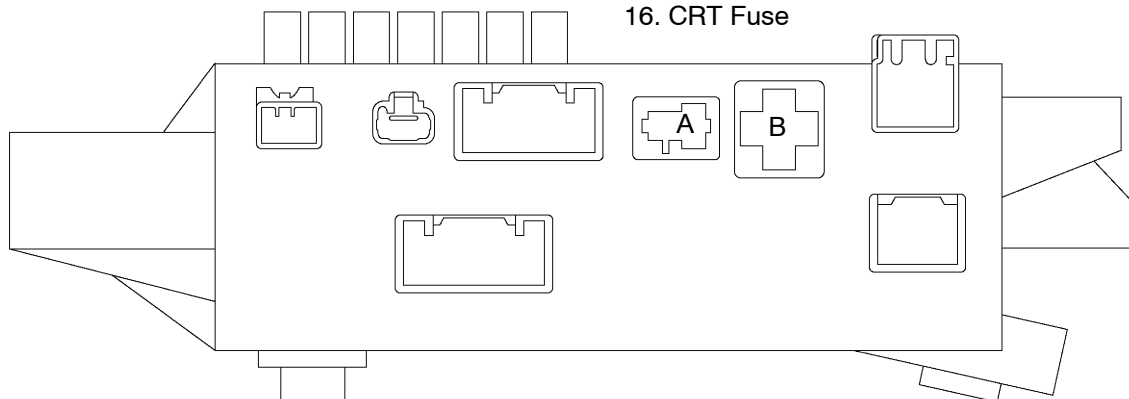
- | | | | |
|------------------|----------------------|------------------|-------------------|
| 1. TEL Fuse | 7. POWER OUTLET Fuse | 10. D-CIG Fuse | 15. SECURITY Fuse |
| 2. TI&TE Fuse | 8. D S/HTR Fuse | 11. OBD Fuse | 16. A/C Fuse |
| 3. AMP Fuse | 9. AIRSUS Fuse | 12. AM1 Fuse | 17. STOP Fuse |
| 4. PANEL Fuse | 10. D-ACC Fuse | 13. ABS-IG Fuse | 18. D RR-IG Fuse |
| 5. D-P/SEAT Fuse | 11. MPX-IG Fuse | 14. D B/ANC Fuse | |
| 6. GAUGE Fuse | | | |

**Relays:**

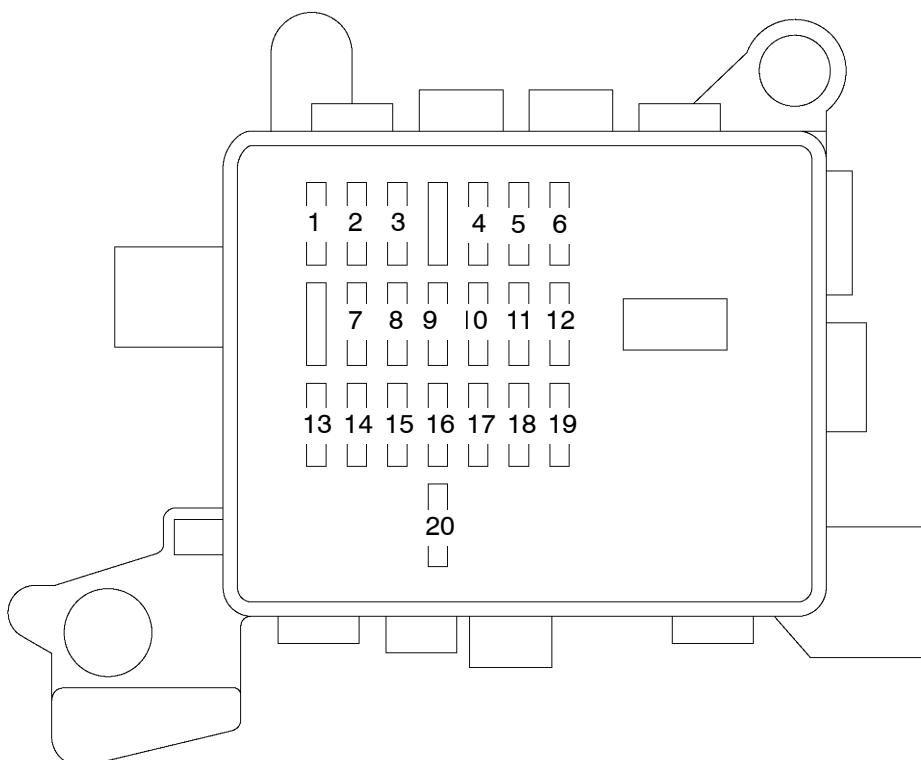
- A. D-IG1 Relay
- B. D-ACC Relay

Passenger side J/B (LHD models):**Fuses:**

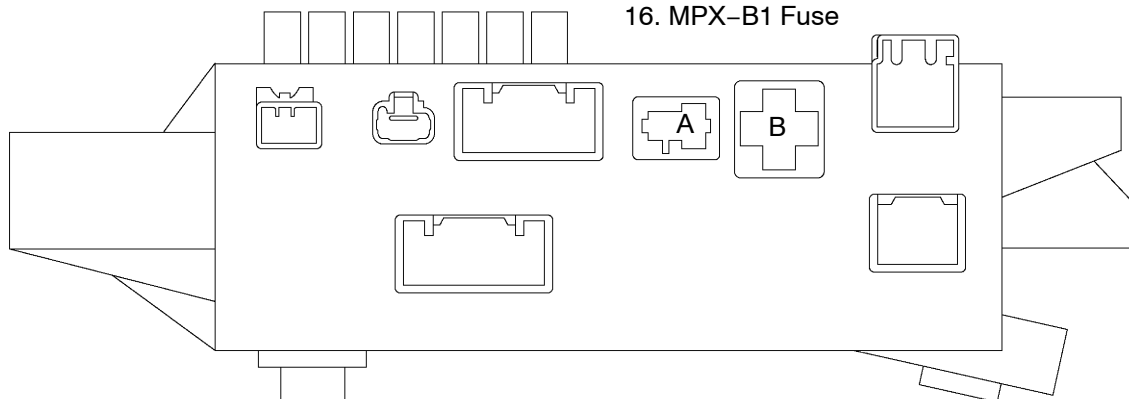
- | | | | |
|--------------------|------------------|-------------------|-----------------|
| 1. RADIO No.1 Fuse | 6. AMP FUSE | 11. P S/HTR Fuse | 17. MPX-B1 Fuse |
| 2. S/ROOF Fuse | 7. D DOOR Fuse | 12. P-ACC Fuse | 18. MPX-B3 Fuse |
| 3. P DOOR Fuse | 8. P RR-IG Fuse | 13. P-CIG Fuse | 19. DOME Fuse |
| 4. TEL Fuse | 9. H-LP LVL Fuse | 14. HAZ Fuse | 20. MPX-B2 Fuse |
| 5. P B/ANC Fuse | 10. P-IG Fuse | 15. STR LOCK Fuse | 21. IG2 Fuse |
| | | 16. CRT Fuse | |

**Relays:**

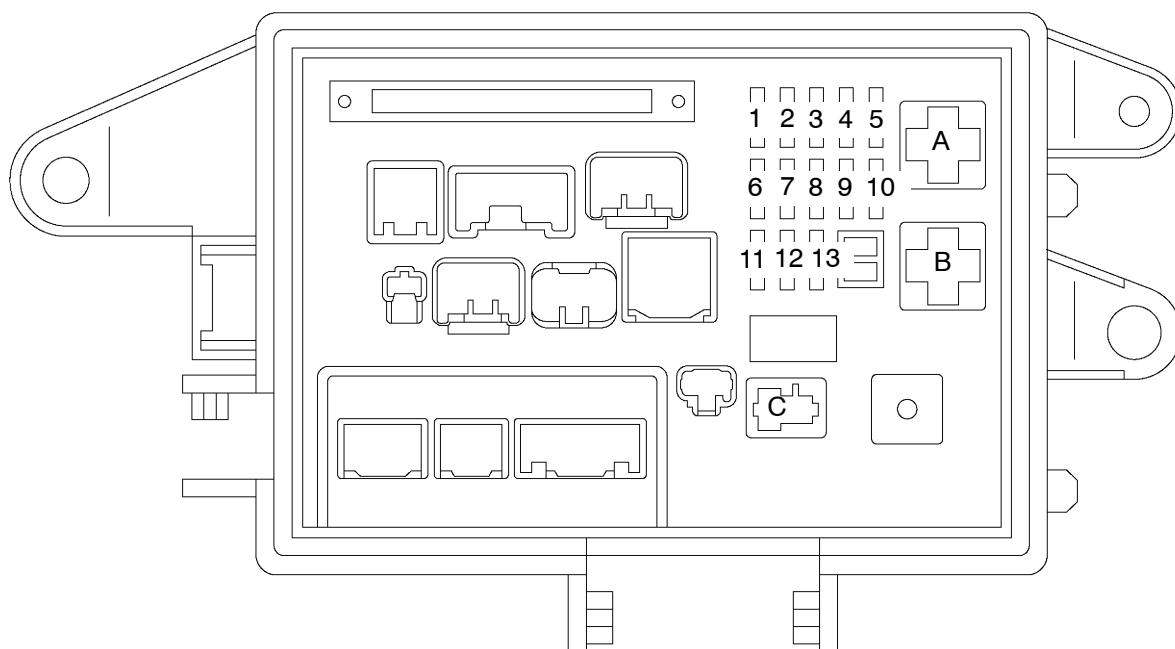
- A. P-ACC Relay
- B. P-IG1 Relay

Passenger side J/B (RHD models):**Fuses:**

- | | | | |
|------------------|--------------------|------------------|-------------------|
| 1. D DOOR Fuse | 6. RADIO No,1 FUSE | 11. H-LP Fuse | 17. CRT Fuse |
| 2. P P/SEAT Fuse | 7. P-CIG Fuse | 12. P RR-IG Fuse | 18. STR LOCK Fuse |
| 3. P B/ANC Fuse | 8. P-ACC Fuse | 13. MPX-B2Fuse | 19. HAZ Fuse |
| 4. P DOOR Fuse | 9. PS/HTR Fuse | 14. DOME Fuse | 20. IG2 Fuse |
| 5. S/ROOF Fuse | 10. P-IG Fuse | 15. MPX-B3 Fuse | |
| | | 16. MPX-B1 Fuse | |

**Relays:**

- A. P-ACC Relay
B. P-IG1 Relay

Luggage Room J/B**Fuses:**

- | | |
|--------------------|---------------------|
| 1. FUEL OPEN Fuse | 8. RR S/SHADE FUSE |
| 2. RR DOOR LH Fuse | 9. LCE LP Fuse |
| 3. P P/SEAT Fuse * | 10. RR DOOR RH Fuse |
| 4. RR SEAT LH Fuse | 11. RR IG Fuse |
| 5. RR SEAT RH Fuse | 12. RR ACC Fuse |
| 6. RR A/C Fuse | 13. RR ECU-B Fuse |
| 7. RR S/HTR Fuse | |

Relays:

- | |
|---------------------|
| A. RR S/SHADE Relay |
| B. IG1 Relay |
| C. ACC Relay |

*: LHD model only