


Neutral Position Switch Circuit (M–OBD only)

CIRCUIT DESCRIPTION

The neutral start switch detects the shift lever range and sends signals to the Engine & ECT ECU. The Engine & ECT ECU receives signals (P, R, N, D, 4, 3, 2 and L) from the neutral start switch.

WIRING DIAGRAM

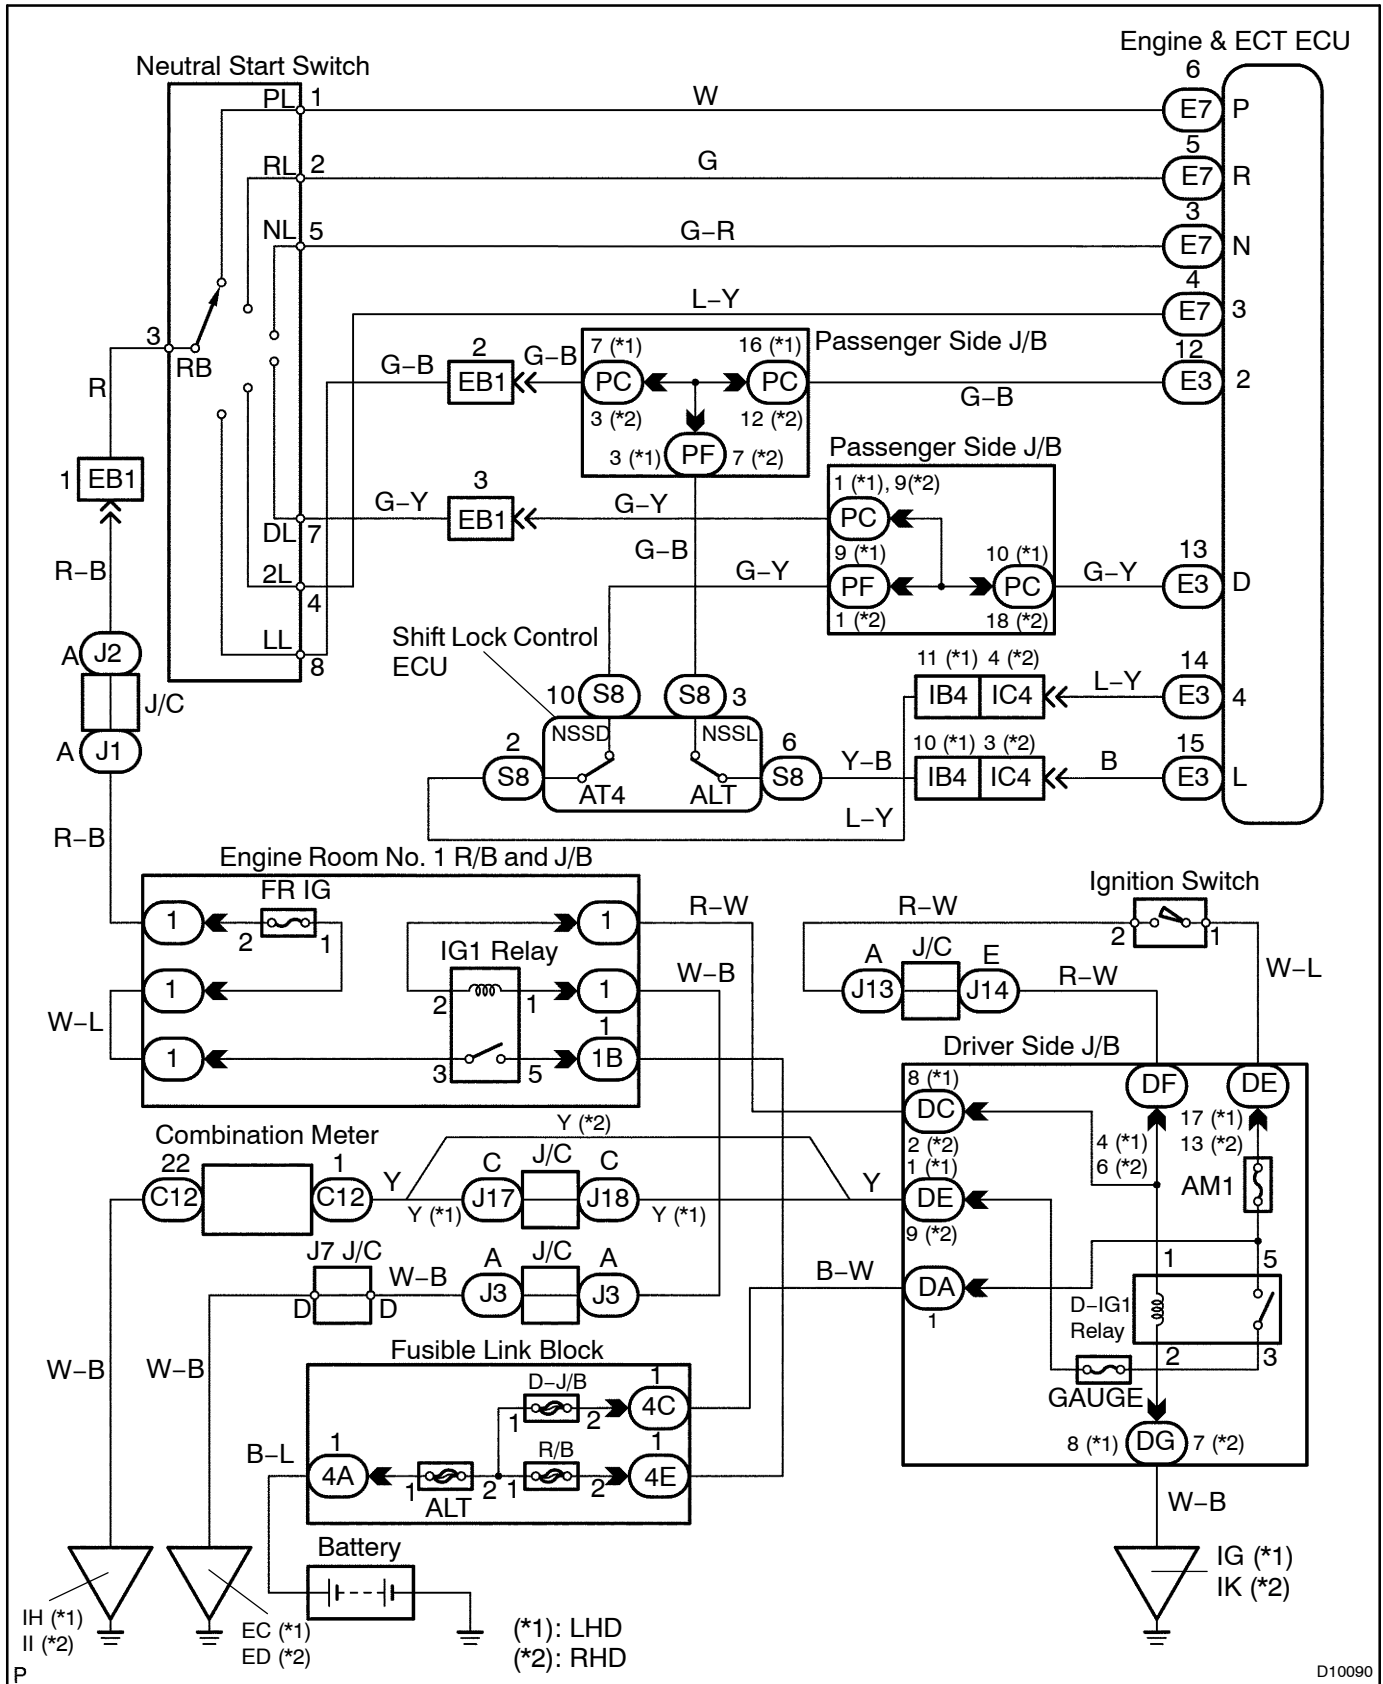

D10090

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1 Read PNP, REVERSE, DRIVE, 4TH, 3RD, 2ND and LOW signals.

PREPARATION:

- (a) Remove the DLC3 cover.
- (b) Connect a hand-held tester to the DLC3.
- (c) Turn the ignition switch ON and hand-held tester main switch ON.

CHECK:

Shift lever into the P, R, N, D, 4, 3, 2 and L ranges, and read the PNP, REVERSE, DRIVE, 4TH, 3RD, 2ND and LOW signals on the hand-held tester.

OK:

Shift Range	Signal
P/N	PNP: OFF → ON
R	REVERSE: OFF → ON
D	DRIVE: OFF → ON
4	4TH: OFF → ON
3	3RD: OFF → ON
2	2ND: OFF → ON
L	LOW: OFF → ON


OK

Check and replace the Engine & ECT ECU
(See page N-35).

NG

Go to step 3.

2 Measure voltage between each terminals of P, R, N, D, 4, 3, 2, and L of Engine & ECT ECU and body ground.

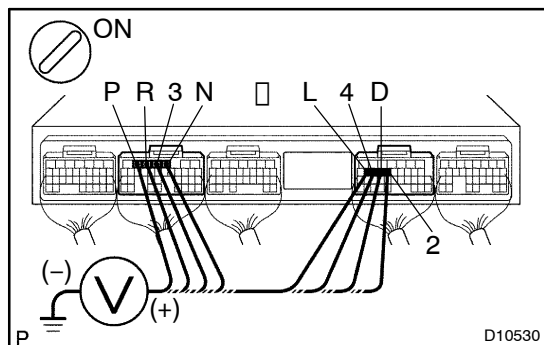

PREPARATION:

Turn the Ignition switch ON.

CHECK:

Measure voltage between each terminals P, R, N, D, 4, 3, 2 and L of Engine & ECT ECU and body ground when the shift lever is shifted to the following positions.

OK:

Tester Connection	Condition	Specified Condition
P – Body ground	Shift lever range: P	Battery voltage
R – Body ground	Shift lever range: R	Battery voltage*
N – Body ground	Shift lever range: N	Battery voltage
D – Body ground	Shift lever range: D Transmission control SW (for D and 4) OFF	Battery voltage
4 – Body ground	Shift lever range: 4 Transmission control SW (for D and 4) ON	Battery voltage
3 – Body ground	Shift lever range: 3	Battery voltage
2 – Body ground	Shift lever range: 2 Transmission control SW (for 2 and L) OFF	Battery voltage
L – Body ground	Shift lever range: L Transmission control SW (for 2 and L) ON	Battery voltage

HINT:


*: The voltage will drop slightly due to lighting up of the back up light.

OK

Check and replace the Engine & ECT ECU (See page N-35).

NG

3 Check neutral start switch.

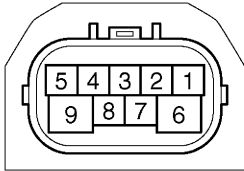

N

F13412

PREPARATION:

- (a) Jack up the vehicle.
- (b) Remove the neutral start switch connector.

CHECK:

Check continuity between each terminal shown below when the shift lever is moved to each range.

OK:

Shift range	Terminal No. to continuity	Terminal No. to continuity
P	1 – 3	6 – 9
R	2 – 3	–
N	3 – 5	6 – 9
D, 4	3 – 7	–
3	3 – 4	–
2, L	3 – 8	–

NG

Replace the neutral start switch.

OK

Repair or replace harness and connector between battery and neutral start switch, neutral start switch and Engine & ECT ECU (See page IN-35).