

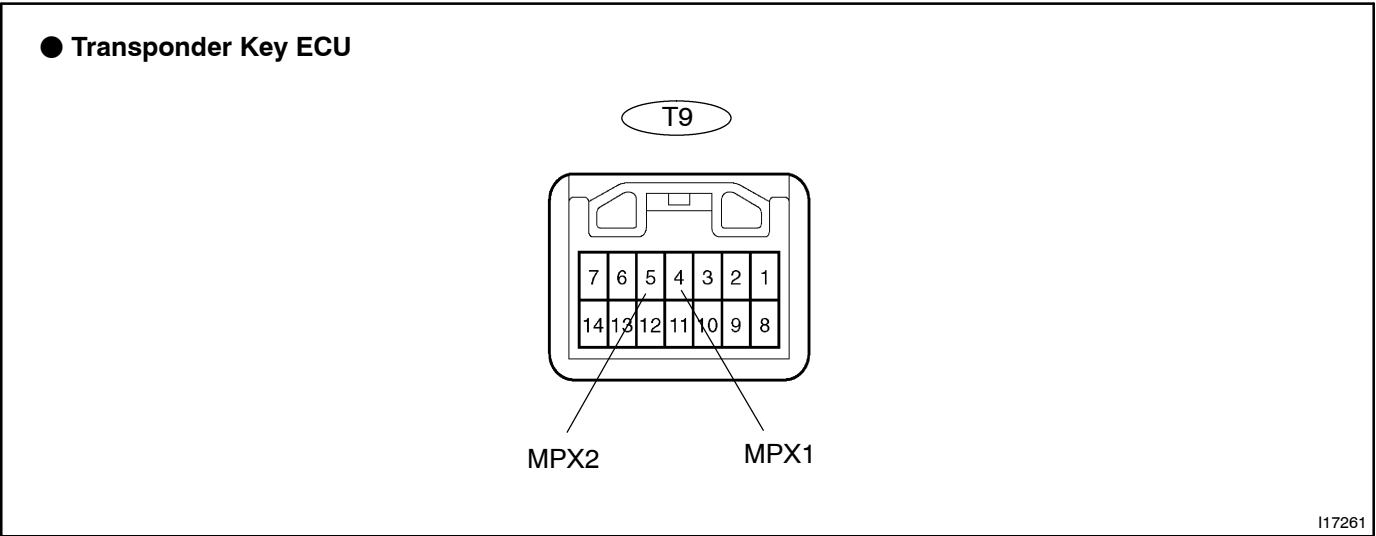
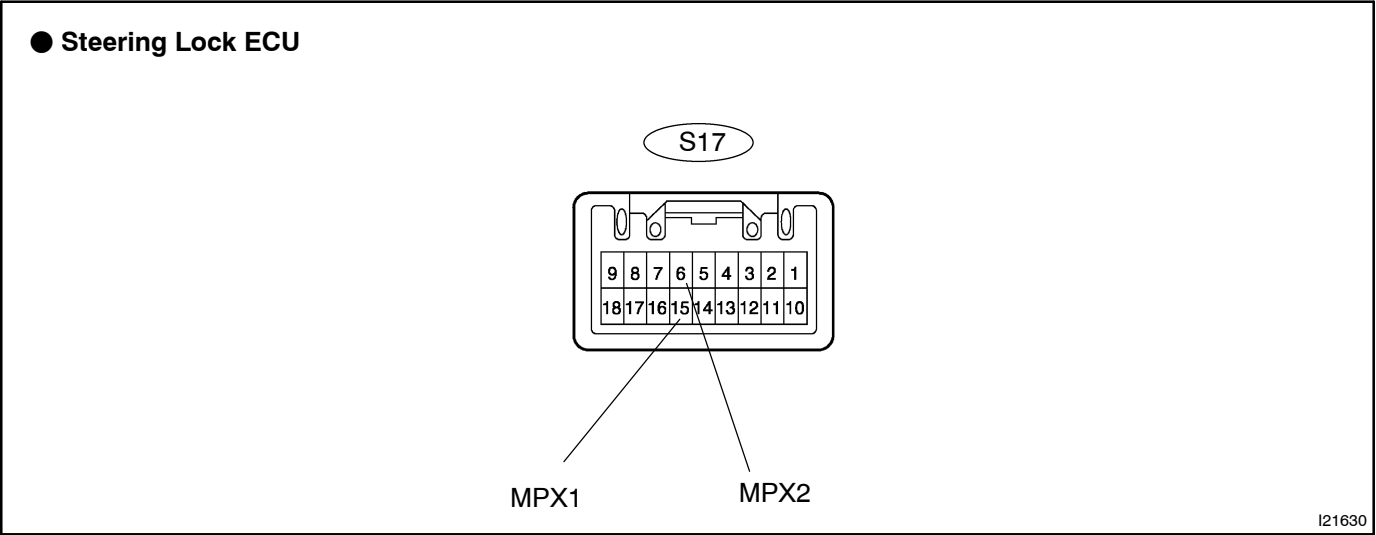


TERMINALS OF ECU

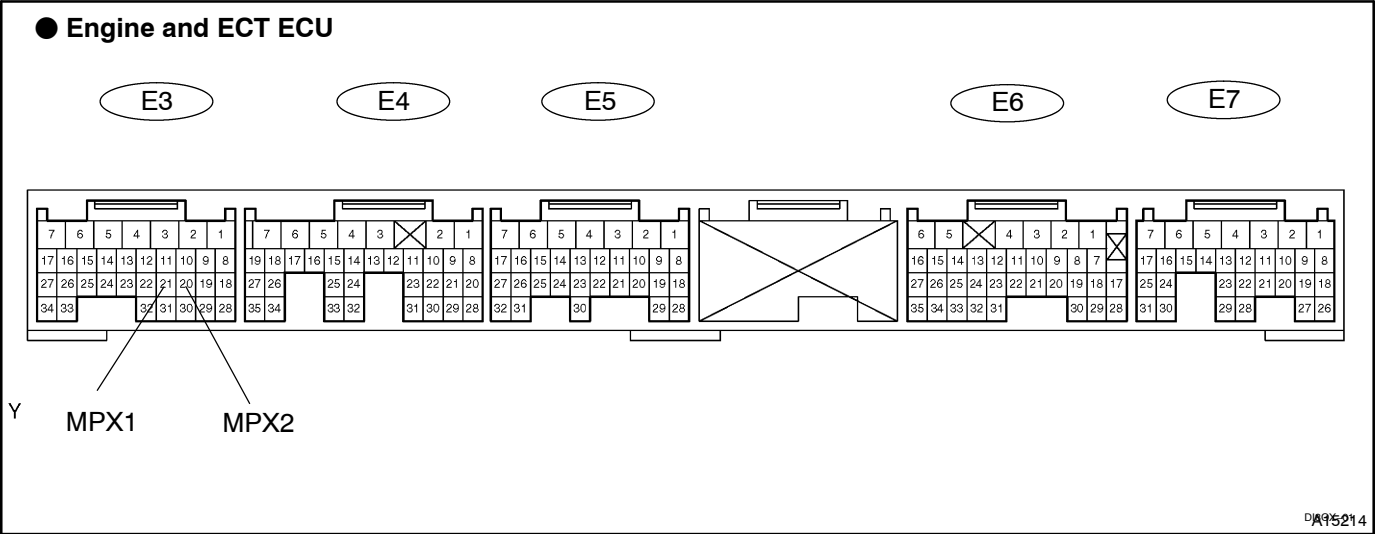

● Combination Meter

C12

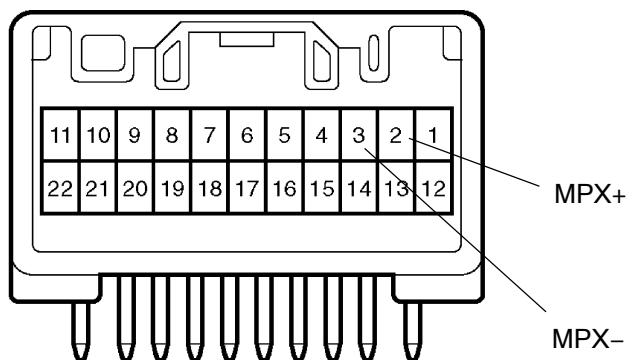


N

I18948

● Moon Roof Control ECU


M4

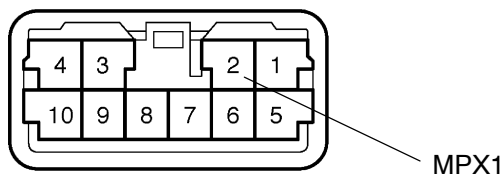





I04611

● Driver side J/B ECU

D2

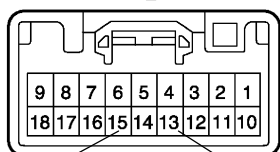


D4

 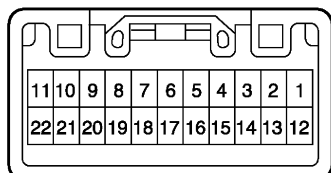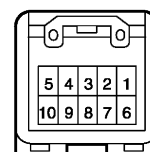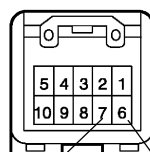

T

I20436


● Passenger Side J/B ECU

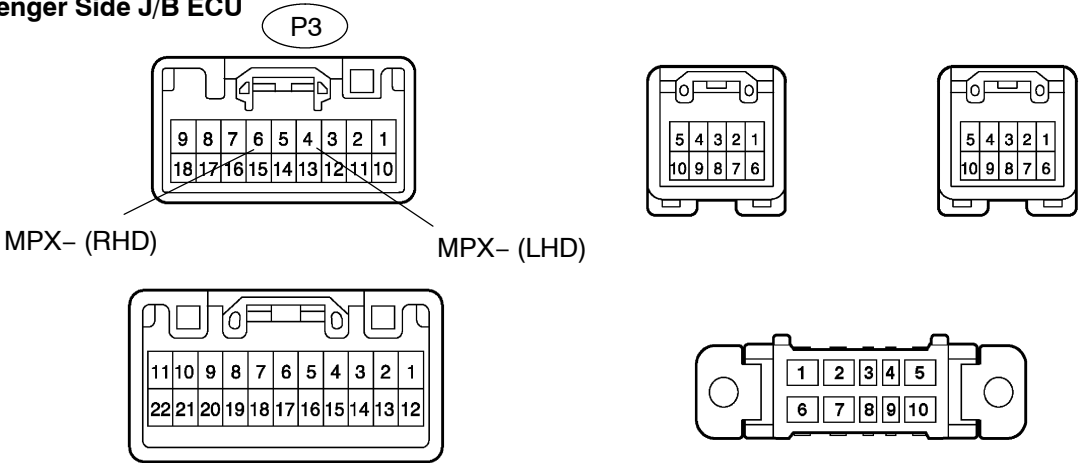

T

I20436


● Luggage Room J/B ECU

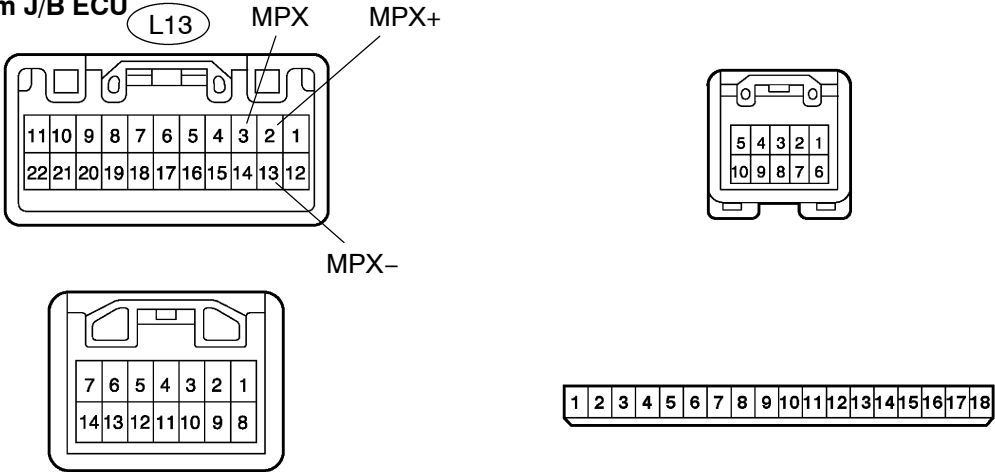

T

I20437


● Front Light ECU

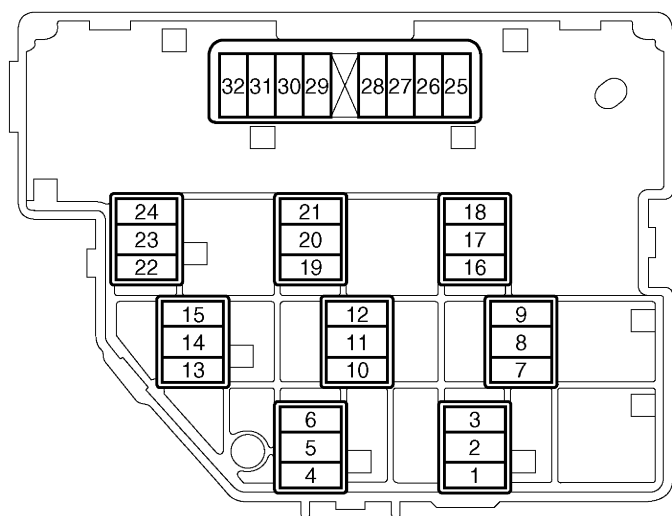

N

I20200


● Driver Door ECU

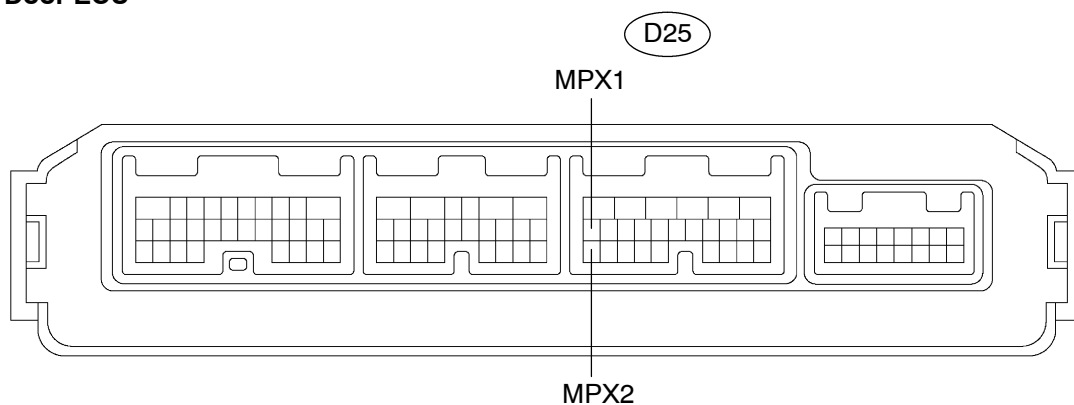

N

I19947


● Front Passenger Door ECU

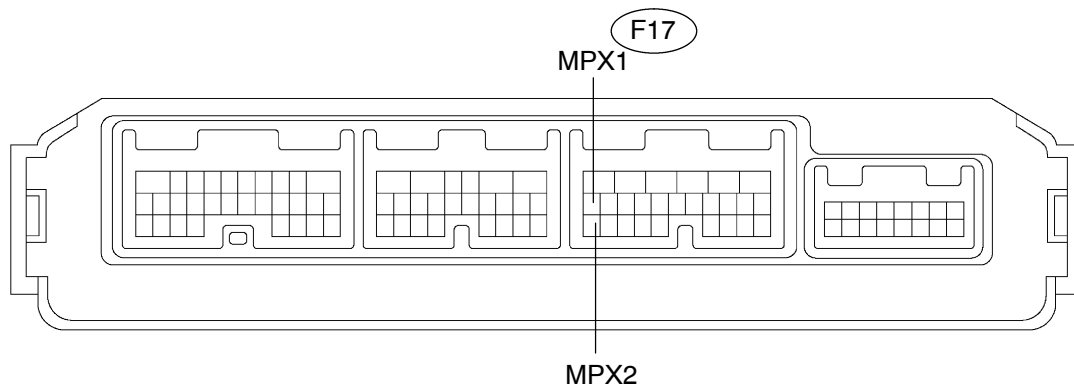

N

I19947


● Rear Door LH ECU

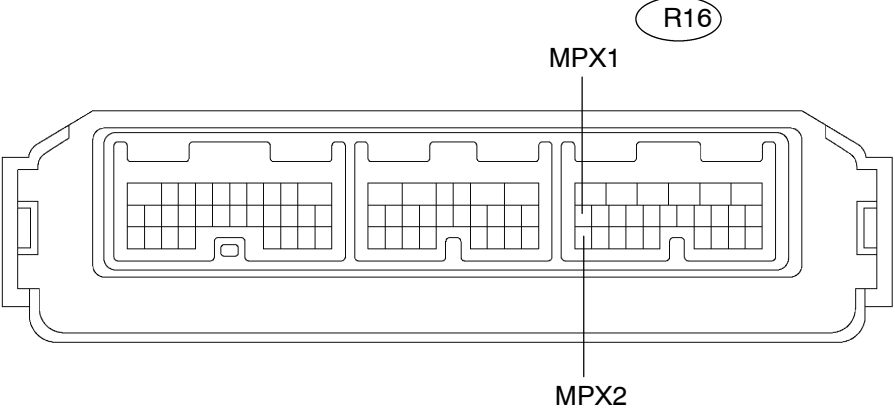

N

I20097


● Rear Door RH ECU

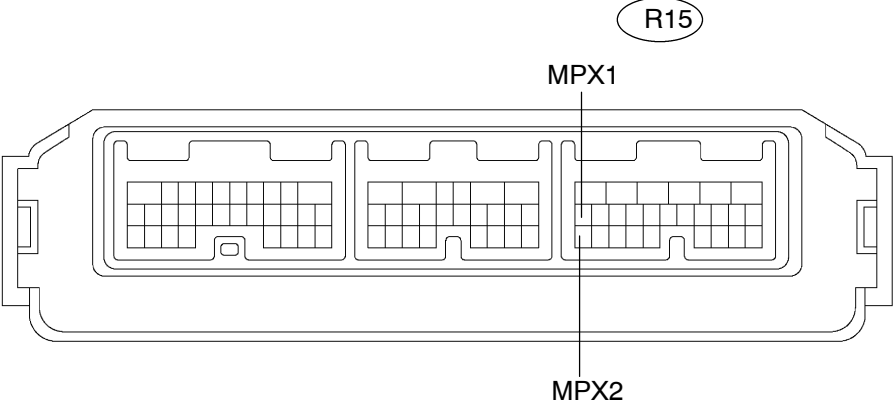

N

I20097


● Theft Deterrent ECU

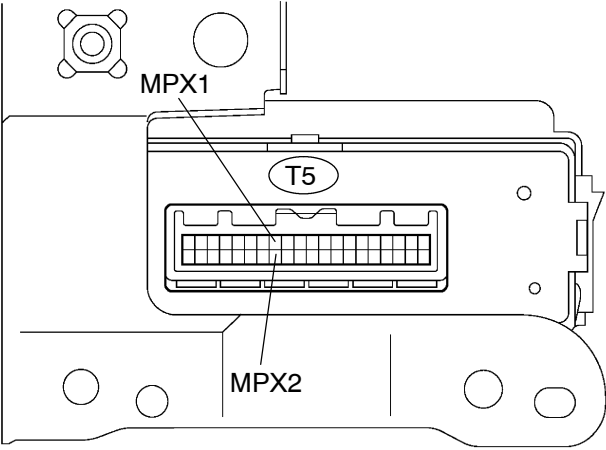

T


I20093

● Driver Seat ECU

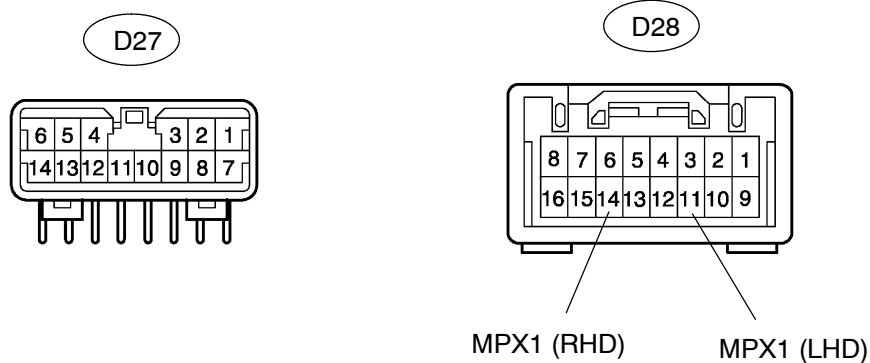


I20417

● Rear RH Seat ECU

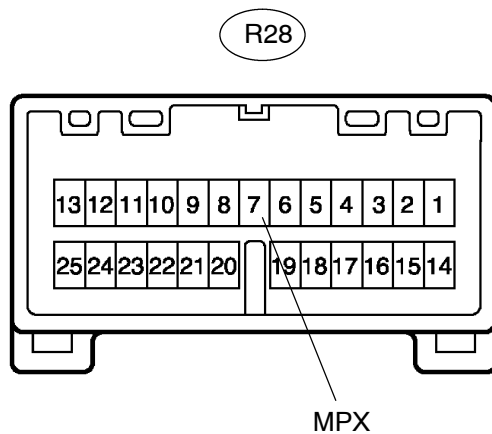


I20398

● Rear LH Seat ECU

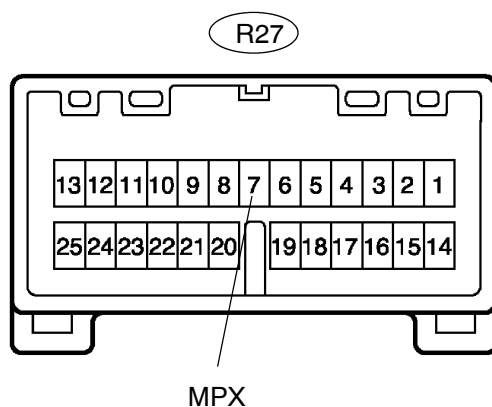


I20398

● Combination Switch

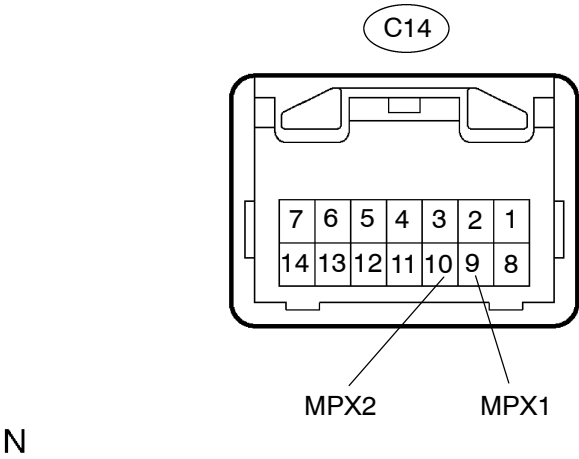


I13684

● Steering Pad Switch

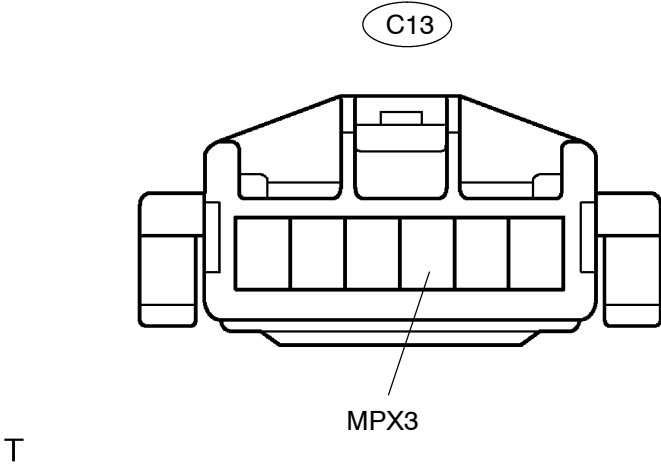


I20412

● Clearance Sonar ECU

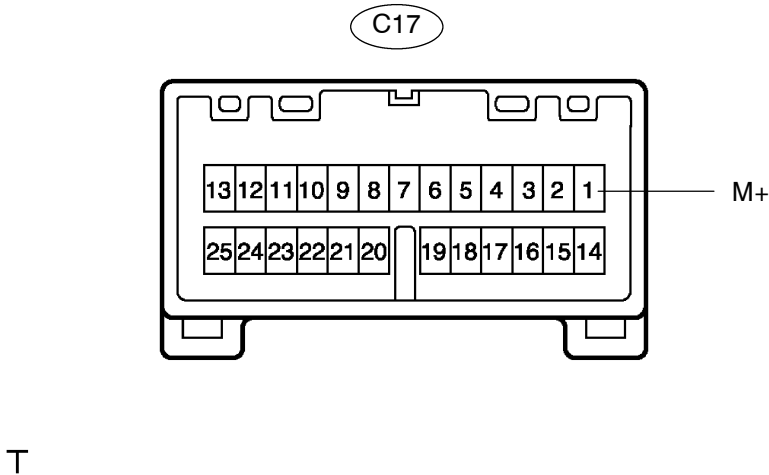

I20398


● Rain Sensor

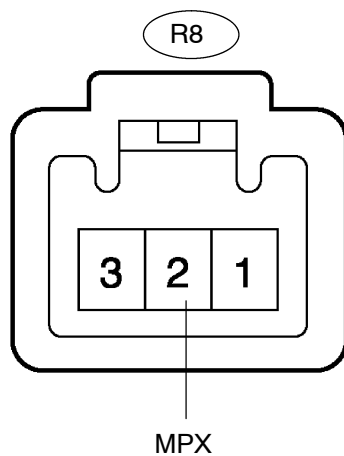

T

I20409


● Rear Seat Control Switch

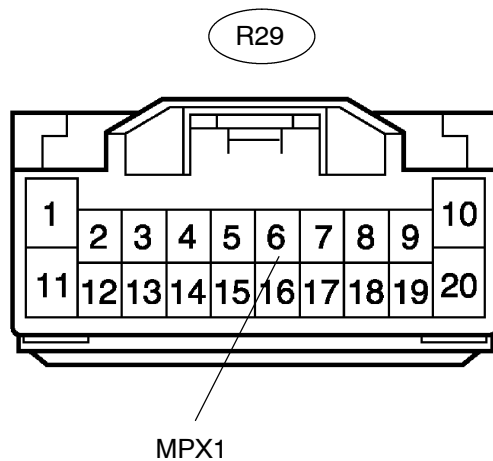

T

I20394


● Overhead J/B

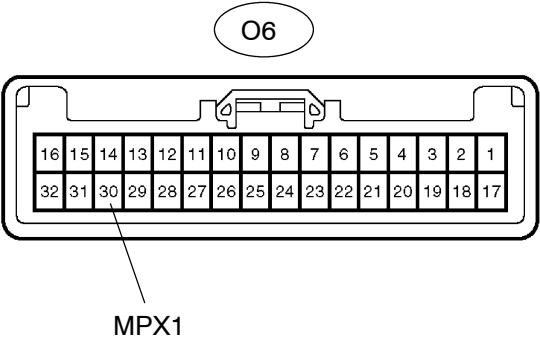

N

I20778


● Airbag Sensor Assembly

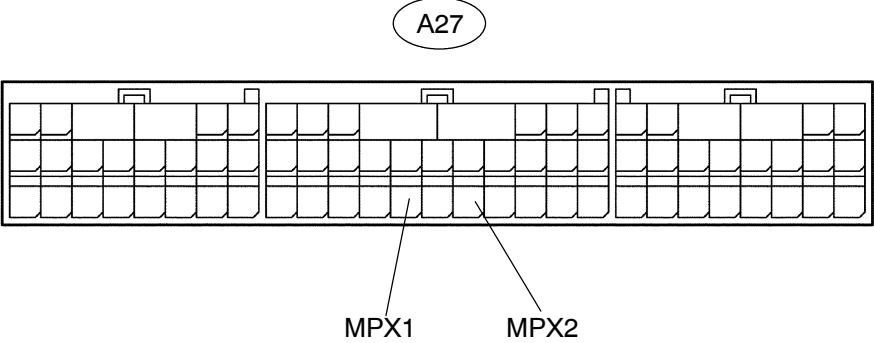

P

H16828


● Radio and Player

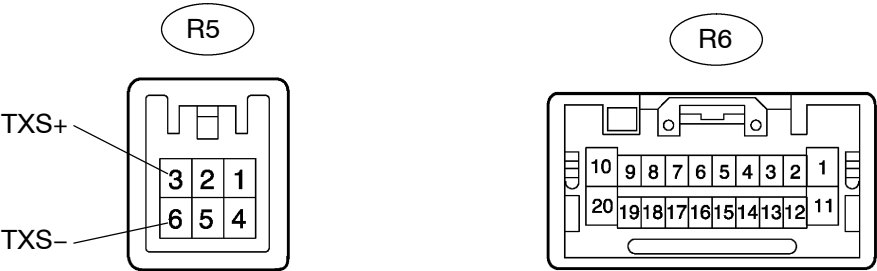

T


I20415

● Power Tilt and Power Telescopic

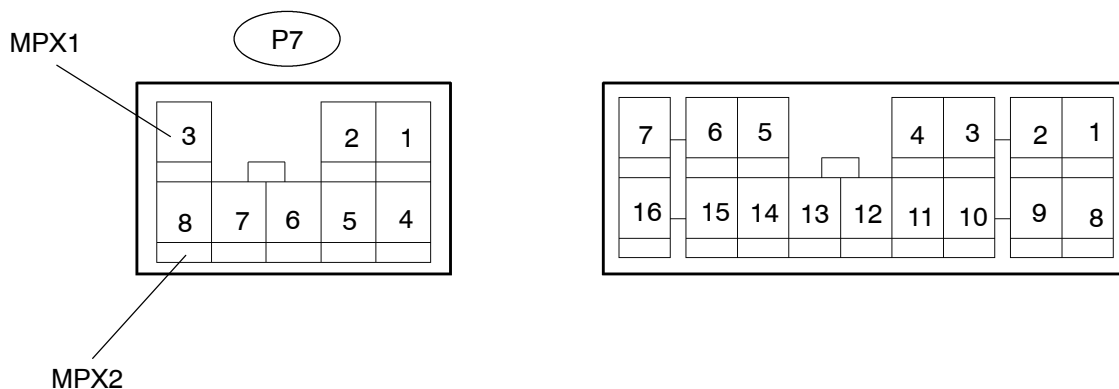


F05341

● Skid Control ECU

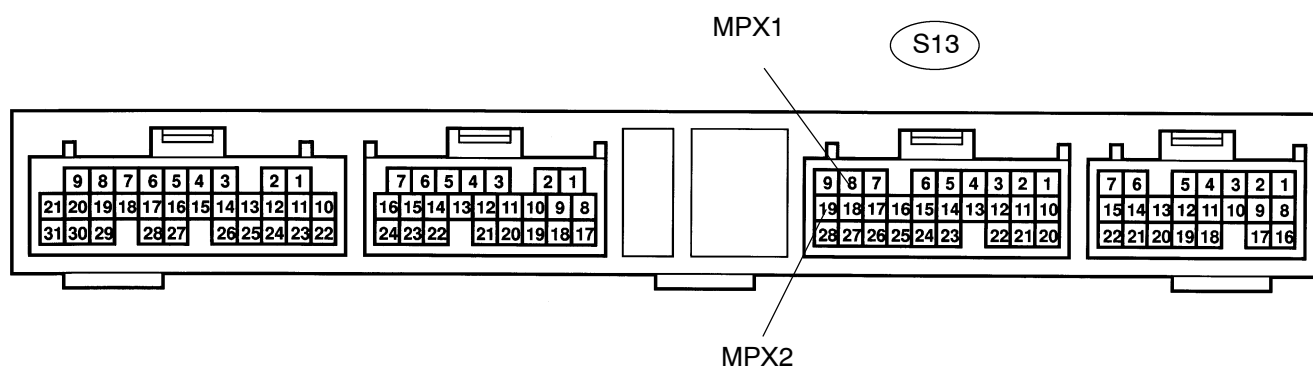

F02094


● A/C ECU

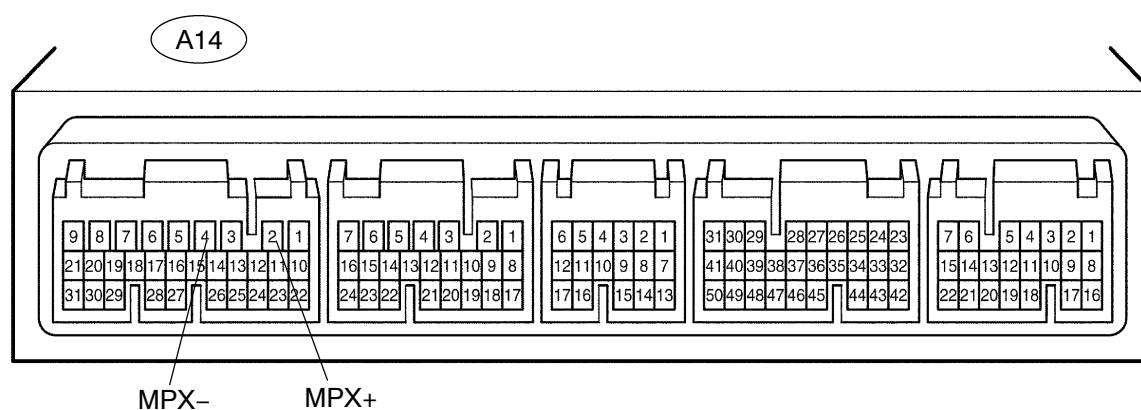

P

I20955

● Gateway ECU

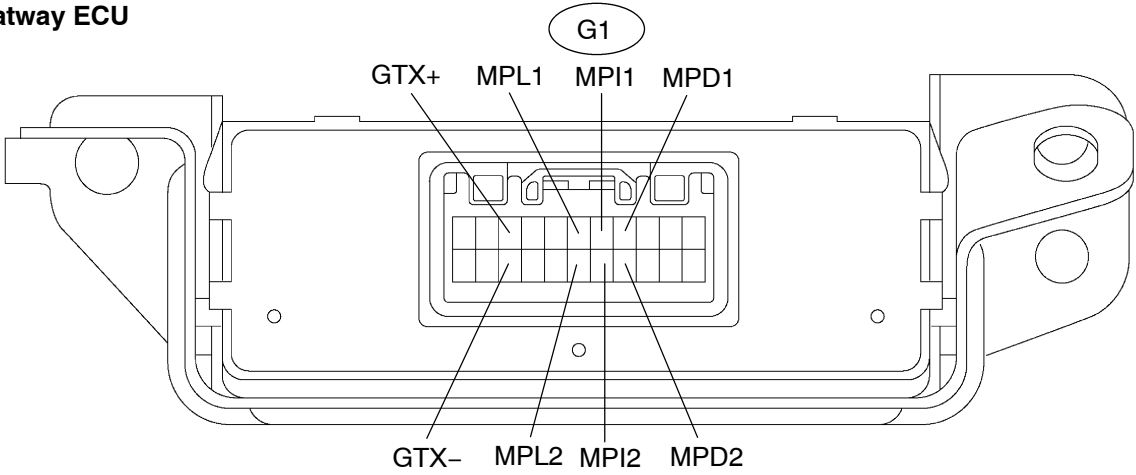

N

I20094