


VEHICLE LIFT AND SUPPORT LOCATIONS

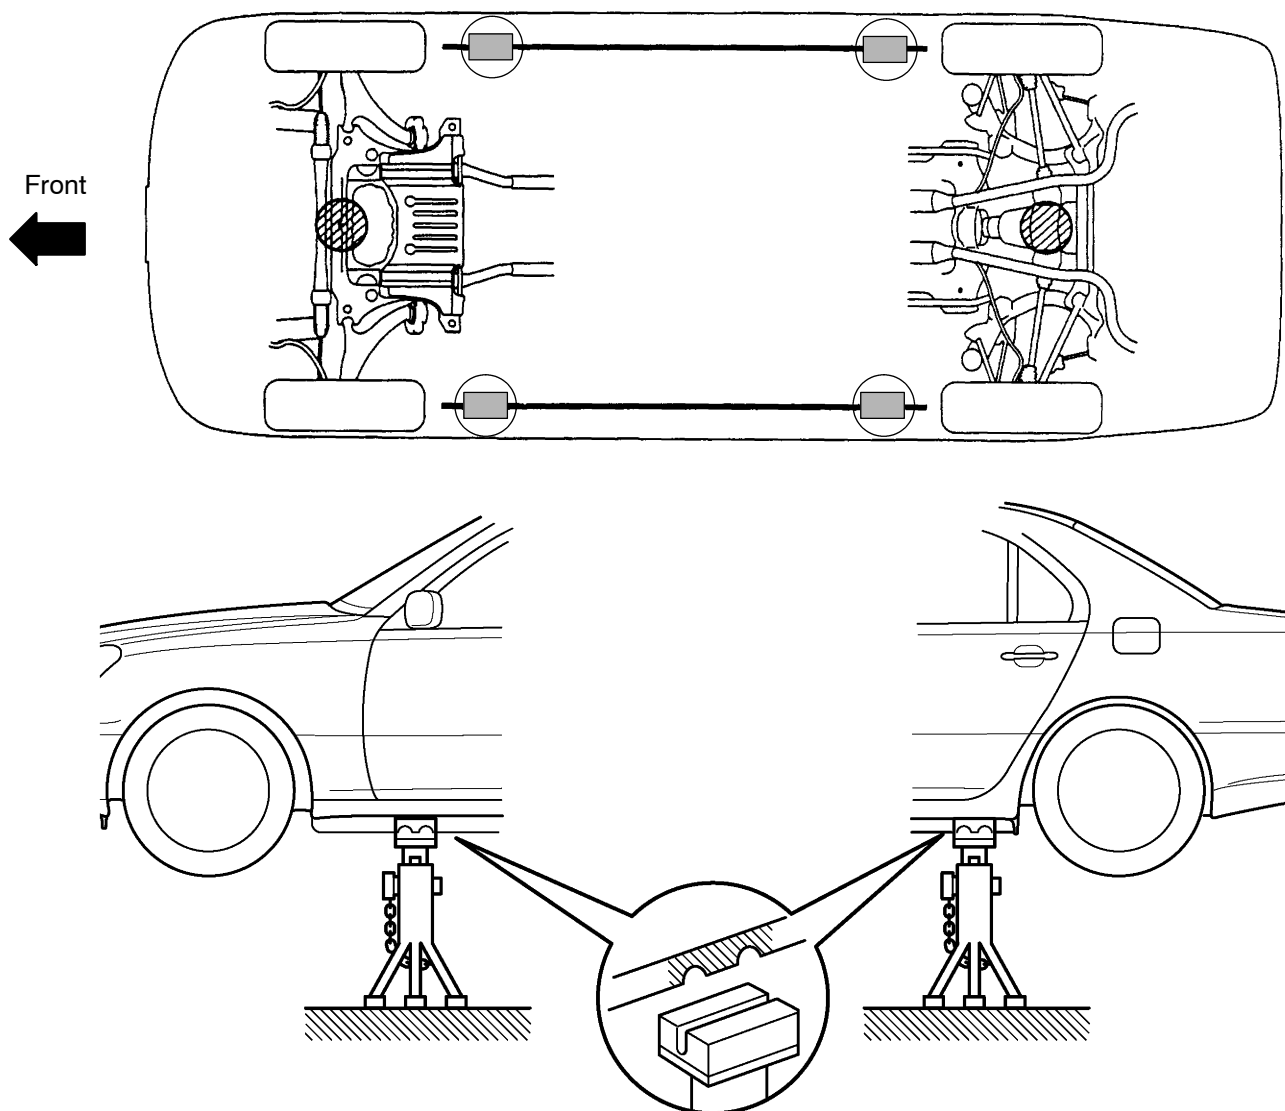

JACK POSITION


Front Front Crossmember
 Rear Rear differential carrier

CAUTION: Before jacking-up the front and rear, make sure the vehicle is not carrying and extra wight.

PANTOGRAPH JACK POSITION

SUPPORT POSITION

Safety stand and swing arm type lift

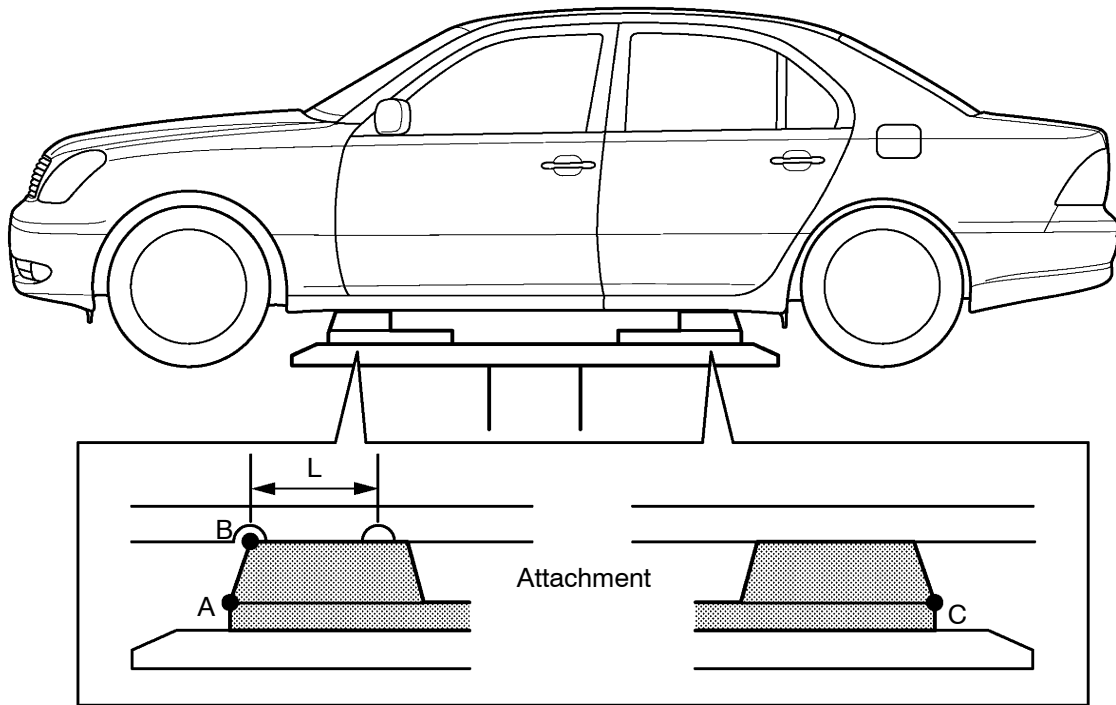Plate type lift:**HINT:**

Left and right set position
Front and rear set position

Place the vehicle over the center of the lift.

- Align the cushion gum ends of the plate with the attachment lower ends (A, C).
- Align the attachment upper end (B) with the front jack supporting point (L).

Attachment dimensions