


Position of Parts in Instrument Panel

[LHD]

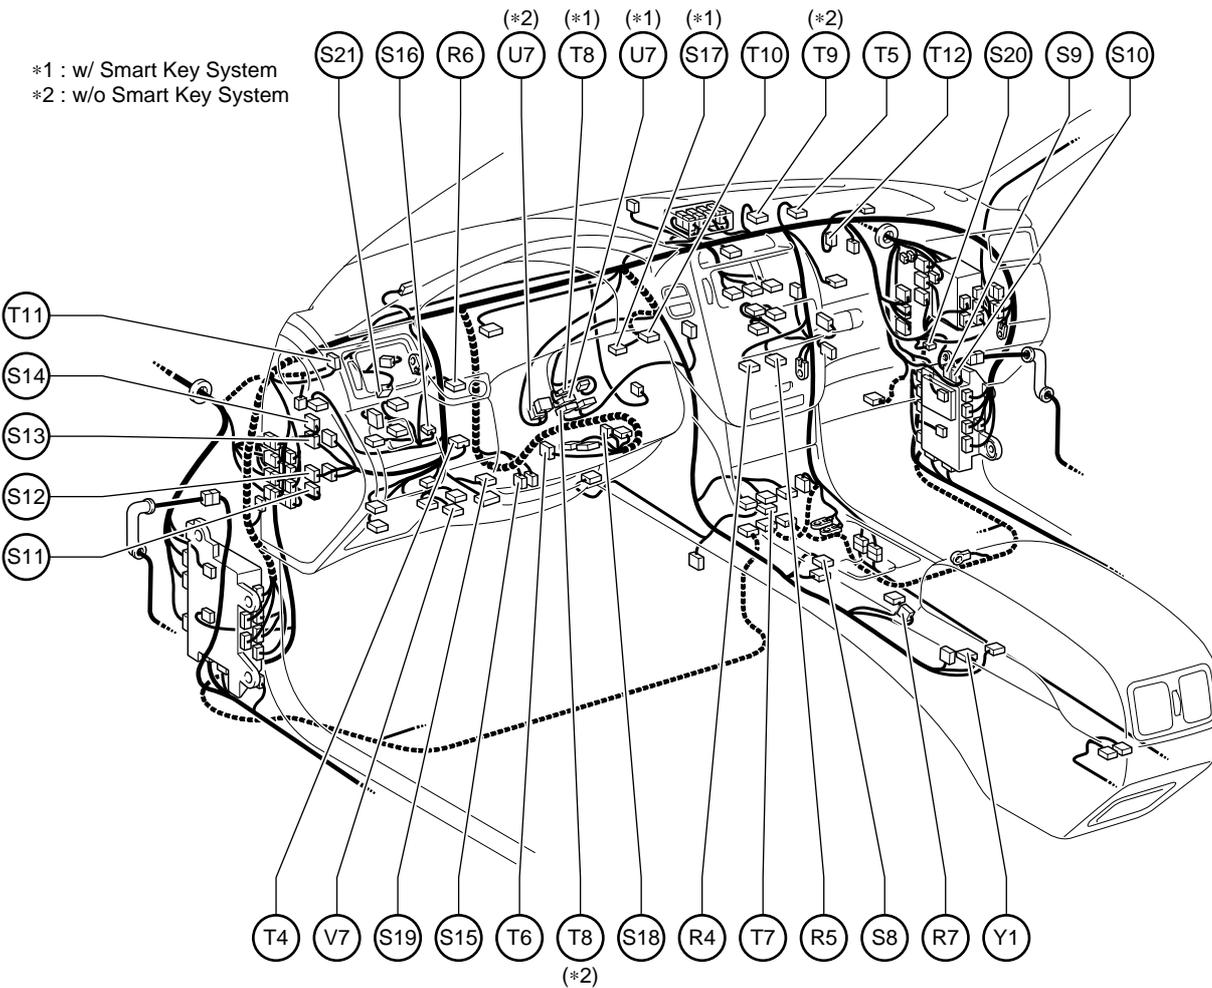

R 4 Radio and Player
 R 5 Radio and Player
 R 6 Rheostat
 R 7 Room Oscillator (Front)

S 8 Shift Lock Control ECU
 S 9 Short Connector (Height Control)
 S10 Short Connector (Height Control)
 S11 Skid Control ECU
 S12 Skid Control ECU
 S13 Skid Control ECU
 S14 Skid Control ECU
 S15 Smart Key System Cancel SW
 S16 Speed Warning Buzzer
 S17 Steering Lock ECU
 S18 Steering Sensor
 S19 Step Light LH
 S20 Step Light RH
 S21 Stop Light SW

T 4 Telescopic Motor and Position Sensor
 T 5 Theft Deterrent ECU
 T 6 Tilt Motor and Position Sensor
 T 7 Traction Control SW, Seat Heater SW LH,
 Seat Heater SW RH, Climate Control Seat SW LH,
 Climate Control Seat SW RH, Headlight Cleaner SW,
 Rear Sunshade SW, Rear Seat Reset SW
 T 8 Transponder Key Amplifier
 T 9 Transponder Key Computer
 T10 Trip SW
 T11 Tweeter Front LH
 T12 Tweeter Front RH

U 7 Unlock Warning SW

V 7 VSC Warning Buzzer

Y 1 Yaw Rate Sensor