


## Position of Parts in Engine Compartment

[RHD]

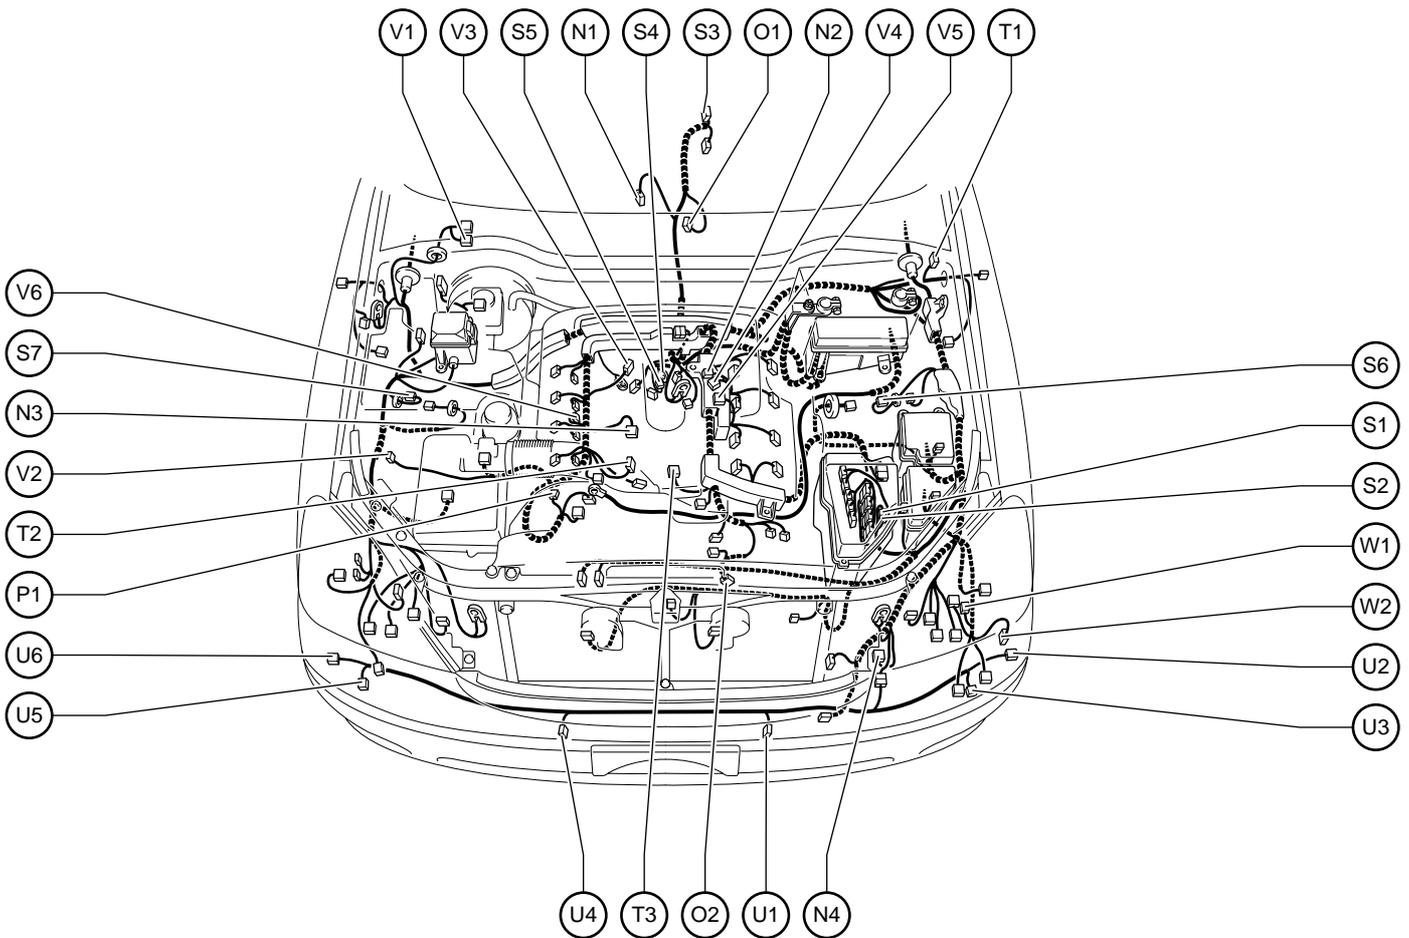

N 1 Neutral Start SW  
 N 2 Noise Filter (Ignition Left Bank)  
 N 3 Noise Filter (Ignition Right Bank)  
 N 4 Noise Filter (Rear Window Defogger)

O 1 O/D Direct Clutch Speed Sensor  
 O 2 Oil Pressure SW

P 1 PPS Solenoid

S 1 Short Connector  
 S 2 Short Connector  
 S 3 Speed Sensor  
 S 4 Starter  
 S 5 Starter  
 S 6 Suspension Control Actuator Front LH  
 S 7 Suspension Control Actuator Front RH

T 1 Theft Deterrent Horn  
 T 2 Throttle Control Motor  
 T 3 Throttle Position Sensor

U 1 Ultrasonic Sensor (Front Left Center)  
 U 2 Ultrasonic Sensor (Front Left Side)  
 U 3 Ultrasonic Sensor (Front Left)  
 U 4 Ultrasonic Sensor (Front Right Center)  
 U 5 Ultrasonic Sensor (Front Right Side)  
 U 6 Ultrasonic Sensor (Front Right)

V 1 Variable Motor  
 V 2 Variable Resistor  
 V 3 VSV (ACIS)  
 V 4 VSV (EVAP)  
 V 5 VVT Sensor LH  
 V 6 VVT Sensor RH

W 1 Washer Level Sensor  
 W 2 Washer Motor